


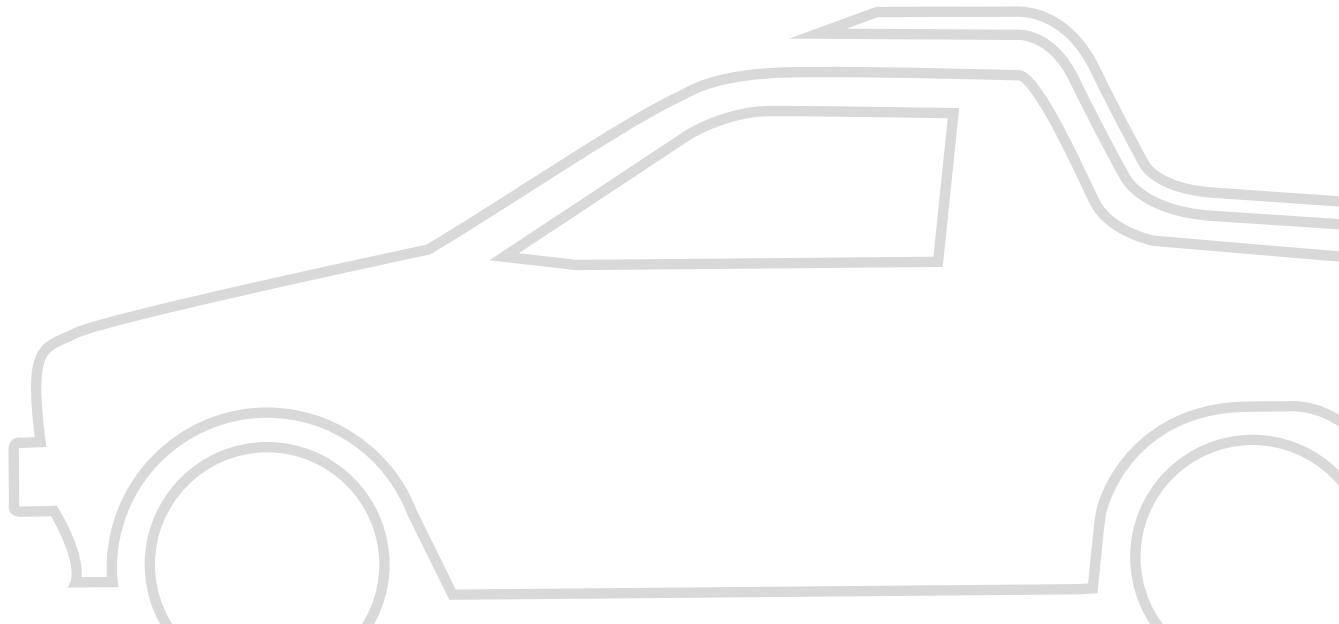

**TEAMMIGHTYBOY.COM**

# **1986 Parts Catalogue (Microfiche)**

## Suzuki MightyBoy SS40T



### HOW TO USE MICROFICHE PARTS CATALOGUE

The microfiche parts' catalogues we have newly prepared (hereinafter referred to as MICROCATALOGUES) have the same contents as those contained in the usual body-type parts catalogues.

If you have a microfiche reader (hereinafter referred to as READER), you can read the information contained on the microfiche film you have, but you will still be faced with the problem of how to find the wanted film CATALOGUES. The contents are arranged according to a certain rule, and if you learn this rule by heart, any frame of the microfiche film, containing the wanted information, can be found quickly, with the use of the index plate which is attached to the READER.

It is important that you always use the index plate when looking for certain frame in the microfiche film.

#### A. Composition of the MICROCATALOGUES

Now, you are going to learn the arranging "rule" of information in the MICROCATALOGUES, the "rule" determining which kinds of information are located at which parts of the microfiche films in the MICROCATALOGUES with the help of the drawing below.

					Date	File (Fiche) No.
<b>GSX1100EX</b>					JAN., 1981	Fiche 1 of SUZUKI MOTOR CO., LTD. MADE IN JAPAN
A-1	A-2	A-3	A-4	A-5		
B-1	B-2	B-3	B-4	B-5		
C	D	E	F	G		
H	I	J	K	L		
M	N	O	P	Q		
R	S	T	U	V		
"Forward" frame "How to use this catalogue" frame					A-16	
					A-16	
Address No. 57 (B-2) ILLUST TEXT PARTS NO. INDEX					A-16	
"ILLUST" mark "TEXT" mark "PARTS NO. INDEX" mark					A-16	
Title index (For E: page) Title Index (For special no. set)					A-16	
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22

#### Let us explain fig. 1

- Our MICROCATALOGUES consist of microfiche films each having 208 frames arranged in 13 horizontal rows (columns A through M) by 16 vertical columns (rows 1 through 16).
- The top space above the horizontal row A is the title space where the model code, catalogue date, and other information are printed.
- File Number  
Since each microfiche film contains only up to 416 pages of the book catalogues, two, three or more films are sometimes required to contain a complete catalogue. In these cases, each microfiche film comprising a certain MICROCATALOGUE is identified by a consecutive file number printed at the upper right hand corner.
- Date  
The date on which the MICROCATALOGUE is prepared is indicated.
- "How to use this catalogue"  
The frames identified by the address Nos. A-1, A-2 and A-3 contains the explanation on how to use the MICROCATALOGUE.
- Foreword  
The frames identified by the address Nos. A-4 and A-5 contain the same foreword as contained in the book-form catalogues.
- Illustr. Index  
All the frames in the leftmost vertical column except the top one (B-1 through M-1) contain illustration indexes.  
Each index contains all the illustrations belonging to the respective blocks such as the engine block, electric block, and frame block, in reduced forms extracted from the MICROCATALOGUE proper, with the relevant titles and address Nos. shown.
- Title index  
In the space below the array of reduced illustration pages in each of the illustration index frames, the titles and the related address Nos. of all the reduced illustration pages shown in the upper space of that frame are listed to serve as title indices.  
The same title indices are also listed in the lower space of each of the illustrated text frames.
- Parts No. Index  
All the frames in the rightmost vertical column (A-16 through M-16) are for parts No. indices. All the parts Nos. contained in the MICROCATALOGUE are arranged orderly together with the respective address Nos.

## 10) "For special market" catalogues

As in the current book-form catalogues, in addition to the basic E1 parts catalogues, "For special market" catalogues are prepared for special parts exported to respective markets, and the frames for "For special market" catalogues are arranged in the horizontal row immediately following the last row of the E1 catalogue. (For example, when the E1 catalogue ends with the frame address H-5, the "For special market" catalogue starts with the frame I-2.)

## 11) "THE END" mark

After arraying all the frames containing the catalogue information, a frame containing a "THE END" mark is placed to signify the end of the catalogue.

**B. Indexing system**

Along with information contained in microfiche films, the indexing system is a major factor. In our MICROCATALOGUES, the following three indexing systems are utilized:

**B-1 Indexing systems**

## 1) Illustr. index

The illust. indices are for finding parts of which the shapes are known.

**NOTE:** Sometimes, small parts are difficult to identify in the illustrations by their shapes. For these parts, you should look for some larger parts to which the parts in question are attached.

## 2) Title Index

This index system is for finding parts when the name of the principal parts to which they are related is known.

**NOTE:1** For the titles of the illustration pages, only the name of the most representative piece in the page is adopted (for example, the name of an assembly part).

This means that the names of many small parts cannot be found in the parts name index list. You must always look for a major part to which the wanted parts belong, when looking for these parts, using the part name index list.

**NOTE:2** When there are more titles than the title index space of one frame can accept in one catalogue, the titles are divided into several blocks (ex., engine block, frame block, etc.).

## 3) Parts No. Index

This index system is for finding parts when the part nos. are known.

**B-2 Indexing procedures**

Now, let us explain the procedure for finding wanted frames with the help of the three indexing systems.

## a. Finding wanted parts in the MICROCATALOGUE

a-1 How to find the part No.s. of parts of which the shapes are known.

## Procedure 1

Shift the fiche carrier until the I-1 square on the index plate is brought directly under the carrier needle.

## Procedure 2

Now, the illust. index printed in the frame E-1 is projected on to the screen. Try to find an illustration in which the wanted part is shown, among the array of reduced illustrations projected.

## Procedure 3

If you found an illustration in which the wanted part is shown, go on to Procedure 4. If the wanted part is not found in any of the illustrations in the frame E-1, shift the fiche carrier to E-2, and try to find an illustration in which the wanted part is shown among the arrayed reduced illustrations. If the wanted part is not found in any of the reduced illustrations, shift the fiche carrier to D-1, then to E-1 and so on to M-1.

## Procedure 4

Make a note of the address No. of the illustration in which the wanted part is shown.

## Procedure 5

Shift the fiche carrier until the square corresponding to the address No. found in the procedure 4 or 3 is brought under the carrier needle.

## Procedure 6

Check the address No. of the projected square.

## Procedure 7

Look for the wanted part in the illustration on the left half of the screen, and read the identification number of this part.

## Procedure 8

Look for the obtained identification number in the text page in the right half of the screen, and read the relevant information.

This is how one part is found with the help of the illust. index system.

a+2 To find another part proceed as follows:

- 1) If the shape of the next wanted part is known, again project the frame B-1 and go through the procedures 2 through 9.
- 2) If the name of the next wanted part is known, try to find the address No. in the title index list shown in the lower portion of the screen, and carry out the procedures 5. (Title index)
- 3) If the part No. of the next wanted part is known, project the A-18 frame and set the address No. corresponding to the known part No. Then, carry out the procedures 5. (Part No. index)

Make full use of the three index lists in each case as explained above.

NOTE: After reading the required information, you should switch off the READER and put the microfiche back in the file.

## PREFACE

When it becomes necessary to replace parts on SUZUKI VEHICLES, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI SS40T.

## INSTRUCTIONS FOR QUOTING THE CATALOGUE

## 1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

## 2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR.	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E.No.	: Engine number	OS	: Over size
F.No.	: Frame number	STD	: Standard
d	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length		
LH	: Left hand side		
RH	: Right hand side		

-SS40T-123456 : Up to F.No.SS40T-123456    -F3A-500001 : Up to E.No.F3A-500001

SS40T-123456- : From F.No.SS40T-123456    F3A-500001- : From E.No.F3A-500001

12 x 34 x 5.6 ..... Figures in the description column  
show the dimensions of parts.

ID OD T(or W,L)

To 12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with the new ones.

Fro 12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

## 3. INNER PARTS OF ASSEMBLY

Parts number that have a period (.) mark in front of the part description on a text page are separately serviced parts of the assembly.

## 4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions where changes in parts occur, including interchangeable modifications between new parts and old ones.

## 5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.  
When assembling, use "SUZUKI SERVICE MANUAL".

## 6. SPECIFICATION CODE

This catalogue contains the parts for the -41 designed for the following spec.;  
spec. code : E24.

## 7. SERIAL FRAME NUMBER

SS40T-200001-

## Color Chart

Color No.	Color description	Color No.	Color description
019	Black	60K	019+064 Comb.
064	Pure White	71M	59S+42A Comb.
09E	Handsome Gray Metallic	71S	17A+09E Comb.
10C	Off Black Non-Gloss	71T	15P+09E Comb.
15P	St. Germain Red	72U	19P+09E Comb.
16B	Smart Silver (Tape)	73V	21F+09E Comb.
17A	White	74M	18J+09E Comb.
18J	Crystal Silver Metallic	74V	22Y+09E Comb.
19P	Creamy Yellow	75Z	23F+09E Comb.
21F	Universal Black	76A	23G+09E Comb.
22Y	Spanish Red Metallic	75B	23H+09E Comb.
23D	Pale Gray	75C	064+168 Comb.
23E	Satin Gray		
25P	Abrii Blue Metallic		
23B	Vaccetta Beige Metallic		
23W	Blue Pearl Metallic		
26I	Black Non-Gloss		
26I	Black Semi-Gloss		
26I	Black		
26I	Black		
42A	Black		
42P	Black		
52V	Black Mid		
59S	Red & Black		
60A	Black		
603	Pale Gray		
606	Pale Gray		
609	Pale Gray		

MILLIMETER → INCH CONVERSION CHART

	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.495	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.889	1.928
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.322
60	2.362	2.402	2.441	2.480	2.520	2.559	2.599	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.859	3.898


How to read

	0	1	2	3	4
00	---	---	---	---	---
10	---	---	---	---	---
20	---	---	---	0.906	---
30	---	---	---	---	---

23 millimeters equal 0.906 inch

Contents are subject to change without notice or obligation.

PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.
10000											
11100-78022	B-2	11710-78401	B-6	12891-73001	B-9	13319-54100	B-12	13516-15210	B-12	15819-81000	C-5
11110-84000	B-3	11710-81000	B-7	12821-78100	B-10	13284-84000	B-14	15830-82000	B-14	15830-82000	C-5
11112-72001	B-3	11730-78001	B-6	12841-73002	B-9	13324-84000	B-12	13521-78100	B-12	15860-78361	C-5
11115-82000-001	B-3	11731-78030	B-7	12848-73010	B-C	13330-84300	B-14	13521-78100	B-14	15862-78600	C-5
11141-72100	B-2	11741-78001	B-6	12860-78102	B-C	13330-84300	B-13	13531-78420	B-13	15869-78100	C-5
11161-78102	B-3	11851-78111	B-7	12932-82000	B-9	13370-78110	B-14	13596-13900	B-12	15870-78000	C-5
11169-73002	B-2	11910-78101	B-6	12933-72000	B-9	13371-84300	B-15	13601-04226	B-16	15881-81001	C-5
11170-78102	B-3	11910-78120	B-7	13110-84070	B-9	13371-84300	B-13	13601-04226	B-12	15891-81000	C-5
		11921-78102	B-6	13110-84170	B-11	13371-84300	B-13	13685-78100	B-14	1710-78401	C-5
				13119-78111	B-2	13371-84300	B-15	16131-78100	B-15	1710-78401	C-5
11180-78101	B-3	11921-78121	B-7	13125-70111	B-11	13372-84300	B-15	13599-77000	B-13	16151-78100	C-5
11189-78100	B-2	11931-81000	B-6	13125-70111	B-11	13373-39110	B-12	13700-84300	B-15	16152-73100	C-4
11191-84011	B-3	11962-83000	C-13	13200-84120	C-12	13374-84300	B-14	13700-84300	C-2	16153-78100	C-6
11200-78107	B-4	12111-81052-080	B-8	13200-84120	B-11	13374-84300	B-13	13776-84000	C-2	16161-78103	C-6
				13200-84120	B-12	13375-84300	B-13	13780-78100	C-2	16160-73001	B-6
11219-78101	B-4	12111-81052-025	B-8	13210-84160	B-11	13376-65010	B-15	13830-84300	C-2	16520-78101	B-3
11241-72003	B-6	12111-81052-050	B-8	13210-84160	B-14	13376-65010	B-12	13830-84300	C-2	16910-82000	B-4
11310-78100	B-4	12140-73010	B-8	13248-78100	B-13	13378-73000	B-14	13578-78100	C-2	16920-78402	B-3
11311-78121	B-4	12140-73010-025	B-8	13249-78100	B-15	13378-73000	B-12	13579-81050	C-2	17111-84000	C-8
11329-73009	B-4	12140-73010-050	B-8	13249-78100	B-13	13378-73000	B-1	14111-78350	C-4	17111-84010	C-9
11331-78110	B-4	12151-78110	B-8	13250-84100	B-15	13378-84100	B-12	14141-78100	B-2	17120-84000	C-0
11341-73010	B-8	12140-73001	B-8	13291-78100	B-12	13378-84100	B-14	14172-84001	C-4	17120-84010	C-9
11349-73002	B-2	12187-81050-080	B-8	13294-78100	B-14	13378-84110	B-12	14183-78100	C-4	17400-78201	C-7
11280-78102	B-10	12181-81050-025	B-8	13294-78110	B-12	13381-84020	B-12	14190-78363	C-4	17431-73001	C-7
		12181-81050-050	B-8	13294-78110	B-14	13381-84020	B-12	14190-78363	C-4	17431-73001	C-7
11391-73003	B-10	12221-81051	B-8	13255-84300	B-13	13381-84300	B-14	14243-78000	C-4	17511-78100	C-7
11396-79000	B-10	12300-78836	B-9	13260-84300	B-12	13397-81000	B-13	14281-78010	C-4	17521-78000	C-7
11322-73010	B-2	12300-78830-012	B-8	13267-78120	B-14	13397-81000	B-12	14282-78010	C-4	17551-78101	C-10
11400-81831	B-2	12300-81810-040	B-8	13267-78120	B-13	13398-78110	B-14	14283-78100	C-4	17559-73000	B-2
				13267-78120	B-15	13398-78110	B-12	14288-78301	C-4	17559-73000	C-10
11462-73004	B-10	12300-81810-025	B-8	13268-81000	B-13	13415-81030	B-14	14301-78363	C-4	17561-74100	C-10
11483-73001	B-10	12301-81810-050	B-8	13268-81000	B-13	13415-81030	B-15	14301-77140	C-5	17569-78101	B-2
11484-73000	B-10	12611-78100	B-8	13271-73011	B-15	13432-47090	B-15	15218-75000	C-1	17700-84010	C-10
11485-73000	B-10	12620-78102	B-8	13271-73012	B-15	13432-47090	B-15	15319-73001	B-2	17670-82000	C-10
11510-78100	B-5	12631-84000	B-8	13278-45010	B-12	13432-72110	B-13	15816-78000	C-5	17680-84000	C-8
11529-79110	B-2	12655-72001	B-8	13281-83000	B-14	13461-79110	B-15	15411-84300	C-5	17700-84010	C-9
11610-78801	B-6	12710-84000	B-9	13281-83000	B-13	13461-79110	B-14	15410-81010	C-5	17720-84100	C-9
11620-78001	B-7	12749-75001	B-9	13294-73010	B-12	13464-37010	B-17	15816-78000	C-5	17740-84100	C-8
		12761-84000	B-10	13294-73010	B-14	13464-37010	B-14	15819-71101	C-7	17766-84010	C-9

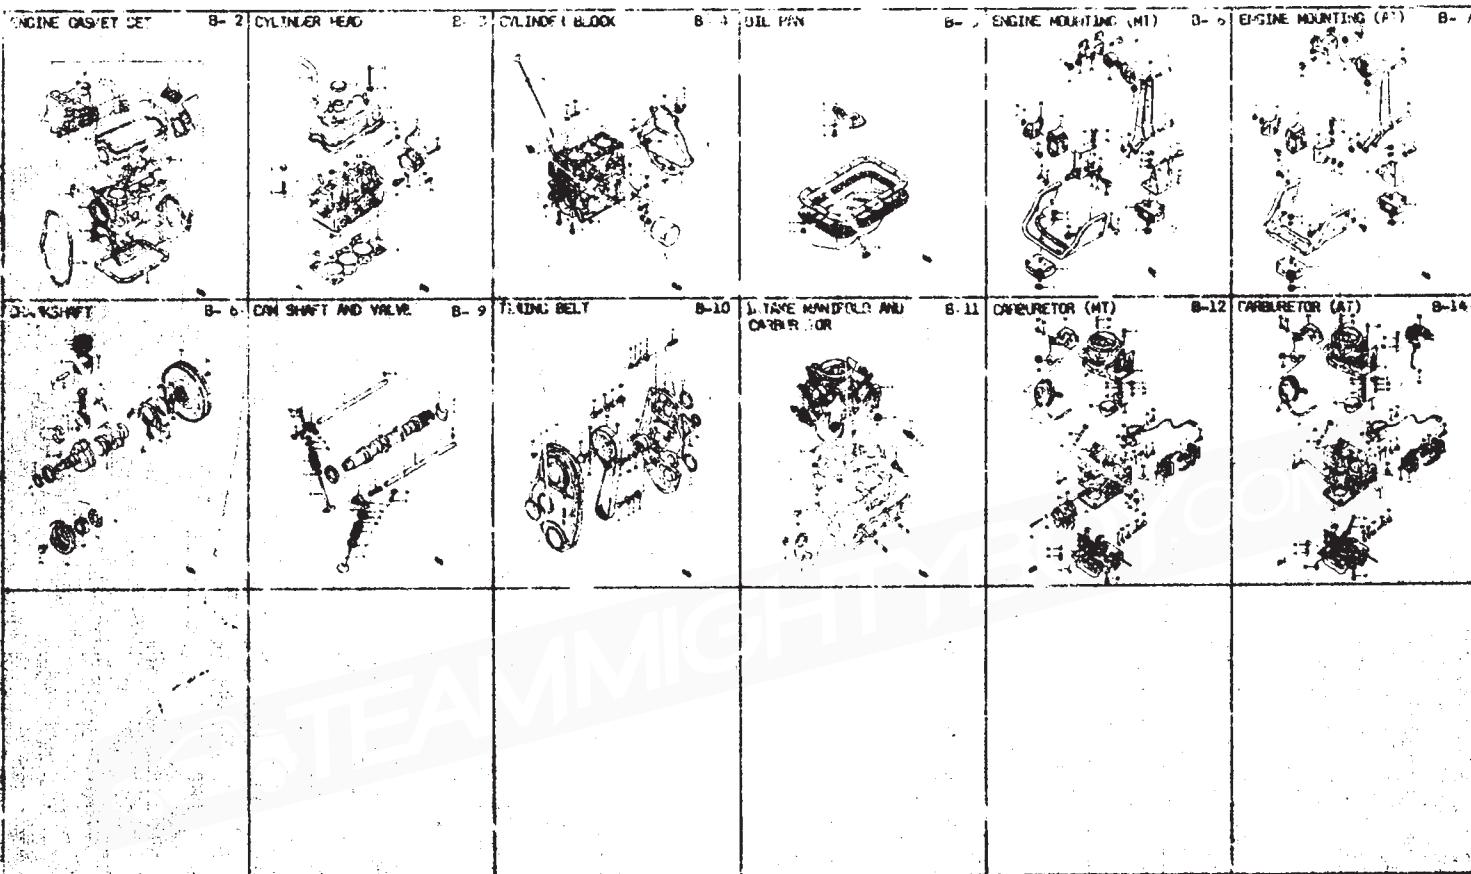

AIR CLEANER.....	C-2	CRANKSHAFT.....	B-8	GEAR SHIFT CONTROL.....	I-3	OIL PUMP AND OIL PAN (AT).....	D-14	WATER JUG-C-10
AT ASSY (AT).....	D-8	CYLINDER BLOCK.....	B-4	GEAR SHIFT FORK (MT).....	C-6	RADIATOR.....	C-8	WATER PUMP-C-7
AT GASKET SET (AT).....	D-9	CYLINDER HEAD.....	B-3	INTAKE MANIFOLD.....	B-11	SELECTOR LEVER (AT).....	E-3	
PARKING BRAKE (AT).....	D-13	DIFFERENTIAL GEAR-E-2	LABEL.....	13 TIMING BELT.....		B-10		
CAM SHAFT AND VALVE.....	B-5	EMISSION CONTROL-C-11	MUFFLER.....	C-6	TRANSMISSION (AT).....	D-11		
CARBURETOR.....	B-12	ENGINE GASKET SET-B-2	OIL HOSE (AT).....	C-8	TRANSMISSION (MT).....	D-3		
ELectric (AT).....	D-2	ENGINE MOUNTING-B-5	OIL PAN.....	D-5	TRANSMISSION CASE (AT).....	D-10		
GEARBOX CABLE.....	C-3	FUEL PUMP.....	C-5	OIL PUMP.....	C-6	TRANSMISSION CASE (MT).....	D-8	

FRONT BODY PANEL.....	I-2	FRONT SEAT.....	I-2	LOCK SET AND RADIO.....	F-13	REAR SUSPENSION.....	G-7	STEERING WHEEL.....	G-7
FRONT MASTER CYLINDER-H-2		FRONT SUSPENSION-C-2		PARKING BRAKE.....	H-6	REAR WHEEL BRAKE.....	H-3	STRIPES, APE AND MUFLAP-I-4	
WHEEL PIPING.....	H-3	FRONT DOOR GLASS-J-8	J-8	REAR WHEEL AND TIRE-O-1	SWITCH.....			F-12	
COOLANT THERMOMETER.....	I-1	FRONT DOOR LOCK.....	I-9	FRONT WHEEL-PEDAL.....	G-10				
COOLANT THERM. SENS.	I-1	FRONT DOOR PANEL.....	I-7	FUEL TANK.....	I-10	REAR BODY PANEL.....	I-8	VENTILATOR.....	I-12
COOLANT THERM. SENS.	I-1	FRONT FENDER.....	I-9	GENERATOR.....	F-3	REAR BUMPER.....	I-9	SPEEDOMETER.....	I-15
FRONT WINDSHIELD.....	J-2	FRONT FENDER.....	I-9	INSTRUMENT PANEL.....	I-11	REAR GATE LOCK.....	I-10	SWINGING ROTOR.....	I-14
FRONT WINDSHIELD.....	J-2	FRONT FENDER.....	I-9	INSTRUMENT PANEL.....	I-11	REAR GATE LOCK.....	I-10	WIPER.....	I-14
FRONT WINDSHIELD.....	J-2	FRONT FENDER.....	I-9	INTERIOR TRIM.....	F-8	REAR LAMP.....	F-9	WIRING HARNESS.....	F-10
FRONT WINDSHIELD.....	J-2	FRONT FENDER.....	I-9	INTERIOR TRIM.....	F-8	REAR LAMP.....	F-9	STEERING LOCK.....	G-8

FIG. 1

E = 2

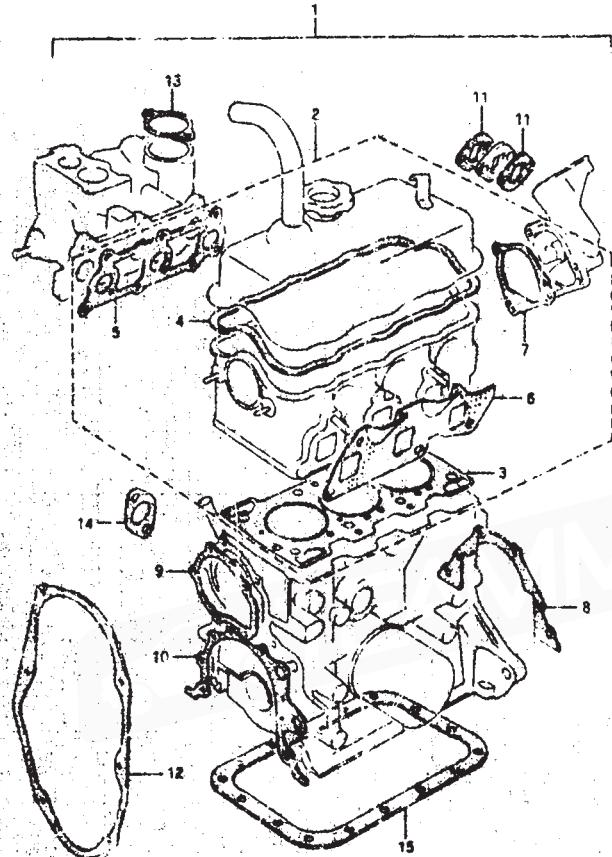



FIG. 1 (8-2) ENGINE GASKET SET

NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11400-14E31	GASKET SET, engine	1	
2	11100-78622	GASKET SET, cylinder head	1	
3	11141-79100	GASKET, cylinder head	1	
4	11189-78100	GASKET, cylinder head cover	1	
5	13119-78111	GASKET, intake manifold	1	
6	1-140-78100	GASKET, exhaust manifold	1	
7	11169-73002	GASKET, distributor case	1	
8	11349-73002	GASKET, oil seal housing	1	
9	16119-73641	GASKET, oil pump case	1	
10	17481-73001	GASKET, water pump	1	
11	15319-73001	GASKET, fuel pump	2	
12	11299-73010	GASKET, timing belt cover	1	
13	17569-78101	GASKET, water thermostat cap	1	
14	17569-73000	GASKET, water inlet pipe	1	
15	11529-79110	GASKET, oil pan	1	

卷之三

WATER CLEANER	ONE	CHAINSHIFTER	ONE	CAR SHIFT CONTROL	E-3	OIL PUMP AND CYL. PAN (AT)	D-14	BRAKE HOSE-C-10
AT BODY TUBE	ONE	CH. HOPPER BLOCK	ONE	GEAR SHIFT PORK (MT)	D-6	RADIATOR	L-6	WATER PUMP-C-7
AT BAGET INT. UNIT	ONE	CYL. HEAD	ONE	INTAKE MANIFOLD	E-12	SELECTOR LEVER (AT)	E-3	
AT. HOUSING BOWL	AT. HOUSING	DIFFERENTIAL BEARING	B-2	WHEEL	C-13	TRANS. BELT	D-10	
TRANSMISSION VALVE	ONE	EMISSION CONTROL	ONE	WHEEL	C-13	TRANSMISSION LASH	D-14	
TRANSMISSION VALVE	ONE	FUEL INJECTOR SET	B-2	WHEEL	C-13	TRANSMISSION GEAR	D-3	
TRANSMISSION VALVE	ONE	WIRE HARNESS	ONE	WHEEL	C-13	TRANSMISSION BASE (AT)	D-16	
TRANSMISSION VALVE	ONE	WIRE HARNESS	ONE	WHEEL	C-13	TRANSMISSION CASE (AT)	D-9	
TRANSMISSION VALVE	ONE	WIRE HARNESS	ONE	WHEEL	C-13	TRANSMISSION CASE (MT)	D-9	

FIG. 2 (B-3) CYLINDER HEAD

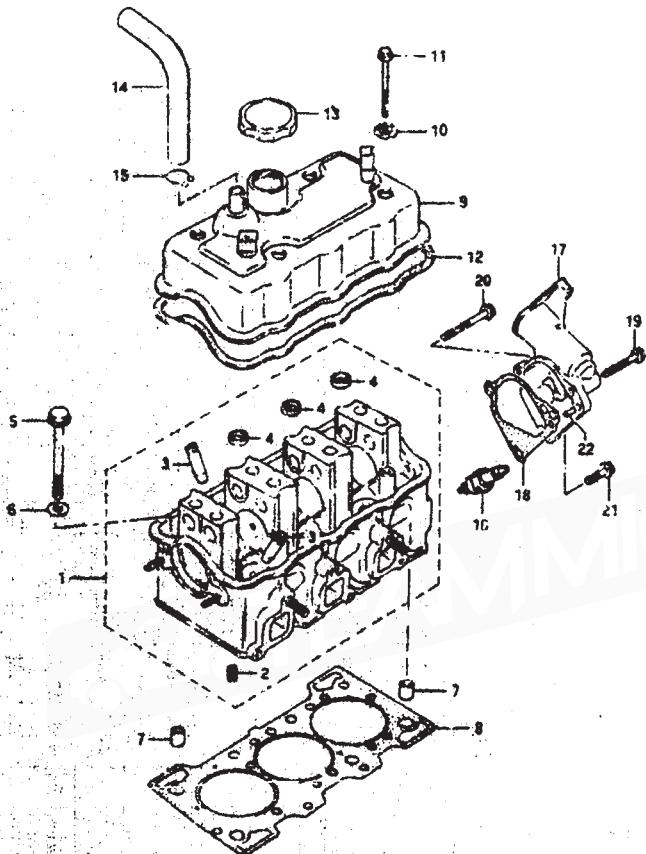

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11110-94001	HEAD, cylinder	1	
2	11112-73001	PLUG, oil drain	1	
3	11113-82000-001	GUIDE, valve	6	
4	05141-20002	PLUG	4	
5	09103-10710	BOLT (10x87)	8	
6	09103-10029	WASHER (10.3x22x2.3)	8	
7	09206-13001	PIN	2	
8	11111-73100	GASKET, cylinder head	1	
9	11110-78102	COVER, cylinder head	1	
10	11100-78101	WASHER	4	
11	01537-06603	BOLT	4	
12	11109-78100	GASKET, cylinder head cover	1	
13	16920-78102	CAP, oil filler	1	
14	11191-84011	HOSE, breather	1	
15	09403-11501	CLIP	1	
15-1	09402-00123	PLUG, spark (ND,W16X4-U)	3	
15-2	09402-00131	PLUG, spark (NGK, RP2ES)	3	
17	11161-78102	CASE, distributor	1	
18	11109-73002	GASKET, distributor case	1	
19	09103-08154	BOLT	1	
20	09103-08155	BOLT	1	
21	01517-08253	BOLT	1	
22	04221-06129	PIN	2	

SIGHT 20A

GEAR SHIFT CONTROL	E-5	OIL PUMP AND OIL PAN (CAT)	D-14	WATER HOSE-C-10
GEAR SHIFT FORK (MT)	B-5	RADIATOR	C-8	WATER FLOW-D-7
INTAKE MANIFOLD	B-14	SELECTOR LEVER (AT)	E-3	
INTAKE MANIFOLD BELT	C-13	COUPPLING BELT	B-10	
TRANSMISSION (AT)	D-1	TRANSMISSION (AT)	D-11	
TRANSMISSION LINE	D-3	TRANSMISSION LINE	D-3	
TRANSMISSION CASE (AT)	D-10	TRANSMISSION CASE (AT)	D-10	
TRANSMISSION LINE (AT)	D-3	TRANSMISSION LINE (AT)	D-3	

SIGHT 20B

MANUAL GEAR	C-2	CRANKSHAFT	D-8	GEAR SHIFT CONTROL	E-5	OIL PUMP AND OIL PAN (CAT)	D-14	WATER HOSE-C-10
MANUAL GEAR	D-8	CYLINDER BLOCK	D-4	GEAR SHIFT FORK (MT)	B-5	RADIATOR	C-8	WATER FLOW-D-7
MANUAL GEAR	D-11	CYLINDER HEAD	D-3	INTAKE MANIFOLD	B-14	SELECTOR LEVER (AT)	E-3	
MANUAL GEAR	D-13	SUPERCHARGER GEAR	E-2	INTAKE MANIFOLD BELT	C-13	COUPPLING BELT	B-10	
MANUAL GEAR	D-14	SUPERCHARGER GEAR	E-2	TRANSMISSION (AT)	D-1	TRANSMISSION (AT)	D-11	
MANUAL GEAR	D-15	VALVE	D-2	TRANSMISSION LINE	D-3	TRANSMISSION LINE	D-3	
MANUAL GEAR	D-16	VALVE	D-2	TRANSMISSION CASE (AT)	D-10	TRANSMISSION CASE (AT)	D-10	
MANUAL GEAR	D-17	VALVE	D-2	TRANSMISSION LINE (AT)	D-3	TRANSMISSION LINE (AT)	D-3	
MANUAL GEAR	D-18	VALVE	D-2					

FIG.3

B - 4

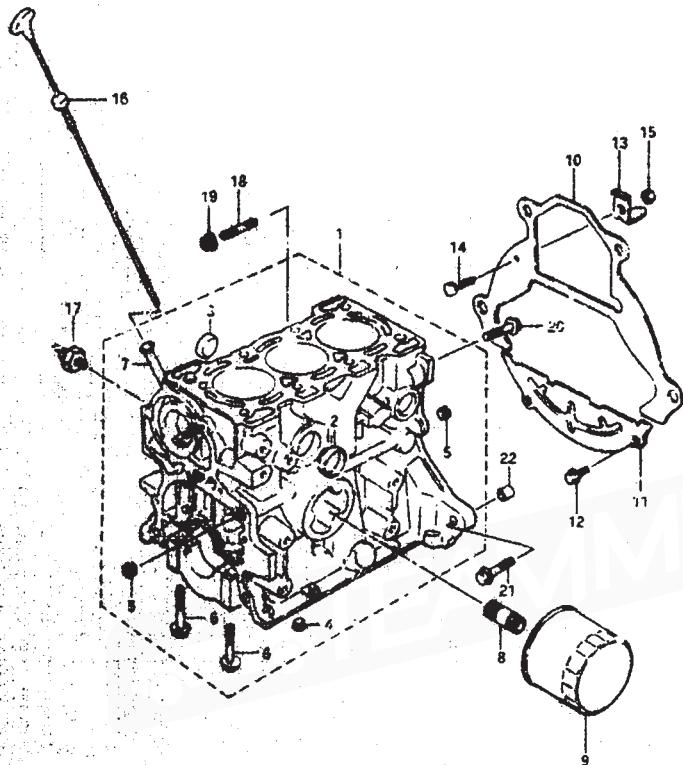


FIG.3 (B-4) CYLINDER BLOCK

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11 00-78107	BLOCK ASSY, cylinder	1	
2	09 241-30002	PLUG (OD:30)	1	
3	09 241-20022	PLUG (OD:20)	1	
4	09 246-06001	PLUG	1	
5	09 246-06002	PLUG	2	
6	09 103-10022	BOLT (10X54)	8	
7	11 219-78101	GUIDE, oil level gauge	1	
8	11 241-73003	STAND, oil filter	1	
9	16 510-73001	FILTER, oil	1	
10-1	11 310-78100	PLATE, clutch housing upper	1	MT
10-2	11 311-78121	PLATE, clutch housing upper	1	AT
11	11 320-73000	PLATE, clutch housing lower	1	
12	01 537-06103	BOLT	2	
13	11 321-78120	PLATE, spark timing	1	AT
14-1	01 504-06208	BOLT	1	MT
14-2	01 517-06106	BOLT	1	AT
15	08 310-11066	NUT	1	
16	16 010-02000	GAUGE, oil level	1	
17	37 020-82001	SWITCH ASSY, oil pressure	1	
18	01 421-10403	STUD BOLT	1	
19	08 316-16103	NUT	1	
20	01 537-10403	BOLT	1	
21	01 537-10453	BOLT	2	
22	09 206-13011	PIN	2	

55107 E2A

55107 E2A



AIR CLEANER.....	C-2	CRANKSHAFT.....	B-8	GEAR SHIFT CONTROL.....	E-5	OIL PUMP AND OIL PAN (AT).....	D-14	WATER HOSE-C-10
AT SHIFTER SET (AT).....	D-8	CYLINDER BLOCK.....	B-4	GEAR SHIFT PORK (W/T).....	D-6	RADIATOR.....	C-8	WATER PUMP-C-7
AT SWING ARM SHAFT ASSEMBLY.....	D-9	CYLINDER HEAD.....	B-3	INTAKE MANIFOLD.....	B-11	SELECTOR LEVER (AT).....	E-5	
AT SWING ARM SPINDLE AND WHEEL.....	D-10	DIFFERENTIAL GEAR.....	C-12	LABEL.....	C-13	TIMING BELT.....	C-10	
AT SWING ARM SPINDLE AND WHEEL.....	D-11	DRIVESHAFT CONTROL.....	C-11	MUFFLER.....	C-8	TRANSMISSION (AT).....	D-11	
AT SWING ARM SPINDLE AND WHEEL.....	D-12	DRIVE CHAIN SET.....	B-4	OIL HOSE (AT).....	B-15	TRANSMISSION (INT).....	D-3	
AT SWING ARM SPINDLE AND WHEEL.....	D-13	DRIVE CHAIN SET.....	B-4	OIL HOSE (INT).....	B-15	TRANSMISSION CASE (AT).....	D-10	
AT SWING ARM SPINDLE AND WHEEL.....	D-14	DRIVE CHAIN SET.....	B-4	OIL PUMP.....	C-6	TRANSMISSION CASE (INT).....	D-3	
AT SWING ARM SPINDLE AND WHEEL.....	D-15	FUEL PIPE.....	C-10					

FIG. 4

8 - 5

Fig. 4 (S-5) Oil Pan

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	11310-78100	IRON, oil	1
2	11329-79110	GASKET, oil pan	1
3	09100-06119	BOLT	16
4	09162-06005	LOCK WASHER	16
5	09247-12101	PLUG	1
6	09168-12007	GASKET	1
7	16920-78101	STRAINER, oil pump	1
8	09280-16005	O RING	1
9	01107-06163	BOLT	2
10	04321-21003	LOCK WASHER	2

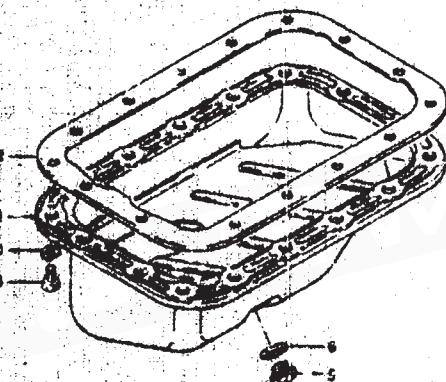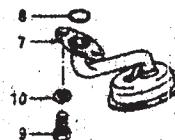

START 120

FR. AIR CLEANER	1-2	CHARGING CHART	8-4	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	DY-16	WATER NOSE-C-10
FR. AC/COOL. UNIT	1-3	CHLORINE BLOCK	B-6	GEAR SHIFT FORK (MT)	D-6	RADIATOR	C-8	WATER PUMP-C-7
FR. BRAKE SYSTEM	1-4	CLUTCH BLOKES	B-5	INTAKE PANT FOLD	C-11	SELECTOR LEVER (AT)	C-5	
FR. BRAKE SYSTEM	1-5	CLUTCH PEDAL	B-6	LAGE	C-13	TIMING BELT	BH-2	
FR. BRAKE SYSTEM	1-6	CO. ELEMENTAL JEWEL	E-2	MAN FLOOR	C-4	TRANSMISSION (AT)	C-11	
FR. BRAKE SYSTEM	1-7	DISPENSER CONTROL	H-11	MAN FLOOR	C-5	TRANSMISSION (MT)	C-8	
FR. BRAKE SYSTEM	1-8	DRIVE SHAFT SET	H-2	OIL HOSE (AT)	B-15	TRANSMISSION (MT)	C-8	
FR. BRAKE SYSTEM	1-9	ENGINE MOUNTING	B-6	OIL PUMP	A-9	TRANSFER SPOOL (AT)	C-17	
FR. BRAKE SYSTEM	1-10	FUEL TANK	B-5	OIL PUMP	C-6	TRANSFER SPOOL (MT)	C-17	

FIG.3

B - 6

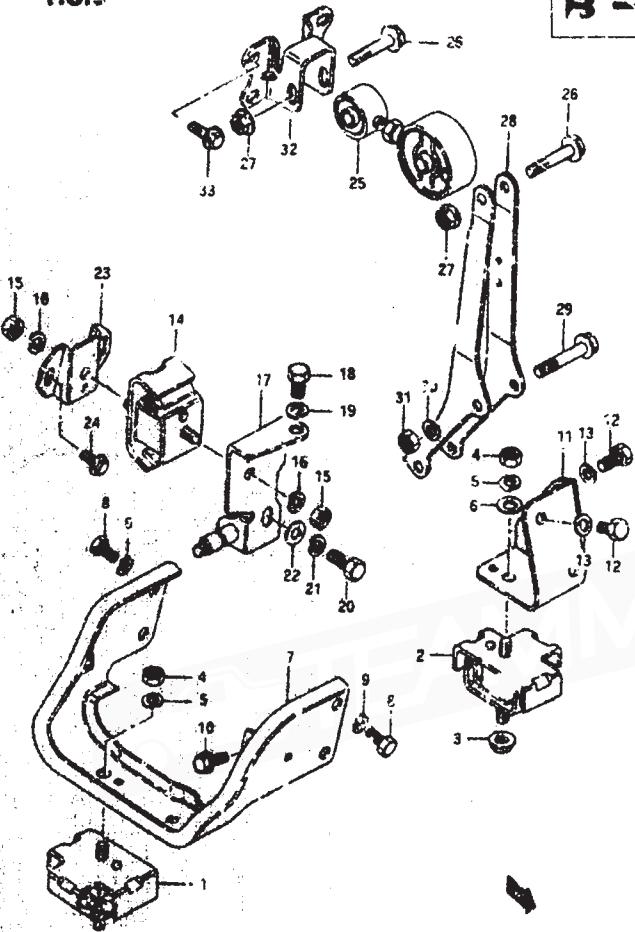


FIG.5 (B-5) ENGINE MOUNTING (MT)


REF.NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11610-78001	MOUNTING, engine RH	1	
2	11620-78001	MOUNTING, engine LH	1	
3	09150-10014	NUT	2	
4	010310-12103	NUT	2	
5	08321-21103	LOCK WASHER	2	
C	09160-10020	WASHER, C-	1	
7	11640-780110	BRACKET, mounting RH	1	
8	01107-08203	BOLT	4	
9	08321-21083	LOCK WASHER	4	
10	010517-08203	BOLT	1	
11	11671-78001	BRACKET, engine mounting LH	1	
12	01107-10203	BOLT	3	
13	08321-21103	LOCK WASHER	3	
14	11710-78401	MOUNTING, engine rear	1	
15	08310-12103	NUT	2	
16	08321-21103	LOCK WASHER	2	
17	11730-78001	BRACKET, rear mounting	1	
18	01107-10203	BOLT	1	
19	08321-21103	LOCK WASHER	1	
20	01107-10293	BOLT	1	
21	08321-21103	LOCK WASHER	1	
22	08322-11103	WASHER	1	
23	11741-78001	BRACKET, mounting body side	1	
24	010517-08163	BOLT	2	
25	11910-78101	ROD, torsion	1	
26	09100-10047	BOLT (10x50)	2	
27	08316-16103	NUT	2	
28	11921-78102	ROD, rod engine side	1	
29	01107-10453	BOLT	2	
30	08321-21103	LOCK WASHER	2	
31	08310-12103	NUT	2	
32	11930-81003	BRACKET, rod body side	1	
33	010517-08163	BOLT	4	

5540T E24

5540T E24

AIR CLEANER	D-2	CAMSHAFT	B-6	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	I-14	WATER HOSE-C-10
AT ASSY (AT)	D-8	CYLINDER BLOCK	B-4	GEAR SHIFT FORK (MT)	D-6	RADIATOR	C-8	WATER PUMP-C-7
AT GASKET SET (AT)	D-9	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-3	
AT MOTOR GEAR (AT)	D-15	DIFFERENTIAL GEAR	E-2	LABEL	C-13	TIMING BELT	E-1	
CLUTCH RELEASE	D-16	GEAR	C-11	GEAR	C-4	TRANSMISSION (AT)	D-11	
CLUTCH RELEASE	D-17	GEAR	C-12	GEAR	D-15	TRANSMISSION (MT)	D-3	
COMPUTER	D-18	GEAR	C-13	GEAR	B-5	TRANSMISSION CASE (AT)	D-10	
COMPUTER	D-19	GEAR	C-14	GEAR	C-6	TRANSMISSION CASE (MT)	D-3	
COOLANT TUBE	D-20	GEAR	C-15	GEAR				
FUEL PUMP	D-21	GEAR	C-16	GEAR				
FUEL PUMP	D-22	GEAR	C-17	GEAR				
FUEL PUMP	D-23	GEAR	C-18	GEAR				
FUEL PUMP	D-24	GEAR	C-19	GEAR				
FUEL PUMP	D-25	GEAR	C-20	GEAR				
FUEL PUMP	D-26	GEAR	C-21	GEAR				
FUEL PUMP	D-27	GEAR	C-22	GEAR				
FUEL PUMP	D-28	GEAR	C-23	GEAR				
FUEL PUMP	D-29	GEAR	C-24	GEAR				
FUEL PUMP	D-30	GEAR	C-25	GEAR				
FUEL PUMP	D-31	GEAR	C-26	GEAR				
FUEL PUMP	D-32	GEAR	C-27	GEAR				
FUEL PUMP	D-33	GEAR	C-28	GEAR				
FUEL PUMP	D-34	GEAR	C-29	GEAR				
FUEL PUMP	D-35	GEAR	C-30	GEAR				
FUEL PUMP	D-36	GEAR	C-31	GEAR				
FUEL PUMP	D-37	GEAR	C-32	GEAR				
FUEL PUMP	D-38	GEAR	C-33	GEAR				
FUEL PUMP	D-39	GEAR	C-34	GEAR				
FUEL PUMP	D-40	GEAR	C-35	GEAR				
FUEL PUMP	D-41	GEAR	C-36	GEAR				
FUEL PUMP	D-42	GEAR	C-37	GEAR				
FUEL PUMP	D-43	GEAR	C-38	GEAR				
FUEL PUMP	D-44	GEAR	C-39	GEAR				
FUEL PUMP	D-45	GEAR	C-40	GEAR				
FUEL PUMP	D-46	GEAR	C-41	GEAR				
FUEL PUMP	D-47	GEAR	C-42	GEAR				
FUEL PUMP	D-48	GEAR	C-43	GEAR				
FUEL PUMP	D-49	GEAR	C-44	GEAR				
FUEL PUMP	D-50	GEAR	C-45	GEAR				
FUEL PUMP	D-51	GEAR	C-46	GEAR				
FUEL PUMP	D-52	GEAR	C-47	GEAR				
FUEL PUMP	D-53	GEAR	C-48	GEAR				
FUEL PUMP	D-54	GEAR	C-49	GEAR				
FUEL PUMP	D-55	GEAR	C-50	GEAR				
FUEL PUMP	D-56	GEAR	C-51	GEAR				
FUEL PUMP	D-57	GEAR	C-52	GEAR				
FUEL PUMP	D-58	GEAR	C-53	GEAR				
FUEL PUMP	D-59	GEAR	C-54	GEAR				
FUEL PUMP	D-60	GEAR	C-55	GEAR				
FUEL PUMP	D-61	GEAR	C-56	GEAR				
FUEL PUMP	D-62	GEAR	C-57	GEAR				
FUEL PUMP	D-63	GEAR	C-58	GEAR				
FUEL PUMP	D-64	GEAR	C-59	GEAR				
FUEL PUMP	D-65	GEAR	C-60	GEAR				
FUEL PUMP	D-66	GEAR	C-61	GEAR				
FUEL PUMP	D-67	GEAR	C-62	GEAR				
FUEL PUMP	D-68	GEAR	C-63	GEAR				
FUEL PUMP	D-69	GEAR	C-64	GEAR				
FUEL PUMP	D-70	GEAR	C-65	GEAR				
FUEL PUMP	D-71	GEAR	C-66	GEAR				
FUEL PUMP	D-72	GEAR	C-67	GEAR				
FUEL PUMP	D-73	GEAR	C-68	GEAR				
FUEL PUMP	D-74	GEAR	C-69	GEAR				
FUEL PUMP	D-75	GEAR	C-70	GEAR				
FUEL PUMP	D-76	GEAR	C-71	GEAR				
FUEL PUMP	D-77	GEAR	C-72	GEAR				
FUEL PUMP	D-78	GEAR	C-73	GEAR				
FUEL PUMP	D-79	GEAR	C-74	GEAR				
FUEL PUMP	D-80	GEAR	C-75	GEAR				
FUEL PUMP	D-81	GEAR	C-76	GEAR				
FUEL PUMP	D-82	GEAR	C-77	GEAR				
FUEL PUMP	D-83	GEAR	C-78	GEAR				
FUEL PUMP	D-84	GEAR	C-79	GEAR				
FUEL PUMP	D-85	GEAR	C-80	GEAR				
FUEL PUMP	D-86	GEAR	C-81	GEAR				
FUEL PUMP	D-87	GEAR	C-82	GEAR				
FUEL PUMP	D-88	GEAR	C-83	GEAR				
FUEL PUMP	D-89	GEAR	C-84	GEAR				
FUEL PUMP	D-90	GEAR	C-85	GEAR				
FUEL PUMP	D-91	GEAR	C-86	GEAR				
FUEL PUMP	D-92	GEAR	C-87	GEAR				
FUEL PUMP	D-93	GEAR	C-88	GEAR				
FUEL PUMP	D-94	GEAR	C-89	GEAR				
FUEL PUMP	D-95	GEAR	C-90	GEAR				
FUEL PUMP	D-96	GEAR	C-91	GEAR				
FUEL PUMP	D-97	GEAR	C-92	GEAR				
FUEL PUMP	D-98	GEAR	C-93	GEAR				
FUEL PUMP	D-99	GEAR	C-94	GEAR				
FUEL PUMP	D-100	GEAR	C-95	GEAR				
FUEL PUMP	D-101	GEAR	C-96	GEAR				
FUEL PUMP	D-102	GEAR	C-97	GEAR				
FUEL PUMP	D-103	GEAR	C-98	GEAR				
FUEL PUMP	D-104	GEAR	C-99	GEAR				
FUEL PUMP	D-105	GEAR	C-100	GEAR				
FUEL PUMP	D-106	GEAR	C-101	GEAR				
FUEL PUMP	D-107	GEAR	C-102	GEAR				
FUEL PUMP	D-108	GEAR	C-103	GEAR				
FUEL PUMP	D-109	GEAR	C-104	GEAR				
FUEL PUMP	D-110	GEAR	C-105	GEAR				
FUEL PUMP	D-111	GEAR	C-106	GEAR				
FUEL PUMP	D-112	GEAR	C-107	GEAR				
FUEL PUMP	D-113	GEAR	C-108	GEAR				
FUEL PUMP	D-114	GEAR	C-109	GEAR				
FUEL PUMP	D-115	GEAR	C-110	GEAR				
FUEL PUMP	D-116	GEAR	C-111	GEAR				
FUEL PUMP	D-117	GEAR	C-112	GEAR				
FUEL PUMP	D-118	GEAR	C-113	GEAR				
FUEL PUMP	D-119	GEAR	C-114	GEAR				
FUEL PUMP	D-120	GEAR	C-115	GEAR				
FUEL PUMP	D-121	GEAR	C-116	GEAR				
FUEL PUMP	D-122	GEAR	C-117	GEAR				
FUEL PUMP	D-123	GEAR	C-118	GEAR				
FUEL PUMP	D-124	GEAR	C-119	GEAR				
FUEL PUMP	D-125	GEAR	C-120	GEAR				
FUEL PUMP	D-126	GEAR	C-121	GEAR				
FUEL PUMP	D-127	GEAR	C-122	GEAR				
FUEL PUMP	D-128	GEAR	C-123	GEAR				
FUEL PUMP	D-129	GEAR	C-124	GEAR				
FUEL PUMP	D-130	GEAR	C-125	GEAR				
FUEL PUMP	D-131	GEAR	C-126	GEAR				
FUEL PUMP	D-132	GEAR	C-127	GEAR				
FUEL PUMP	D-133	GEAR	C-128	GEAR				
FUEL PUMP	D-134	GEAR	C-129	GEAR				
FUEL PUMP	D-135	GEAR	C-130	GEAR				
FUEL PUMP	D-136	GEAR	C-131	GEAR				
FUEL PUMP	D-137	GEAR	C-132	GEAR				
FUEL PUMP	D-138	GEAR	C-133	GEAR				
FUEL PUMP	D-139	GEAR	C-134	GEAR				
FUEL PUMP	D-140	GEAR	C-135	GEAR				
FUEL PUMP	D-141	GEAR	C-136	GEAR				
FUEL PUMP	D-142	GEAR	C-137	GEAR				
FUEL PUMP	D-143	GEAR	C-138	GEAR				
FUEL PUMP	D-144	GEAR	C-139	GEAR				
FUEL PUMP	D-145	GEAR	C-140	GEAR				
FUEL PUMP	D-146	GEAR	C-141	GEAR				
FUEL PUMP	D-147	GEAR	C-142	GEAR				
FUEL PUMP	D-148	GEAR	C-143	GEAR				
FUEL PUMP	D-149	GEAR	C-144	GEAR				
FUEL PUMP	D-150	GEAR	C-145	GEAR				
FUEL PUMP	D-151	GEAR	C-146	GEAR				
FUEL PUMP	D-152	GEAR	C-147	GEAR				
FUEL PUMP	D-153	GEAR	C-148	GEAR				
FUEL PUMP	D-154	GEAR	C-149	GEAR				
FUEL PUMP	D-155	GEAR	C-150	GEAR				
FUEL PUMP	D-156	GEAR	C-151	GEAR				
FUEL PUMP	D-157	GEAR	C-152	GEAR				
FUEL PUMP	D-158	GEAR	C-153	GEAR				
FUEL PUMP	D-159	GEAR	C-154	GEAR				
FUEL PUMP	D-160	GEAR	C-155	GEAR				
FUEL PUMP	D-161	GEAR	C-156	GEAR				
FUEL PUMP	D-162	GEAR	C-157	GEAR				
FUEL PUMP	D-163	GEAR	C-158	GEAR				
FUEL PUMP	D-164	GEAR	C-159	GEAR				
FUEL PUMP	D-165	GEAR	C-160	GEAR				
FUEL PUMP	D-166	GEAR	C-161	GEAR				
FUEL PUMP	D-167	GEAR	C-162	GEAR				
FUEL PUMP	D-168	GEAR	C-163	GEAR				
FUEL PUMP	D-169	GEAR	C-164	GEAR				
FUEL PUMP	D-170	GEAR	C-165	GEAR				
FUEL PUMP	D-171	GEAR	C-166	GEAR				
FUEL PUMP	D-172	GEAR	C-167	GEAR				
FUEL PUMP	D-173	GEAR	C-168	GEAR				
FUEL PUMP	D-174	GEAR	C-169	GEAR				
FUEL PUMP	D-175	GEAR	C-170	GEAR				
FUEL PUMP	D-176	GEAR	C-171	GEAR				
FUEL PUMP	D-177	GEAR	C-172	GEAR				
FUEL PUMP	D-178	GEAR	C-173	GEAR				
FUEL PUMP	D-179	GEAR	C-174	GEAR				

FIG. 6 (B-7) ENGINE MOUNTING (AY)

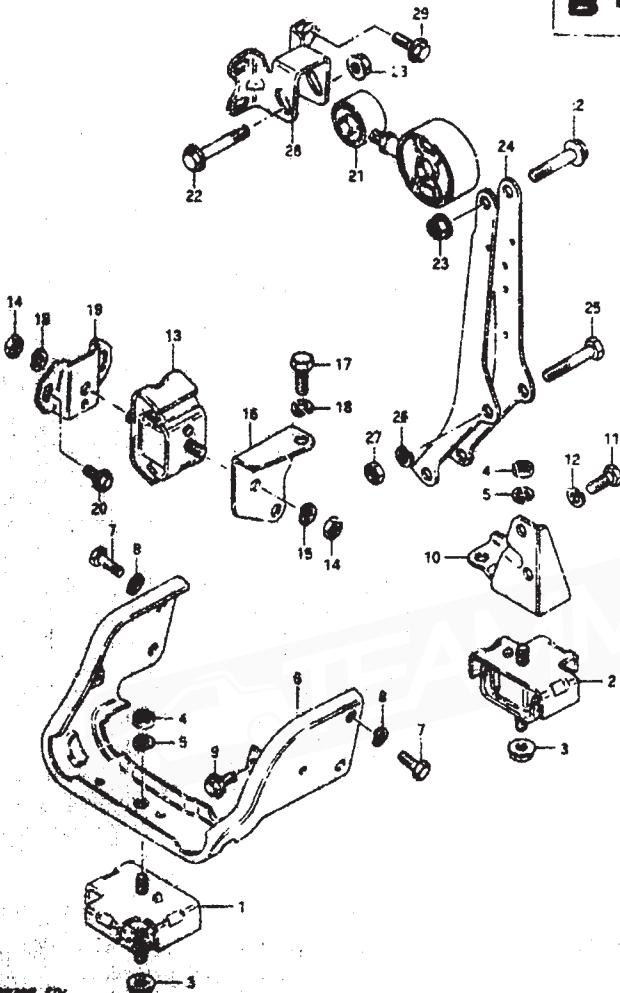

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11610-78001	MOUNTING, engine RH	1	
2	11627-78001	MOUNTING, engine LH	1	
3	09198-10C14	NUT	2	
4	08310-12103	NUT	2	
5	08321-21103	LOCK WASHER	2	
6	11660-78110	BRACKET, mounting RH	1	
7	01107-08203	BOLT	4	
8	08321-21083	LOCK WASHER	4	
9	01517-08203	BOLT	1	
10	11670-78020	BRACKET, mounting LH	1	
11	01107-1C203	BOLT	3	
12	08321-21103	LOCK WASHER	3	
13	11710-81000	MOUNTING, engine rear	1	
14	08310-12103	NUT	2	
15	08321-21103	LOCK WASHER	2	
16	11731-78030	BRACKET, rear mounting	1	
17	01107-10203	BOLT	2	
18	08321-21103	LOCK WASHER	2	
19	11741-78001	BRACKET, mounting body side	1	
20	08337-08163	BOLT	2	
21	11910-78120	NUT, torque	1	
22	09101-10047	BOLT (16x50)	2	
23	08310-16103	NUT	2	
24	11721-78121	BRACKET, rod engine side	1	
25	01907-10203	BOLT	2	
26	08321-21103	LOCK WASHER	2	
27	08310-12103	NUT	2	
28	11731-81000	BRACKET, rod body side	1	
29	01517-08203	BOLT	4	

3397-624

33407-624

AIR CLEANER.....	C-2 CRANKSHAFT.....	B-8 GEAR SHIFT CONTROL.....	E-3 OIL PUMP AND OIL PAN (AT).....	D-14 DRIVER HOSE.....	C-10 WATER PUMP.....
AT ASSY (AT).....	D-8 CYLINDER BLOCK.....	B-4 GEAR SHIFT FORK (MT).....	D-6 RADIATOR.....	C-8	C-7
AT ASSY SET (AT).....	D-9 CYLINDER HEAD.....	B-3 INTAKE MANIFOLD.....	B-11 SELECTOR LEVER (AT).....	E-5	
AT DIFFERENTIAL GEAR (AT).....	D-13 DIFFERENTIAL GEAR (C-2).....	LABEL.....	D-13 TIMING BELT.....	B-10	
CHM SHAFT AND VALVE.....	B-9 EMISSION CONTROL.....	C-1 MUFFLER.....	D-11 TRANSMISSION (AT).....	D-11	
COOLER (MT).....	B-12 ENGINE BASKET SET (B-2).....	D-12 OIL HOSE (AT).....	D-13 TRANSMISSION (MT).....	D-3	
COOLER (MT).....	B-12 ENGINE MOUNTING.....	B-6 OIL PAN.....	D-9 TRANSMISSION CASE (AT).....	D-10	
COOLER (MT).....	C-3 FUEL PUMP.....	C-5 OIL PUMP.....	C-6 TRANSMISSION CASE (MT).....	D-8	

FIG.7

B - 8

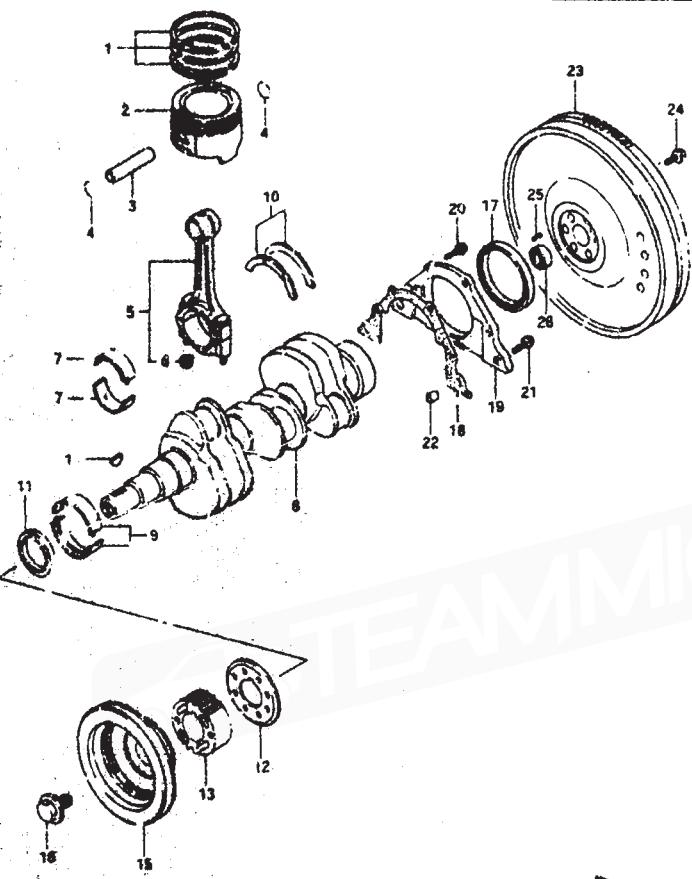


FIG.7 (B-8) CRANKSHAFT

PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	12140-73010 RING SET, piston	3	STD
1-2	12140-73010-025 RING SET, piston	3	0910.25
1-3	12140-73010-050 RING SET, piston	3	0510.5
2-1	12111-81032-080 PISTON	3	STD
2-4	12111-81052-025 PISTON	3	0510.25
2-3	12111-81052-050 PISTON	3	0510.5
3	12151-78110 PIN, piston	3	
4	09381-16001 CIRCLIP	3	
5	12160-73001 ROD ASSY, connecting	3	
6	09190-08033 .NUT	6	
7-1	12181-81050-080 BEARING, connecting rod	6	STD,T12.5
7-2	12181-81050-025 BEARING, connecting rod	5	US10.25,T12.425
7-3	12181-81050-050 BEARING, connecting rod	6	US10.5,T12.75
8	12221-81081 CRANKSHAFT	1	
9-1	12300-81810-080 BEARING SET, crankshaft	1	STD,T12.0
9-2	12300-81810-025 BEARING SET, crankshaft	1	US10.25,T12.125
9-3	12300-81810-050 BEARING SET, crankshaft	1	US10.5,T12.25
10-1	12300-78030 BEARING SET, crank thrust	1	STD,T12.5
10-2	12300-78030-012 BEARING SET, crank thrust	1	0910.125,T12.563
10-3	12300-78030-025 BEARING SET, crank thrust	1	0910.25,T12.625
11	09283-32026 SEAL, oil	1	
12	12630-73001 GUIDE, timing belt	1	
13	12631-84000 PULLEY, crank timing belt	1	
14	08381-71039 KEY	1	
15	12611-78100 PULLEY, crankshaft	1	
16	09103-12002 SOLT (12x20)	1	
17	09283-60009 SEAL, oil	1	
18	11340-73002 GASKET, oil seal retaining	1	
19	11341-73000 HOUSING, oil seal	1	
20	01517-06203 BOLT	4	
21	01517-06253 BOLT	2	
22	04211-09109 PIN	2	
23	12620-78102 FLYWHEEL	1	HT
24	09103-10097 BOLT	6	HT
25	04221-04129 PIN	1	HT
26	09133-8C007 BEARING	1	HT

SIGHT E24


SIGHT E24

AIR CLEANER	C-2	CRANKSHAFT	B-8	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE C-10
AT ASSY (CAT)	D-8	CYLINDER BLOCK	B-4	GEAR SHIFT FORK (MT)	C-5	RADIATOR	C-8	WATER PUMP C-7
AT GEARBOX SET (CAT)	D-9	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-9	
AT PUMPING SHAFT (CAT)	B-13	DIFFERENTIAL GEAR-E-2	LABEL	C-13	TIMING BELT	D-18		
CHG. SHFT. AND VALVE	B-19	INJECTION CONTROL	C-11	MUFFLER	C-4	TRANSMISSION (AT)	D-11	
CHG. SHFT. AND VALVE	B-12	ENGINE GASKET SET-B-2	D-15	OIL HOSE (AT)	D-15	TRANSMISSION (MT)	D-3	
CHG. SHFT. AND VALVE	B-2	ENGINE MOUNTING	B-6	OIL PAN	B-5	TRANSMISSION CASE (AT)	D-10	
CHG. SHFT. AND VALVE	B-3	FUEL PUMP	D-6	OIL PUMP	C-6	TRANSMISSION CASE (MT)	D-3	

FIG. 8 (B-9) CAM SHIFT AND VALVE

8'CY

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	09283-73022	SEAL, oil	1
2	12110-84000	CAMSHAFT	1
3	12745-73001	PLATE, camshaft thrust	1
4	02122-CS128	SCREW	2
5	12840-78002	SHIFT, valve socket	2
6	02122-46168	SCREW	6
7	12041-73002	ARM, valve rocker	6
8	12801-73001	SPRING, rocker arm	6
9	12911-76102	VALVE, inlet	3
10	12913-73002	VALVE, exhaust	3
11	12921-N0003	SPRING, valve	6
12	0P130-07012	NUT	6
13	12846-73010	SCREW	6
14	12932-82000	COTTER, valve	12
15	12931-82000	RETAINER, valve spring	6
16	09289-67005	SEAL, oil	6
17	12933-73000	SEAT, valve spring	6

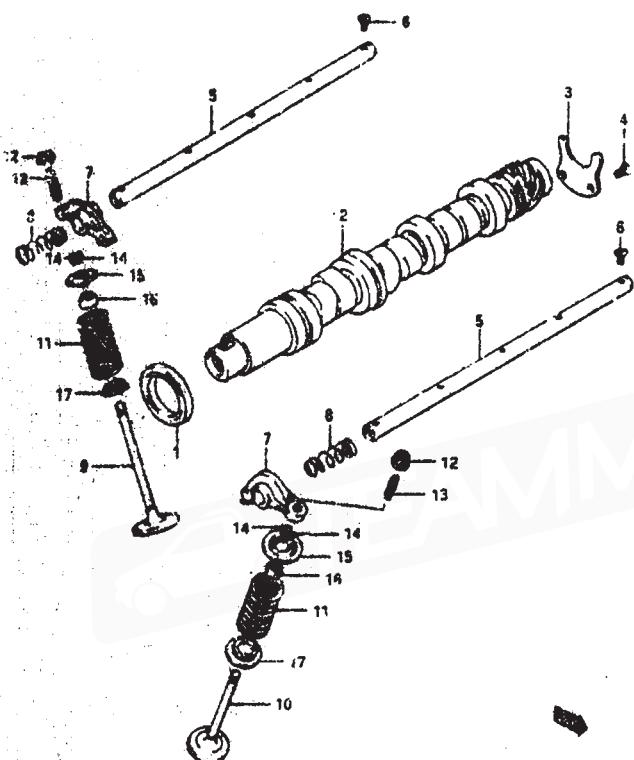


SB40T E2A

SB40T E2A

AIR CLEANER	-D-2	CAM SHAFT	-B-6	GEAR SHIFT CONTROL	-E-3	OIL PUMP AND OIL PAN (4T)	-D-14	BYPASS HOSE	-C-10
AT ASY. (AT)	-D-8	CYLINDER BLOCK	-B-4	GEAR SHIFT FORK (MT)	-D-6	RADIATOR	-C-6	WATER PUMP	-C-7
AT SHIFTER SET (AT)	-D-9	CYLINDER HEAD	-B-3	INTAKE MANIFOLD	-B-11	SELECTOR LEVER (AT)	-E-5		
AT SWING ARM (AT)	-D-13	DIFFERENTIAL GEAR	-E-2	LABEL	-C-13	TIMING BELT	-B-19		
CAM SHIFT AND VALVE	-B-9	DRIVE BELT	-C-11	HIPPIER	-C-14	TRANSMISSION (4T)	-D-11		
CHIMNEY	-B-12	DRIVE BELT SET	-B-2	OIL HOSE (AT)	-D-15	TRANSMISSION (MT)	-D-3		
CHIMNEY GASKET	-B-2	DRIVE BEARING HUB	-B-6	OIL PAN	-B-5	TRANSMISSION CASE (AT)	-D-16		
COOLING CABLE	-D-3	FUEL PUMP	-C-5	OIL HUMP	-C-6	TRANSMISSION CASE (MT)	-D-5		

FIG. 3

8 - 10

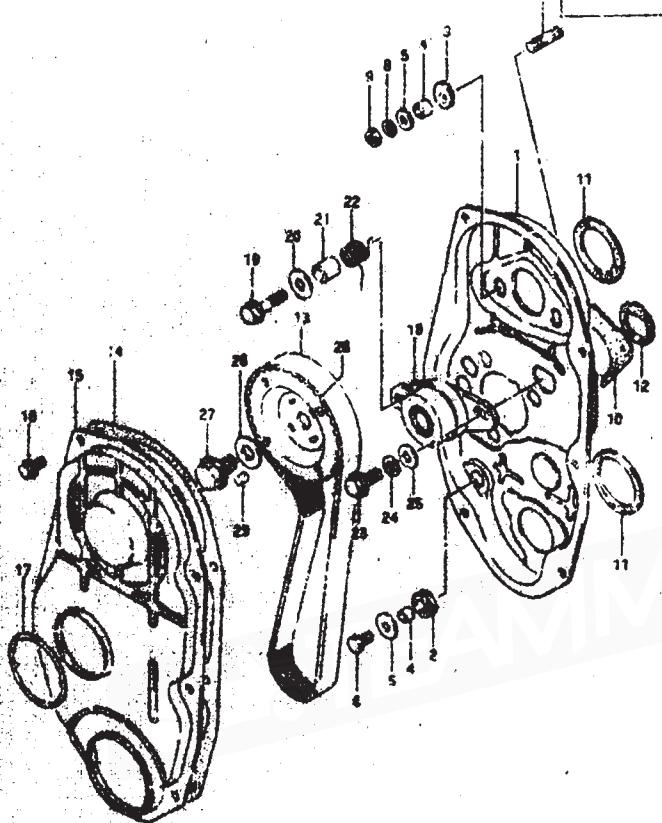

FEB. 9 (C-10) 1942 2000 hrs.

14


ITEM NO.	PART NO.	DESCRIPTION	REMARKS
1	11380-74102	COVER, inside	1
2	09308-10004	SHIMM	2
3	11398-73000	GASKET, cover	2
4	09180-06106	SPACER (4.8x10x7)	4
5	09160-06027	WASHER (6.3x20x1.2)	4
6	09100-06127	BOLT	2
7	09170-02078	STUD BOLT	2
8	08321-31067	LOCK WASHER	2
9	08310-11066	NUT	2
10	11462-73004	CUSHION SEAL, NO. 2	1
11	1-463-73003	CUSHION SEAL, NO. 3	2
12	11465-73000	CUSHION SEAL, NO. 4	1
13	17761-04777	BELT, timing	1
14	11369-72-140	GASKET, belt cover	1
15	11391-73005	COVER, outside	1
16	01937-06103	VALT	6
17	11464-1/000	SHIMM, outside	1
18	12000-04000	TENSIONER ASSY, timing belt	1
19	01917-08406	BOLT	1
20	09160-06075	WASHER (0.2x24x1.6)	1
21	09180-08111	SPACER (0.1x1.9x17)	1
22	12021-78100	SFARING, tensioner	1
23	09163-08192	BOLT	1
24	08321-31066	LOCK WASHER	1
25	09160-08030	WASHER (0.3x20x4.5)	1
26	12741-04008	FULLER, cam shaft timing	1
27	01937-12296	BOLT	1
28	09160-12043	WASHER (12.5x32x4.5)	1
29	08221-05109	PIN	1

卷之三

2847 524

## FIG.10 (B-11) INTAKE MANIFOLD AND CARBURETOR

Q'TY

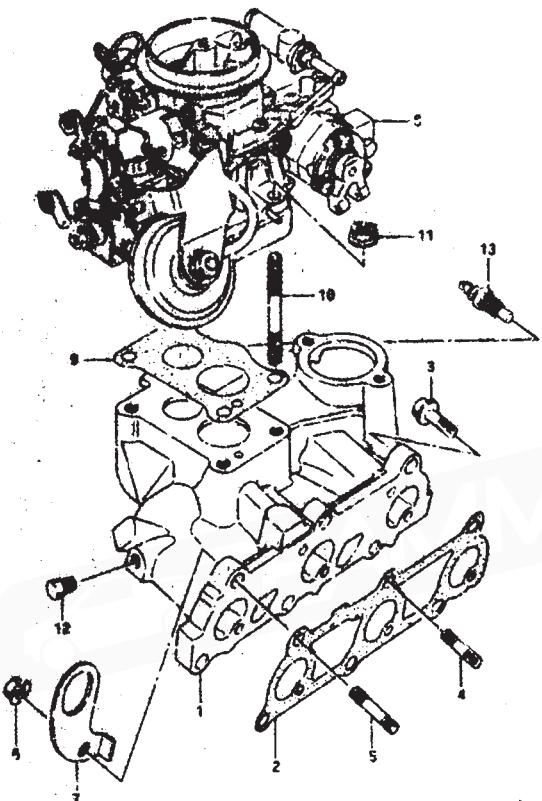

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	13-10-14070	MANIFOLD, Intake	1	MT
1-2	131-14-4170	MANIFOLD, Intake	1	AT
	13-19-76111	GASKET, intake manifold	1	
3	08317-08233	STUD	2	
4	09103-08078	STUD BOLT	3	
5	08411-08255	STUD BOLT	1	
6	08116-14083	NUT	4	
7	11851-78111	HOSE, engine	1	
8-1	13200-81120	CARBURETOR ASSY	1	MT
8-2	13200-81160	CARBURETOR ASSY	1	AT
9	13125-78111	GASKET, CARBURETOR	1	
10	08107-08073	STUD BOLT	4	
11	08316-14083	NUT	4	
12	09246-04072	PLUG	1	
13	34-850-84900	JACKET, water temp	1	

55407 E24

55407 E24


AIR CLEANER	.....	O-2	CRANKSHAFT	.....	O-8	GEAR SHIFT CONTROL	.....	E-3	GEAR SHIFT FORK (RHT)	.....	D-6	GEAR SHIFT FORK (LFT)	.....	D-6	OIL PUMP AND OIL PAN GASKET	.....	O-14	WATER HOSE-C-10
AT ASSY (AT)	.....	O-1	CYLINDER BLOCK	.....	O-4	GEAR SHIFT FORK	(RHT)	D-6	RADIATOR	.....	C-8	RADIATOR	.....	C-8	WATER PUMP-C-7	.....		
AT GASKET SET (AT)	.....	O-3	CYLINDER HEAD	.....	O-3	INTAKE MANIFOLD	.....	B-11	SELECTOR LEVER (AT)	.....	E-3							
AT PARKING BRAKE (AT)	.....	O-13	Differential	(AT)	O-13	LABEL	.....	C-13	TIMING BELT	.....	D-10							
GEAR SHIFTER AND VALVE	.....	O-9	DIFFERENTIAL	(AT)	O-9	MUFLER	.....	C-4	TRANSMISSION (AT)	.....	D-11							
GEAR SHIFTER AND VALVE	.....	O-10	DRIVELINE CONTROL	.....	O-11	DIE WIRE (AT)	.....	D-15	TRANSMISSION (RHT)	.....	D-9							
CARBURETOR	.....	O-12	DRIVELINE GASKET SET	.....	O-12	OIL PAN	.....	B-3	TRANSMISSION CASE (AT)	.....	D-9							
CLUTCH (AT)	.....	O-2	ENGINE MOUNTING	.....	O-2	OIL PAN	.....	C-3	TRANSMISSION CASE (RHT)	.....	D-3							
COUPLEX (AT)	.....	C-1	FUEL PUMP	.....	O-2	OIL PAN	.....	C-3	TRANSMISSION FOR CASE (AT)	.....	D-3							

FIG.11

B - 12

11

FIG.11 (B-12) CARBURETOR (MT)

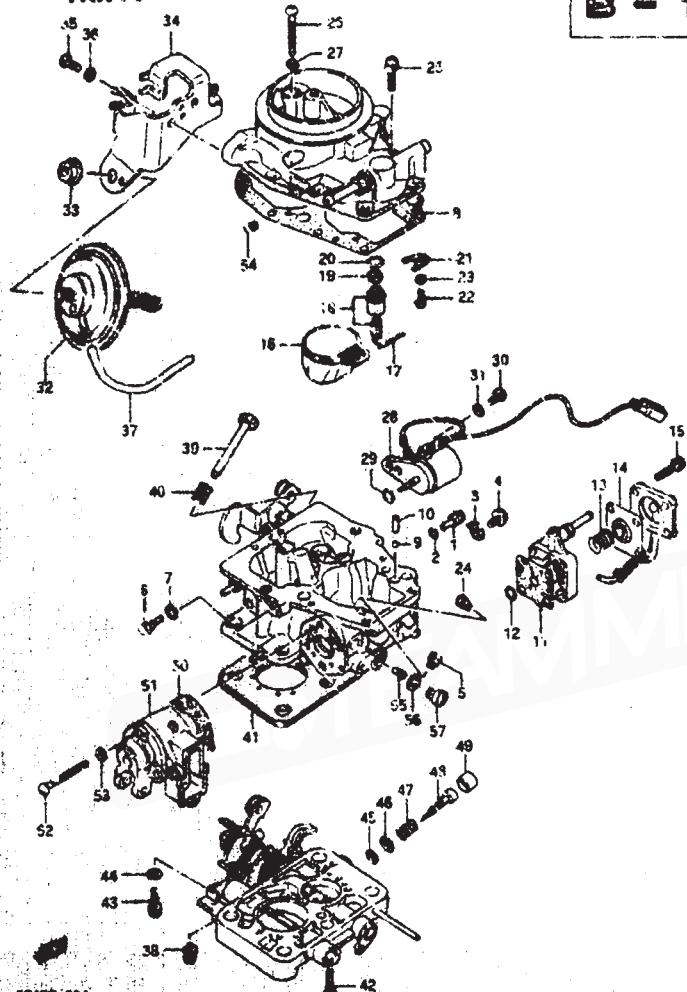

53407-226

AIR CLEANER	C-2	CRANKSHAFT	B-8	GEAR SHIFT CONTROL	E-3
AT AIRF (AT)	D-6	CYLINDER BLOCK	B-4	GEAR SHIFT FORK (MT)	D-6
AT GASKET SET (AT)	B-9	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11
AT PLATE AND SPRING	L-15	DIFFERENTIAL BEARING	E-2	LABEL	C-15
GEAR SHIFT AND VALVE	B-2	DRIVEN GEAR SET	B-2	MUFFLER	C-4
DRIVEN GEAR	B-15	DRIVEN GEAR SET	B-2	OIL HOSE (AT)	D-15
CLUTCH BODY	C-2	DRIVE GEAR	B-6	OIL PAN	B-9
DRIVEN GEAR	B-3	FUEL PUMP	C-3	OIL PUMP	C-6

53407-234


OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE	C-10
RADIATOR	C-8	WATER PUMP	C-7
SELECTOR LEVER (AT)	E-5		
TIMING BELT	C-10		
TRANSMISSION (AT)	D-14		
TRANSMISSION (MT)	D-3		
TRANSMISSION GEAR (AT)	D-16		
TRANSMISSION CASE (MT)	D-9		

FIG.11

B - 13

12

FIG.11 (B-13) CARBURETOR (MT)

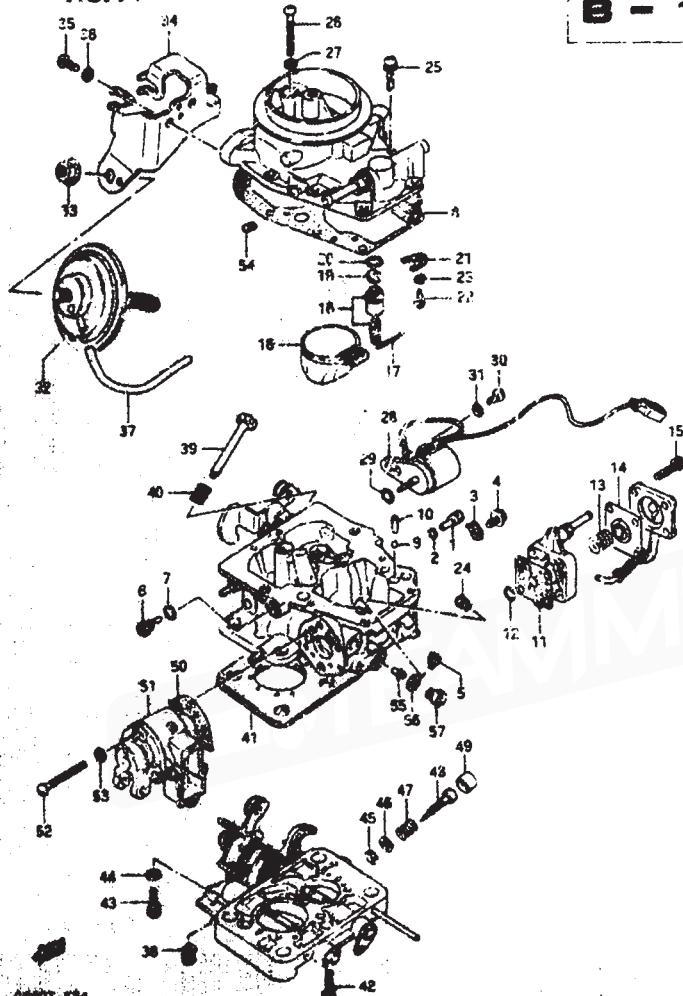

REF. NO.

DESCRIPTION

REMARKS

32	13330-84300	CARBURETOR ASSY, nonprecision	1
33	08316-26796	NUT	1
34	13081-5-300	BRACKET, chamber	1
35	02112-05106	SCREW	2
36	08321-21056	LOCK WASHER	2
37	13465-78100	HOSE	1
38	13375-84300	SCREW	1
39	13267-78120	SCREW	1
40	13268-81000	SPRING	1
41	13361-84301	PACKING	1
42	13601-05226	SCREW	1
43	13248-78100	SCREW	1
44	13249-78100	WASHER	1
45	13413-79110	PACKING	1
46	13432-47090	WASHER	1
47	13271-9-3011	SPRING	1
48	13371-84300	SCREW	1
49	13699-77000	CAP	1
50	13362-94300	GASKET	1
51	13255-84300	VALVE ASSY	1
52	02112-05356	SCREW	3
53	08321-21056	LOCK WASHER	3
54	08492-48005	JET, enrichment	1
55	08492-55010	JET, enrichment	1
56	13361-84300	WASHER	1
57	13374-84300	SCREW	1

SS40T E24

AIR CLEANER	.....	D-2	GEAR SHIFT CONTROL	.....	E-3	OIL PUMP AND OIL PAN (AT)	.....	D-14	WATER HOSE	.....	C-10
AT ASSY (AT)	.....	D-3	CYLINDER BLOCK	.....	B-4	GEAR SHIFT FORK (MT)	.....	D-6	RADIATOR	.....	C-6
AT GASKET SET (AT)	.....	D-9	CYLINDER HEAD	.....	B-3	INTAKE MANIFOLD	.....	B-11	SELECTOR LEVER (AT)	.....	E-5
AT PARKING BRAKE (AT)	.....	D-13	SUPPLEMENTAL GEAR	.....	E-2	LABEL	.....	C-15	TIMING BELT	.....	B-10
SWI SWIFT AND VALVE	.....	D-9	POSITION CONTROL	.....	E-11	HUFFLER	.....	C-8	TRANSMISSION (AT)	.....	D-11
TRANSMISSION	.....	D-12	ZINC PLATE	.....	D-1	TRANSMISSION (MT)	.....	D-15	TRANSMISSION (AT)	.....	D-5
CYLINDER GASKET	.....	D-2	ENGINE MOUNTING	.....	B-6	OIL PAN	.....	B-5	TRANSMISSION CASE (AT)	.....	D-10
COOLANT GLOBE	.....	D-2	FUEL PUMP	.....	D-5	OIL PUMP	.....	C-6	TRANSMISSION OIL (MT)	.....	D-9

FIG.12

E5 - 14 13

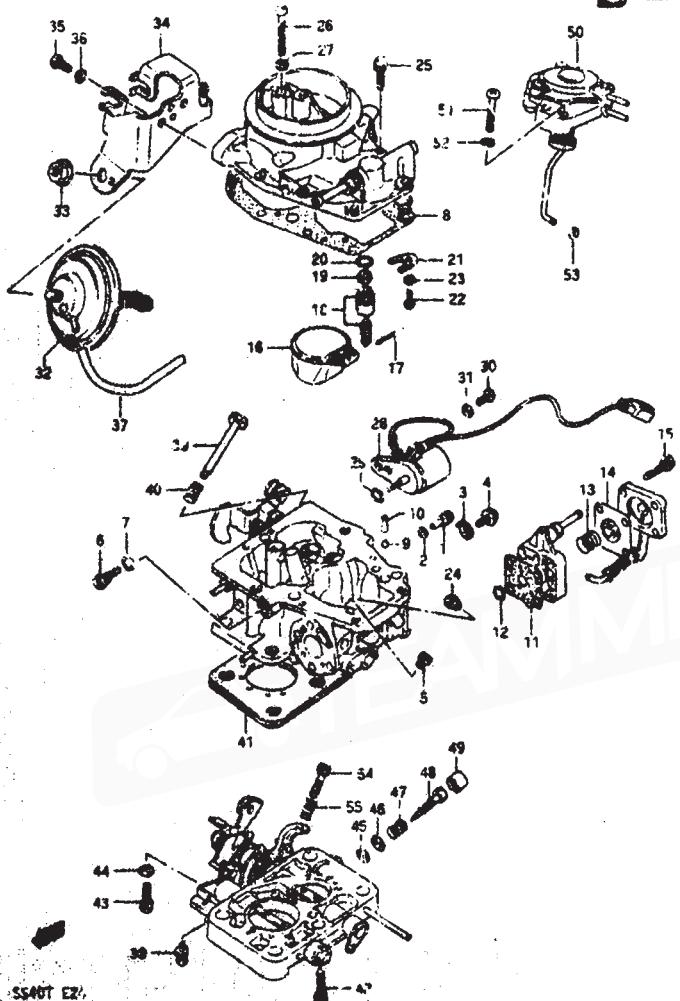


FIG.12 (B-14) CARBURETOR (BT)


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
	13300-04160	CARBURETOR ASSY	1	
1	09492-42914	JET, idler	1	
2	13278-40010	O RING	1	
3	13300-78110	PLATE	1	
4	13397-81000	SCREW	1	
5	09491-26016	JET, main	1	
6	09492-30012	JET, pilot	1	
7	13294-28010	O RING	1	
8	13231-78100	GASKET, float chamber	1	
9	13396-16910	BALL	1	
10	13323-04000	WEIGHT	1	
11	13360-04300	DISKET	1	
12	13516-61710	O RING	1	
13	13494-37010	SPRING	1	
14	13491-79110	DIAPHRAGM	1	
15	13601-04226	SCREW	4	
16	13319-04100	FLOAT	1	
17	13234-78110	PIN, float	2	
18	13370-78110	VALVE ASSY, needle	1	
19	13376-65010	NET	1	
20-1	13501-04020	SHIM (T:0.2)	AR	
20-2	13378-73000	SHIM (T:0.3)	AR	
20-3	13378-04110	SHIM (T:0.5)	AR	
20-4	13378-04100	SHIM (T:0.7)	AR	
21	13373-39110	FLATE	1	
22	02112-06106	SCREW	1	
23	08321-21046	LOCK WASHER	1	
24	09491-67004	JET, main	1	
25	13601-05106	SCREW	6	
26	02112-05306	SCREW	1	
27	08321-21056	LOCK WASHER	1	
28	13360-04300	VALVE ASSY, solenoid	1	
29	13231-78100	O RING	1	
30	02112-03126	SCREW	1	
31	08321-21056	LOCK WASHER	1	

SAINT E2

SAINT E2A

AIR CLEANER.....	C-2 CRANKSHAFT.....	B-8 GEAR SHIFT CONTROL.....	E-3 OIL PUMP AND OIL PAN (AT).....	D-14 WATER HOSE-C-10
AT ASST (AT).....	D-8 CYLINDER BLOCK.....	B-4 GEAR SHIFT FORK (MT).....	D-5 RADIATOR.....	C-8 WATER PUMP-C-7
AT GASKET SET (AT).....	H-9 CYLINDER HEAD.....	B-3 INTAKE MANIFOLD.....	B-11 SELECTOR LEVER (AT).....	E-5
AT PLASTIC ENGINE (AT).....	D-15 DIFFERENTIAL GEAR-E-7	LABEL.....	C-13 TIMING BELT.....	E-16
CAM SHFT. AND VALVE.....	B-9 EMISSION CONTROL-C-11	MUFFLER.....	D-4 TRANSMISSION (AT).....	D-11
CARBURETOR.....	B-12 ENGINE BASKET SET-B-2	OIL HOSE (AT).....	D-15 TRANSMISSION (MT).....	D-3
CLUTCH U/J.....	D-2 ENGINE MOUNTING-B-6	OIL PAN.....	B-5 TRANSMISSION CASE (AT).....	D-10
COOTING CABLE.....	C-3 FUEL PUMP.....	OIL PUMP.....	C-6 TRANSMISSION CASE (MT).....	D-3

FIG.12

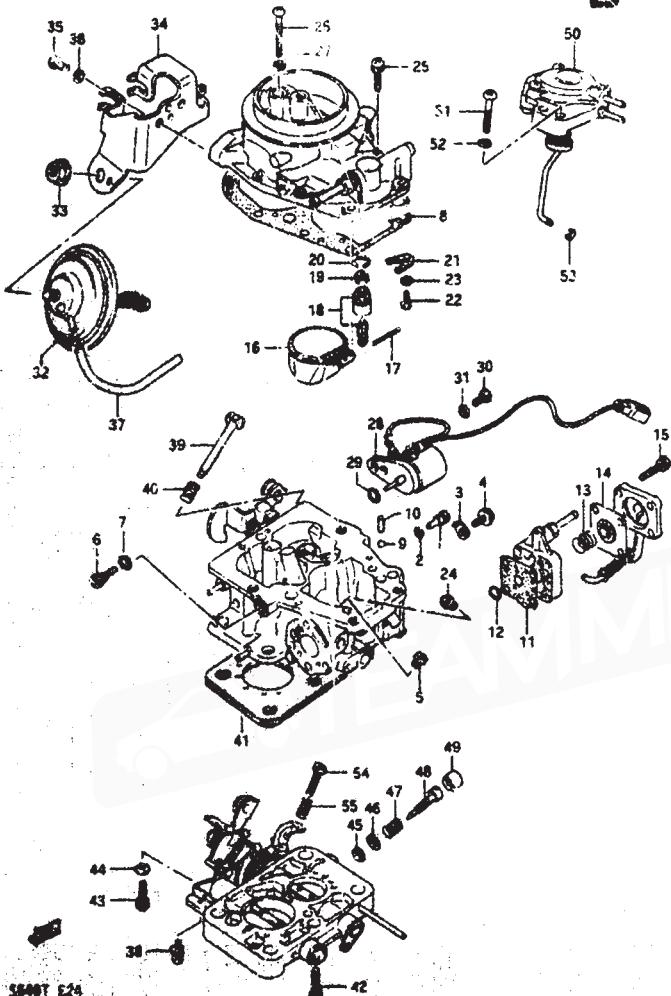B - 15<sup>14</sup>

SS40T E2A


FIG.12 (B-15) CHAMBER TOR (AT)

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	13330-74300	CHAMBER ASSY, depression	1	
37	02316-26064	NUT	1	
34	13281-84700	BRACKET, chamber	1	
35	02112-05106	SCREW	2	
36	08321-21056	LOCK WASHER	2	
37	13663-78100	NUT	1	
38	13175-84300	SCREW	1	
39	13267-78120	SCREW	1	
40	13269-81000	SPRING	1	
41	13361-84300	PACKING	1	
42	13401-05226	SCREW	1	
43	13X48-78100	SCREW	1	
34	13249-78100	WASHER	1	
45	13453-79110	PACKING	1	
46	13432-47090	WASHER	1	
47	13271-03011	SPRING	1	
48	13371-84300	SCREW	1	
49	13697-77000	CAP	1	
51	13330-74320	CHAMBER ASSY, depression	1	
52	02112-05206	SCREW	2	
52	08321-21056	LOCK WASHER	2	
53	13419-81700	E GEAR	1	
54	13372-84300	SCREW, adjust	1	
55	13271-93011	SPRING	1	

SS40T E2A

AIR CLEANER.....	C-2	CRANKSHAFT.....	B-8	GEAR SHIFT CONTROL.....	E-3	OIL PUMP AND OIL PAN (AT).....	D-14	WATER HOSE-C-10
AT ASSY (AT).....	D-8	CYLINDER BLOCK.....	B-4	GEAR SHIFT FORK (INT).....	D-5	RADIATOR.....	C-8	WATER PUMP-C-7
AT GASKET SET (AT).....	D-9	CYLINDER HEAD.....	B-3	INTAKE MANIFOLD.....	B-11	SELECTOR LEVER (AT).....	E-5	
AT PARKING BRAKE (AT).....	D-13	DIFFERENTIAL GEAR.....	B-2	LAWEL.....	C-13	TIMING BELT.....	B-10	
CAM SHAFT AND VALVE.....	B-9	TRANSMISSION CONTROL.....	C-11	MUFFLER.....	C-4	TRANSMISSION (AT).....	D-11	
CARBURETOR.....	B-12	TRANSMISSION CONTROL SET.....	B-2	OIL HOSE (AT).....	D-5	TRANSMISSION (INT).....	D-3	
CLUTCH (INT).....	D-2	ENGINE GASKET SET-B-2	B-6	OIL TUBE.....	B-5	TRANSMISSION CASE (AT).....	D-10	
CONTROL CABLE.....	C-3	FUEL PUMP.....	C-5	OIL PUMP.....	D-6	TRANSMISSION CASE (INT).....	D-5	



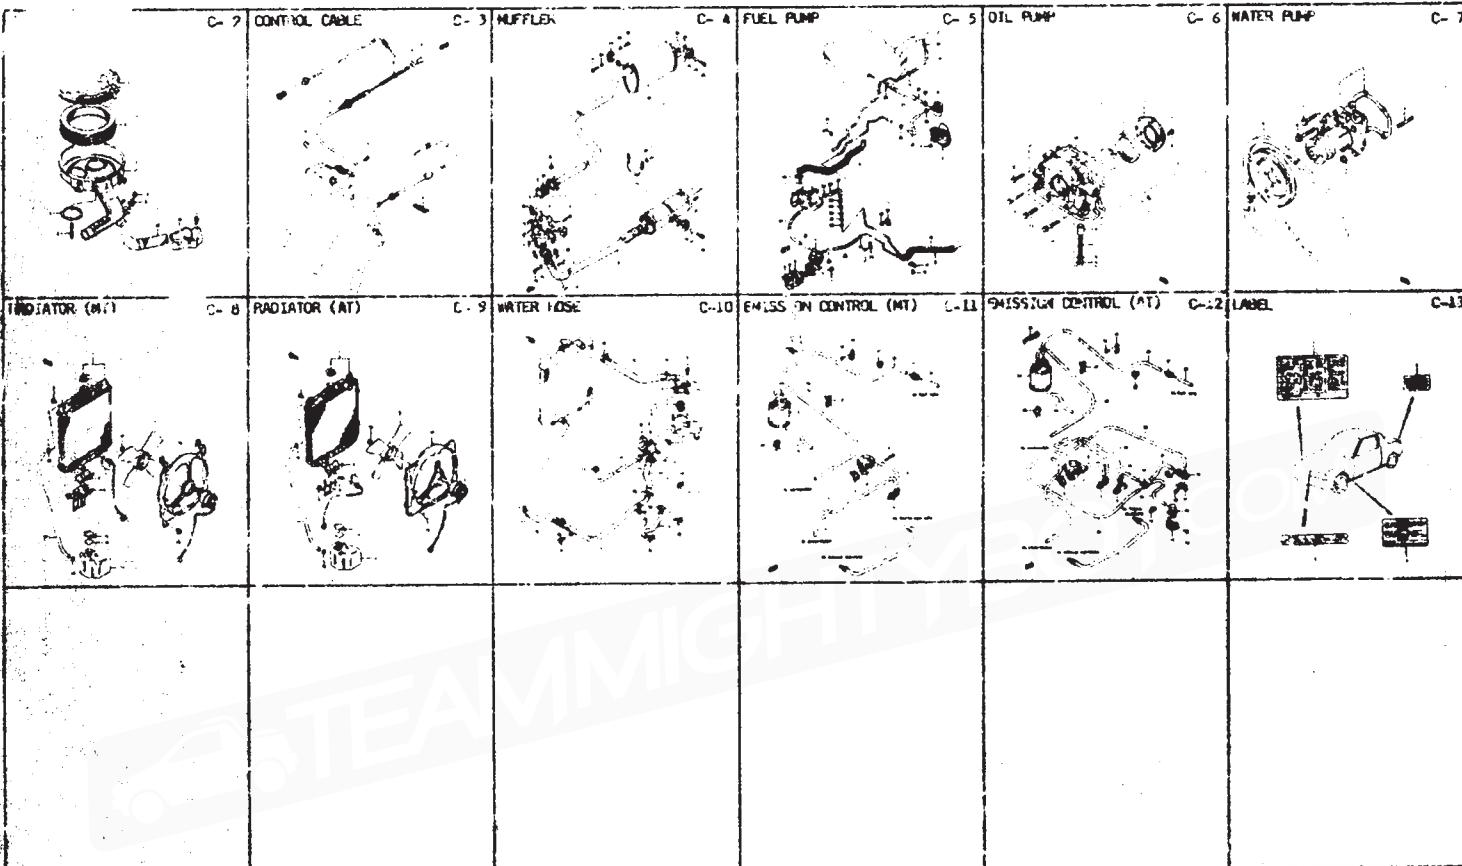

AIR CLEANER.....C-2 CRANKSHAFT.....B-9 GEAR SHIFT CONTROL.....I-3 OIL PUMP AND OIL PAN (AT).....D-14 MAT H HOSE.....C-10  
 AT ASST (AT).....D-8 CYLINDER BLOCK.....B-4 GEAR SHIFT FORK (MT).....D-6 RADIATOR.....C-8 WATER PUMP.....C-7  
 AT GASKET SET (AT).....D-9 CYLINDER HEAD.....B-3 INTAKE MANIFOLD.....B-11 SELECTOR LEVER (AT).....E-5  
 AT PARKING BRAKE (AT).....D-13 LIFTER (FINAL GEAR).....E-2 LABEL.....C-15 TIMING BELT.....B-10  
 CAM SHAFT AND VALVE.....B-9 EMISSION CONTROL.....C-11 MUFFLER.....C-4 TRANSMISSION (AT).....D-11  
 CARBURETOR.....B-12 ENGINE GASKET SET.....B-2 OIL HOSE (AT).....D-15 TRANSMISSION (MT).....D-5  
 CLUTCH (AT).....D-2 ENGINE MOUNTING.....P-2 OIL PAN (AT).....D-5 TRANSMISSION CASE (AT).....D-10  
 CONTROL CABLE.....C-3 FUEL PUMP.....C-5 OIL PUMP.....C-6 TRANSMISSION CASE (MT).....D-9


BATTERY.....F-6 FRONT BODY PANEL.....I-2 FRONT SEAT.....J-12 LOCK SET AND RADIO.....F-13 REAR SUSPENSION.....G-3 STEERING WHEEL.....G-7 BRAKE MASTER CYLINDER.....H-2 FRONT BUMPER.....I-8 FRONT SUSPENSION.....G-2 PARKING BRAKE.....H-5 STRIPE TAPE AND MUD FLAP.....J-4 BRAKE PIPING.....H-3 FRONT DOOR GLASS.....J-8 FRONT WHEEL BRAKE.....H-4 PEDAL.....G-10 RIM WHEEL AND TIRE.....G-4 SWITCH.....F-12 CAB HEATER.....I-13 FRONT DOOR LICK.....J-9 FRONT WINDOW.....J-6 REAR AXLE.....G-6 SEAT BELT.....J-15 VENTILATOR.....I-12 DECK RAIL PIPE.....I-5 FRONT DOOR PANEL.....J-7 FUEL TANK.....J-10 REAR BODY PANEL.....I-6 SHOE BODY PANEL.....I-7 WASHER.....I-15 DASHTRIORATOR.....F-5 FRONT FENDER.....I-9 GENERATOR.....F-3 REAR BUMPER.....I-8 SPEEDOMETER.....I-7 WIPER.....F-14 FLOOR MAT.....G-2 FRONT HOOD PANEL.....I-3 INSTRUMENT PANEL.....I-14 EAR GATE LOCK.....I-19 SERVOSTEERING MOTOR.....F-2 MVR.HD HANDLES.....F-10 FRONT AIRBAG.....G-3 FRONT LAMP.....I-9 INTERIOR TRIM.....J-3 REAR LAMP.....F-8 SWEEPING LINK.....I-8
--

FIG.13

C - 2

15

FIG.13 (C-2) AIR CLEANER

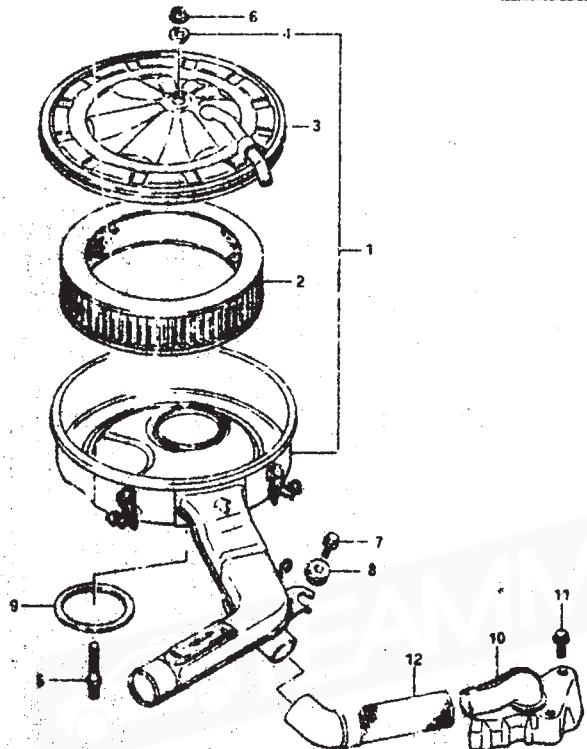

Q'TY

REF.NO.	PART NO.	DESCRIPTION	REMARKS
1	13700-84300	CLEANER ASSY, air	1
2	13780-78100	.FILTER, air cleaner	1
3	13770-84000	.CAP	1
4	13878-73100	.GROMMET	1
5	09108-02036	STD BOLT	1
6	08316-16063	NUT	1
7	01517-06163	BOLT	1
8	08920-06013	CUSHION	1
9	13879-81020	GASKET, air cleaner	1
10	13870-84300	COVER, exhaust manifold	1
11	01537-06103	BOLT	3
12	13840-84300	HOSE, varo air	1

5540T E34

AIR CLEANER.....	C-2	DRIVESHAFT.....	B-6	GEAR SHIFT CONTROL.....	E-5	OIL PUMP AND OIL PAN (AT).....	D-14	RADIATOR HOSE.....	C-10
AT ASSY (AT).....	D-8	CYLINDER BLOCK.....	B-4	GEAR SHIFT FORK (MT).....	E-6	RADIATOR.....	C-8	WATER PUMP.....	C-7
AT GASKET SET (AT).....	D-9	CYLINDER HEAD.....	B-5	INTAKE MANIFOLD.....	E-11	SELECTOR LEVER (AT).....	E-3		
BEARING SHIM (AT).....	D-15	DIFFERENTIAL, GEAR.....	E-2	LABEL.....	C-1	TIMING BELT.....	B-10		
CAM SHIFT VALVE.....	D-9	DISCHARGE CONTROL.....	C-11	MUFFLER.....	D-4	TRANSMISSION (AT).....	D-11		
CHASSIS.....	D-16	DRIVEN GASKET SET (D-2)	D-17	OIL HOSE (AT).....	D-19	TRANSMISSION (MT).....	D-5		
CLUTCH PLATE.....	D-2	DRIVEN SHELL (AT).....	D-6	OIL PIPE.....	D-20	TRANSMISSION CASE (AT).....	D-10		
COOLING SYSTEM.....	D-1	DRIVEN SHELL (MT).....	D-7	OIL PUMP.....	C-4	TRANSMISSION CASE (MT).....	D-9		
COUPING.....	D-1	FUEL TUBE.....	C-5	OIL FILTER.....	C-4				

FIG. 14

C - 3

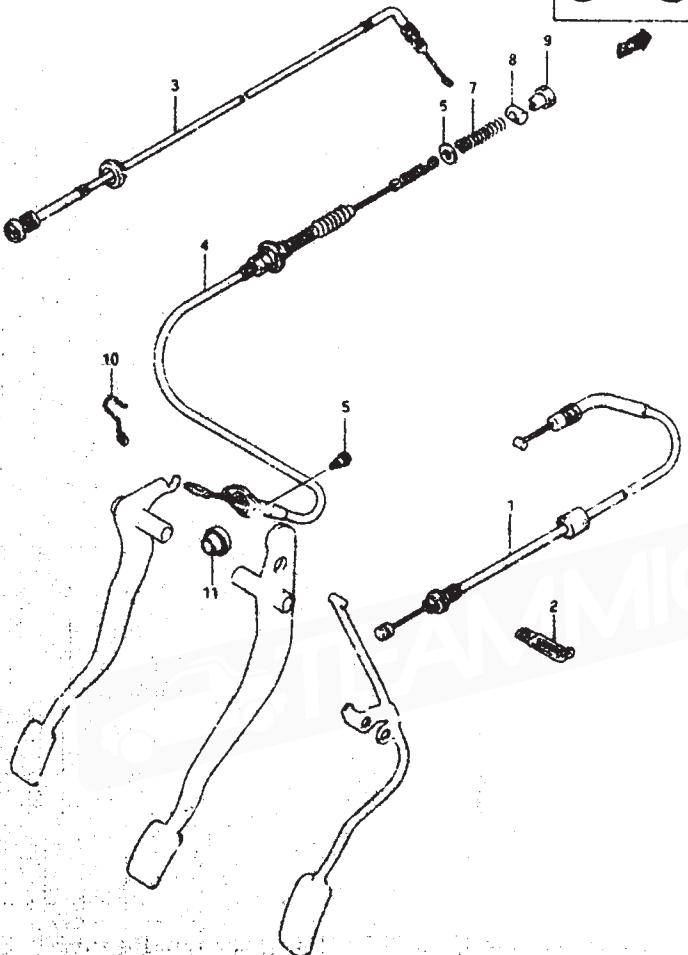


FIG.14 (C- 3) CONTROL CABLE


REF.NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15910-78401	CABLE ASSY, accel	1	
2	09404-06413	CLAMP	1	
3	15930-78361	CABLE ASSY, choke	1	
4	23710-78112	CABLE ASSY, clutch	1	MT
5	09119-06051	BOLT	2	MT
6	08322-21063	WASHER	1	MT
7	09440-08025	SPRING	1	MT
8	09209-13007	PIN	1	MT
9	09150-06010	NUT	1	MT
10	23915-78000	CLAMP, clutch cable	1	MT
11	09250-20002	CAP, clutch cable hole	1	AT

SERIAL E2A

SERIAL E2A

AIR CLEANER	C-2	GEAR SHIFT	E-8	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE-C-10
AT ARM (AT)	D-6	CYLINDER BLOCK	D-4	GEAR SHIFT FORK (MT)	D-6	RADIATOR	C-8	WATER PUMP-C-47
AT CLUTCH SET (AT)	D-9	CYLINDER HEAD	D-3	INTAKE MANIFOLD	D-11	SELECTOR LEVER (AT)	E-5	
AT FUEL NOZZLE (AT)	D-13	DIFFERENTIAL GEAR	E-2	LABEL	C-13	THROTTLE BELT	D-99	
BEARING AND VALVE	D-8	DRIVE CONTROL	C-11	MUFFLER	D-4	TRANSMISSION (AT)	D-11	
COOLANT	D-12	DRIVE CYLINDER	D-2	THI ROD (AT)	D-15	TRANSMISSION (MT)	D-3	
COOLING SYSTEM	D-3	DRIVE CYLINDER	D-4	OIL PAN	D-5	TRANSMISSION CASE (AT)	D-10	
FUEL PUMP	D-5	OIL PUMP	D-6	OIL PUMP	D-6	TRANSMISSION CASE (MT)	D-9	

FIG.13 (C-4) MUFFLER

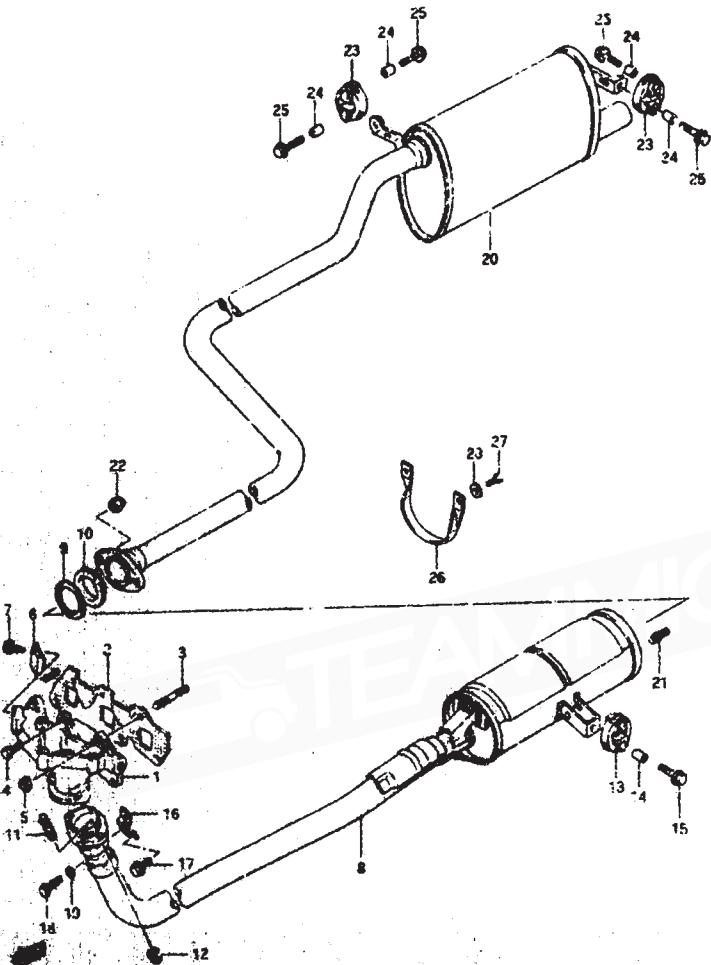

SPART E24

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	14111-78350	MANIFOLD, exhaust	1	
2	14140-78130	GASKET, exhaust manifold	1	
3	08411-08253	STUD BOLT	2	
4	01107-08253	BOLT	4	
5	08310-11083	NUT	2	
6	14172-84091	COVER, gasket	1	
7	01317-06106	BOLT	2	
8	14151-78363	PIPE, exhaust	1	
9	14163-78100	GASKET, exhaust	1	
10	14243-79000	RING, seal	1	
11	08411-10200	STUD BOLT	2	
12	08158-10017	NUT	2	
13	14281-78010	MOUNTING, muffler	2	
14	08180-08057	SPACER (8.2x12.5x23.5)	4	
15	08517-08353	BOLT	4	
16	14288-76301	BRACKET, exhaust center pipe	1	
17	08534-08123	BOLT	2	
18	01107-08303	BOLT	1	
19	08321-31083	LOCK WASHER	1	
20	14300-78153	MUFFLER	1	
21	08108-10042	STUD BOLT	2	
22	08158-10017	NUT	2	
23	14282-78010	MOUNTING, muffler	2	
24	08180-08057	SPACER (8.2x12.5x23.5)	4	
25	08517-08353	BOLT	4	
26	14283-78100	PROTECTOR, muffler	1	
27	08128-06011	Screw (6x12)	2	
28	08160-06028	WASHER (6.3x10x1)	2	


AIR CLEANER	-D-2	CHAINSHAFT	-D-8	GEAR SHIFT CONTROL	-E-3	OIL PUMP AND OIL PAN (AT)	-D-14	WATER HOSE-C-10
AT ASSY (AT)	-D-8	CYLINDER BLOCK	-B-4	GEAR SHIFT FORK (MT)	-D-6	RADIATOR	-C-9	WATER PUMP-C-7
AT GASKET SET (AT)	-D-9	CYL. HEAD	-B-3	INTAKE MANIFOLD	-B-11	SELECTOR LEVER (AT)	-E-9	
BT PAVING DRILLS (AT)	-D-13	DIFFERENTIAL BEAR	-E-2	LABEL	-C-13	TIMING BELT	-B-7B	
OMG. SHIFT AND VALVE	-D-9	TRANSMISSION CONTROL	-C-14	MUFFLER	-D-4	TRANSMISSION (AT)	-D-14	
CARBURATOR	-D-12	TRANSMISSION GASKET SET	-B-2	OIL HOSE (AT)	-D-19	TRANSMISSION (MT)	-D-3	
CLUTCH (MT)	-D-2	ENGINE INTAKE PIPE	-B-6	OIL PAN	-B-5	TRANSMISSION CLUTCH (AT)	-D-40	
CHATTER CABLE	-D-3	FUEL PUMP	-C-5	OIL PIPE	-C-6	TRANSMISSION CASE (MT)	-D-9	

FIG. 16

C - 5

18

FIG. 16 (C-5) FUEL PUMP

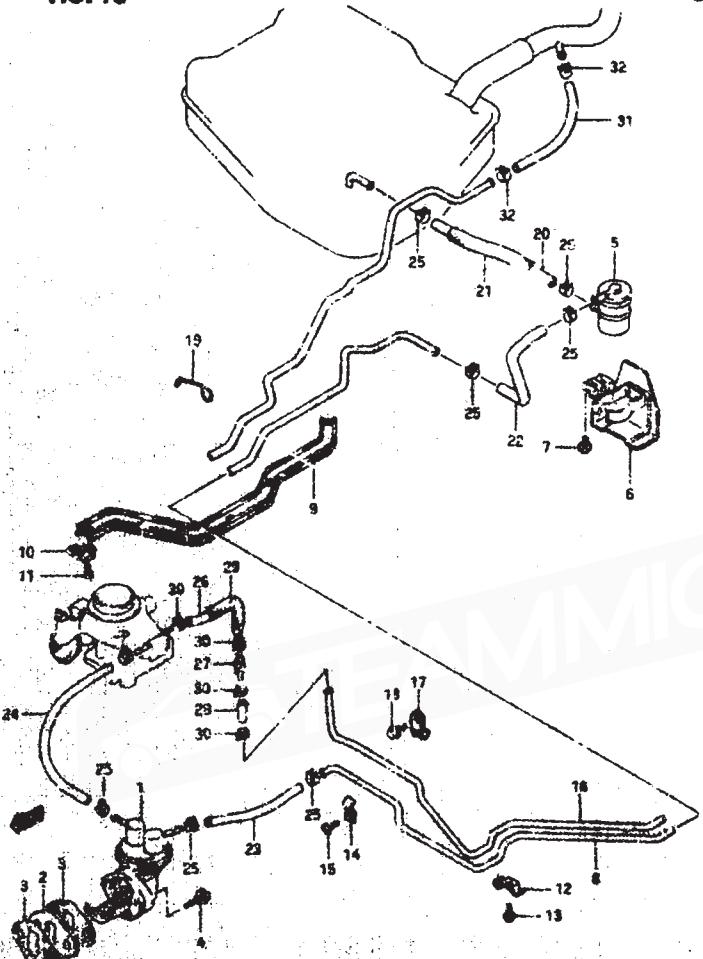

卷之三

REF.NO.	PART NO.	DESCRIPTION	REMARKS
1	15100-73140	PUMP ASSY, fuel	1
2	15318-73000	INSULATOR	1
3	15319-73001	DISKET, fuel pump	2
4	01517-06393	BOLT	2
5	15410-04300	FILTER, fuel	1
6	15420-01011	BRACKET, fuel filter	1
7	01517-06123	BOLT	2
8	15810-81020	PIPE, fuel	1
9	15870-73000	PROTECTOR, fuel pipe	1
10	15819-78101	CLAMP	4
11	01517-06106	BOLT	4
12	15819-78000	CLAMP	1
13	02112-06103	SCREW	4
14	15819-81000	CLAMP, fuel pipe	1
15	02142-06103	SCREW	1
16	15860-78361	PIPE, fuel return	1
17	15860-78100	CLAMP, fuel return pipe	1
18	01517-06106	BOLT	1
19	15861-01002	CLAMP, fuel hose	1
20	09343-0571	HOSE, tank to filter	1
21	09343-13014	PROTECTOR	1
22	15861-01000	HOSE, filter to pipe	1
23	09343-05342	HOSE, pipe to prop	1
24	09343-05177	HOSE, pump to prop	1
25	09408-11408	CLIP	8
26	15862-78300	HOSE, DNS to valve	1
27	15830-28000	VALVE, fuel return check	1
28	09343-04077	HOSE, valve to pipe	1
29	07320-13903	PROJECTOR	1
30	09408-10404	CLIP	4
31	09343-04047	HOSE, pipe to tank	1
32	09408-07401	CLIP	2

L.3400-123

SEARCHED


AM CLUTCH	C-2	CHIMNEY CRAFT	C-3	GEAR SHIFT CNTL	C-3	OIL PUMP AND OIL PAN	(AT)	O-14	WATER TUBE	C-10
AM ABS (AT)	D-8	CYLINDER BLOCK	H-4	GEAR SHIFT PDK	D-6	RADIATOR		C-8	WATER PUMP	C-7
AM ABS/ESP SET LATS	D-9	SPD. METER HEAD	A-3	THROTTLE POSITION	D-11	SELECTOR LEVER (LAT)		E-5		
AM PARKING BRAKE	C-2	DIFFERENTIAL GEAR	C-2	UPPER	C-13	TIMING BELT		H-10		
AM BRAKE PAD WEAR	H-4	DRIVELINE CONTROL	C-1	WHEEL	C-6	TRANSFERS/QU. LADY		H-11		
AM COOLANT	C-2	ENGINE CHAIN	C-6	OIL HOSE (AT)	C-12	TRANSFER/DRIVE UNIT		H-3		
AM COOLANT	C-2	ENGINE COOLER	H-6	OIL PUMP	C-6	WATERCOOLER/CORE	(AT)	D-9		
AM COOLANT	C-2	FRONT SUSP.	C-2	OIL PUMP	C-6	WATERCOOLER/CORE	(LAT)	D-9		

FIG.17 (C-6) OIL PUMP

Q'TY

REMARKS

REF. NO.	PART NO.	DESCRIPTION	Q'TY
1	16100-94810	PUMP ASSY, oil	1
2	16134-92000	GEAR, inner	1
3	16132-78100	GEAR, outer	1
4	16161-78103	PLATE, gear	1
5	02122-04128	SCREW	5
6	16154-78100	VALVE, relief	1
7	16152-78100	SPRING, relief valve	3
8	16153-78100	RETAINER, spring	4
9	08331-41159	CIRCLIP	1
10	16110-730G1	GASKET, oil pump case	1
11	08211-08109	PIN	4
12	01517-06303	BOLT	1
13	01517-06353	BOLT	5
14	01537-06403	BOLT	2

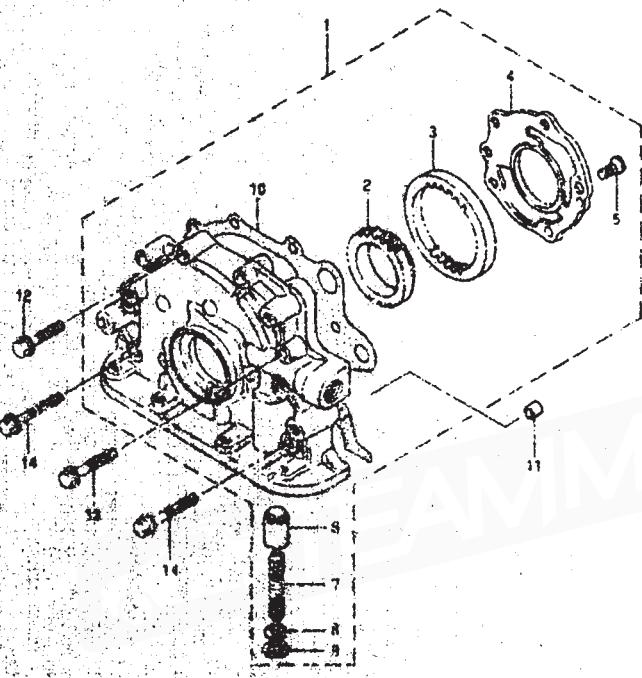

55405 C2R


GEAR SHIFT CONTROL	...-C-3	OIL PUMP AND OIL TANK (AT)	D-14	WIPER MOTOR-C-10
OIL PUMP GEAR	...-D-1	INDICATOR	...-C-8	WIPER MOTOR-C-7
GEAR SHIFT FORK (AT)	...-D-6	SELECTOR LEVER (AT)	...-E-5	
GEAR SHIFT LEVER	...-D-3	SHIFTER BELT	...-D-15	
GEAR SHIFT LEVER (AT)	...-D-1	SHIFTER BELT	...-D-15	
VALVE	...-D-4	THROTTLE BOWL (AT)	...-D-11	
VALVE	...-D-10	THROTTLE BOWL (TC)	...-D-9	
VALVE	...-D-9	THROTTLE BOWL BASE (AT)	...-D-10	
VALVE	...-D-6	THROTTLE BOWL BASE (TC)	...-D-9	

FIG. 13

C-7

20

FIG. 18 (C-7) WATER PUMP

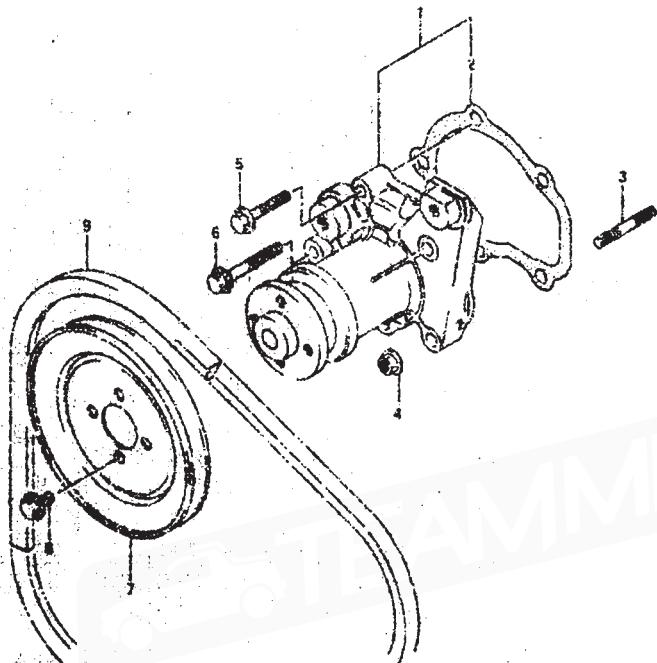

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	17400-70022	PUMP ASSY, WHEEL	1
2	17431-73001	GRABINET, WHEEL PUMP	1
3	09108-06040	STUD BOLT	2
4	08316-16033	NUT	2
5	05517-06030	BOLT	2
6	05537-06403	BOLT	1
7	1751A-70L00	PULLEY, WHEEL PUMP	1
8	05537-06133	BOLT	4
9	17324-70000	BELT, WHEEL PUMP	1

177

REVIEWS

卷之三

卷五

FIG.19

C - 8


21

FIG.19 (C-8) RADIATOR (WT)

Q'TY

REMARKS

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17700-04100	RADIATOR ASY	1	
2	17920-78020	CAP	1	
3	01537-06103	BOLT	2	
4	17911-01001	BRACKET, radiator support	1	
5	01537-06103	BOLT	2	
6	17612-78120	RUBBER, radiator support	1	
7	17680-04000	SWITCH, fan thermo	1	
8	09280-14004	.0 RING	1	
9	17111-04000	FAN, engine cooling	1	
10	08315-26053	NUT	1	
11	17120-04000	MOTOR, cooling fan	1	
12	17760-04000	SHROUD, fan	1	
13	01537-06103	BOLT	2	
14	17931-04100	TANK, water reservoir	1	
15	17932-01001	CAP, water reservoir tank	1	
16	17933-01000	RUBBER, water reservoir tank	1	
17	09343-07011	HOSE, radiator to tank	1	L11130-015
18	09601-11404	CLIP	2	

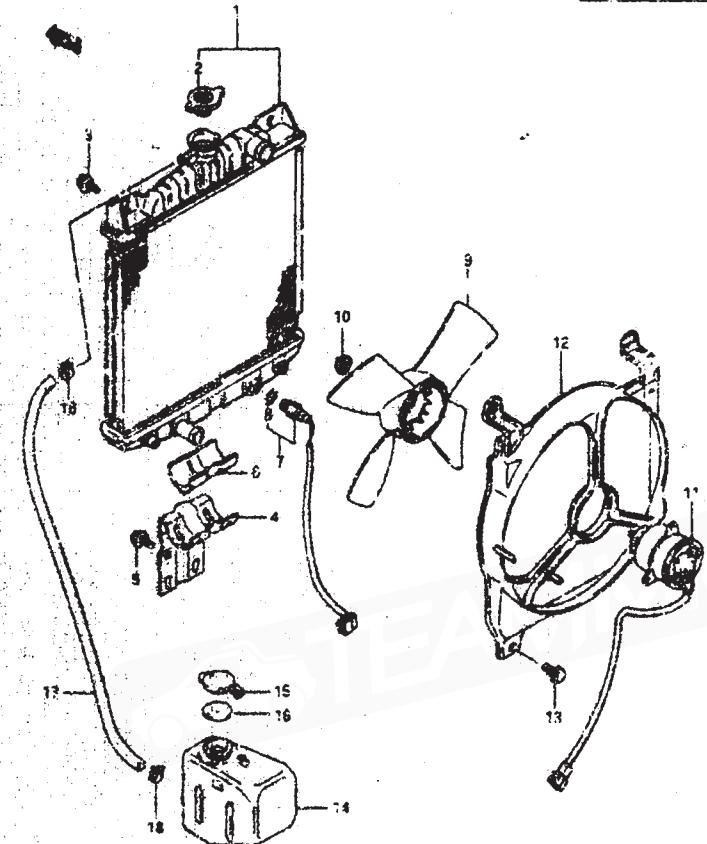

SIGHT E26

SIGHT E26

MAN. CLUTCH	C-8	GEAR SHIFT SHAFT	C-8	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT) D-18	WATER HOSE	C-10
AT ASSY (AT)	D-8	CYLINDER BLOCK	D-8	GEAR SHIFT FORK (WT)	G-6	RADIATOR	C-8	WATER PUMP C-7
AT DIFFERENTIAL ASSY	D-8	CYL. HEAD	D-8	WATER ADAPTER	G-11	SELECTOR LEVER (AT)	E-3	
AT TORQUE CONVERTER	D-7	D-12	D-12	DIFFERENTIAL ASSY (WT)	G-12	THIMB BELT	D-10	
ONE WAY CHECK VALVE	D-6	D-13	D-13	GEAR WHEEL SET	G-7	FRONT BELT (AT)	D-12	
DISCRETION CONTROL	C-11	HUBFLIER	D-4	GEAR WHEEL TAN	D-19	TRANS. BELT (WT)	D-12	
DISCRETION CONTROL	C-11	GEAR WHEEL SET	D-7	GEAR PUMP	D-20	TRANS. BELT (WT)	D-19	
DISCRETION TOWER	D-8	GEAR WHEEL SET (WT)	D-6	GEAR PUMP	D-20	TRANS. BELT (WT)	D-19	
DISCRETION TOWER	D-8	GEAR WHEEL TAN	D-6	GEAR PUMP	D-20	TRANS. BELT (WT)	D-19	


FIG. 20 (C-9) RADIATOR (AT)

Q'TY

REMARKS

REF.NO.	PART NO.	DESCRIPTION	Q'TY
1	17700-84010	RADIATOR ASSY	1
2	17920-74120	CAP	1
3	01537-06103	BOLT	2
4	17810-81010	BRACKET, radiator support	1
5	01537-06103	BOLT	2
6	17812-74120	R, radiator support	1
7	17880-84000	SWITCH, fan thermo	1
8	09200-14004	.9 REW	1
9	17111-84010	FAN, engine cooling	1
10	08316-26003	NUT	1
11	17120-84010	MOTOR, cooling fan	1
12	17760-84010	SPOD, fan	1
13	01537-06103	BOLT	4
14	17931-81001	TANK, water reservoir	1
15	17932-10001	CAP, water reservoir tank	1
16	1793-81000	RUBBER, water reservoir tank	1
17	09343-07011	HOSE, radiator to tank	1
18	JB401-11404	O.D'	2

L:1130-415

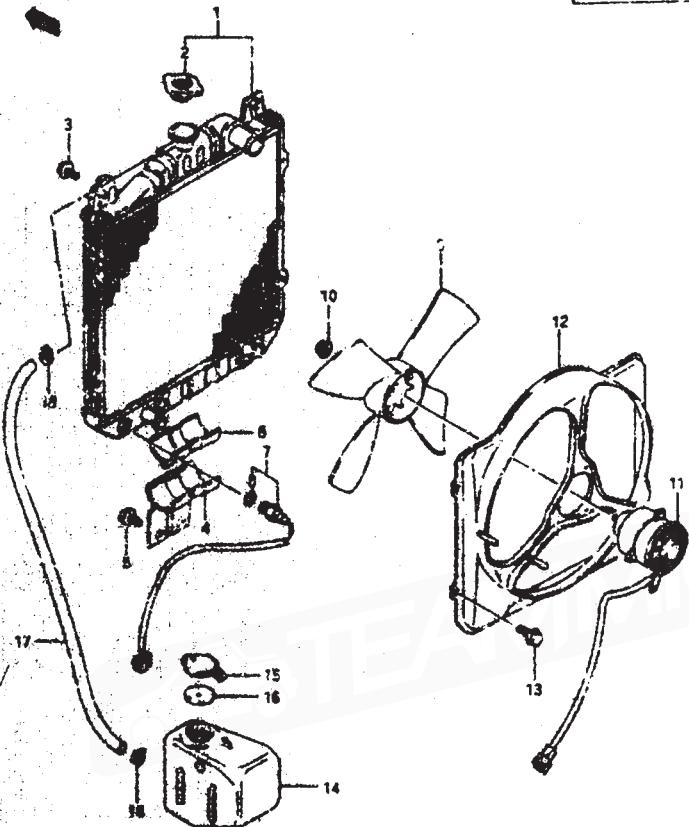


SHEET 24

SHEET 234

AT ASSEMBLY	C-4	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-10	WATER HOSE-C-10
CYLINDER BLOCK	C-4	GEAR SHIFT FORK (AT)	D-4	RADIATOR	C-8	WATER PUMP-C-
CYLINDER HEAD	C-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-3	
DIFFERENTIAL GEAR	C-2	LABEL	C-13	THROTTLE BELT	D-10	
DRIVE BELT AND TENSION	C-1	MUFFLER	C-4	TRANSMISSION (AT)	D-11	
GEARSHIFT	C-1	OIL HOSE (AT)	D-13	TRANSMISSION (MT)	D-9	
GEARSHIFT	C-1	OIL PAN	D-9	TRANS. CASE (AT)	D-10	
GEARSHIFT	C-1	OIL PUMP	D-5	TRANS. CASE (MT)	D-9	

FIG.21 (C-10) WATER HOSE

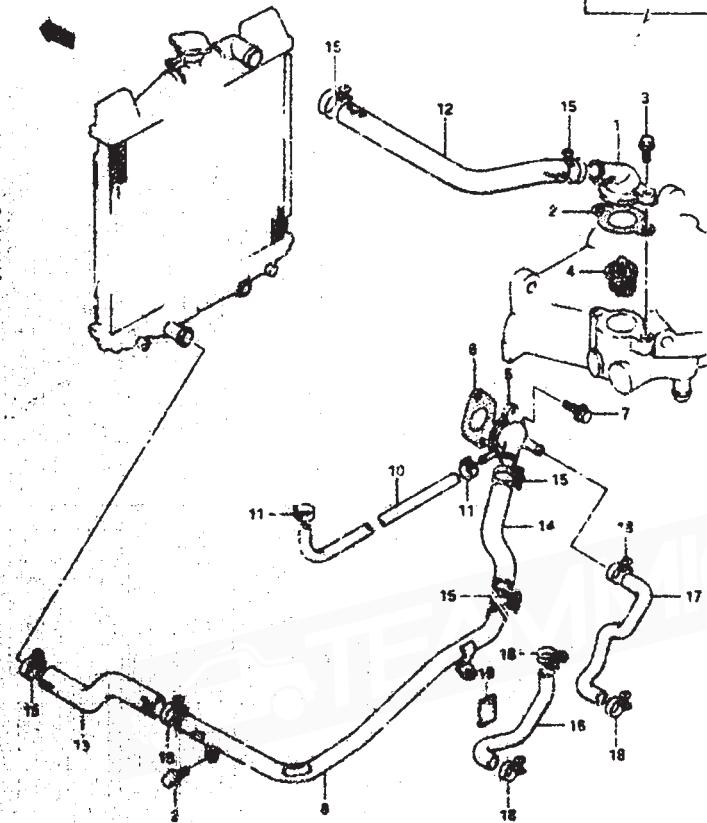

PART NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17942-78100	CUP, water thermostat	1	
2	17949-78101	GASKET, water thermostat cap	1	
3	01517-06253	UOLT	2	
4	17670-82000	THERMOSTAT, water	1	
5	17551-78101	CUP, water inlet	1	
6	17959-73000	GASKET, water inlet pipe	1	
7	01517-06200	UOLT	2	
8-1	17840-78100	PIPE, radiator outlet	1	NT
8-2	17840-78110	PIPE, radiator outlet	1	AT
9	01537-06103	BOLT	1	
10	09343-070311	HOSE, water bypass	1	L11J30-180
11	09401-11404	CLIP	2	
12	17852-78120	HOSE, radiator inlet	1	
13-1	17854-78101	HOSE, radiator outlet	1	NT
13-2	17854-78113	HOSE, radiator outlet	1	AT
14-1	17855-78100	HOSE, water inlet	1	NT
14-2	17855-78110	HOSE, water inlet	1	AT
15	09400-34311	CLIP	6	
16	17871-78401	HOSE, heater inlet	1	
17	17772-78107	HOSE, heater outlet	1	
18	29400-22512	CLAMP	4	
19	17821-72100	PROTECTOR	1	

55007-620

55007-620


AIR CLEANER	C-2	GRASHAFT	B-3	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE-C-10	C-8
AT MAST CAP	D-4	CYL. WAKER BLOCK	B-4	REAR SHIFT FORK (AT)	D-5	RADIATOR		WATER PUMP-C-7	
AT GASKET SET (AT)	D-5	CYLINDER HEAD	B-5	TRANS. MINEFOLD	D-5	SELECTOR LEVER (AT)	E-5		
AT THERM. SWITCH CAP	D-6	DISCHARGE MINEFOLD	D-6						
AT THERM. SW. VALVE	D-7	DISCHARGE MINEFOLD	D-7						
COOLER	D-8	DISCHARGE MINEFOLD	D-8						
COOLER	D-9	DISCHARGE MINEFOLD	D-9						
COOLER	D-10	DISCHARGE MINEFOLD	D-10						
COOLER	D-11	DISCHARGE MINEFOLD	D-11						
COOLER	D-12	DISCHARGE MINEFOLD	D-12						
COOLER	D-13	DISCHARGE MINEFOLD	D-13						
COOLER	D-14	DISCHARGE MINEFOLD	D-14						
COOLER	D-15	DISCHARGE MINEFOLD	D-15						
COOLER	D-16	DISCHARGE MINEFOLD	D-16						
COOLER	D-17	DISCHARGE MINEFOLD	D-17						
COOLER	D-18	DISCHARGE MINEFOLD	D-18						
COOLER	D-19	DISCHARGE MINEFOLD	D-19						
COOLER	D-20	DISCHARGE MINEFOLD	D-20						
COOLER	D-21	DISCHARGE MINEFOLD	D-21						
COOLER	D-22	DISCHARGE MINEFOLD	D-22						
COOLER	D-23	DISCHARGE MINEFOLD	D-23						
COOLER	D-24	DISCHARGE MINEFOLD	D-24						
COOLER	D-25	DISCHARGE MINEFOLD	D-25						
COOLER	D-26	DISCHARGE MINEFOLD	D-26						
COOLER	D-27	DISCHARGE MINEFOLD	D-27						
COOLER	D-28	DISCHARGE MINEFOLD	D-28						
COOLER	D-29	DISCHARGE MINEFOLD	D-29						
COOLER	D-30	DISCHARGE MINEFOLD	D-30						
COOLER	D-31	DISCHARGE MINEFOLD	D-31						
COOLER	D-32	DISCHARGE MINEFOLD	D-32						
COOLER	D-33	DISCHARGE MINEFOLD	D-33						
COOLER	D-34	DISCHARGE MINEFOLD	D-34						
COOLER	D-35	DISCHARGE MINEFOLD	D-35						
COOLER	D-36	DISCHARGE MINEFOLD	D-36						
COOLER	D-37	DISCHARGE MINEFOLD	D-37						
COOLER	D-38	DISCHARGE MINEFOLD	D-38						
COOLER	D-39	DISCHARGE MINEFOLD	D-39						
COOLER	D-40	DISCHARGE MINEFOLD	D-40						
COOLER	D-41	DISCHARGE MINEFOLD	D-41						
COOLER	D-42	DISCHARGE MINEFOLD	D-42						
COOLER	D-43	DISCHARGE MINEFOLD	D-43						
COOLER	D-44	DISCHARGE MINEFOLD	D-44						
COOLER	D-45	DISCHARGE MINEFOLD	D-45						
COOLER	D-46	DISCHARGE MINEFOLD	D-46						
COOLER	D-47	DISCHARGE MINEFOLD	D-47						
COOLER	D-48	DISCHARGE MINEFOLD	D-48						
COOLER	D-49	DISCHARGE MINEFOLD	D-49						
COOLER	D-50	DISCHARGE MINEFOLD	D-50						
COOLER	D-51	DISCHARGE MINEFOLD	D-51						
COOLER	D-52	DISCHARGE MINEFOLD	D-52						
COOLER	D-53	DISCHARGE MINEFOLD	D-53						
COOLER	D-54	DISCHARGE MINEFOLD	D-54						
COOLER	D-55	DISCHARGE MINEFOLD	D-55						
COOLER	D-56	DISCHARGE MINEFOLD	D-56						
COOLER	D-57	DISCHARGE MINEFOLD	D-57						
COOLER	D-58	DISCHARGE MINEFOLD	D-58						
COOLER	D-59	DISCHARGE MINEFOLD	D-59						
COOLER	D-60	DISCHARGE MINEFOLD	D-60						
COOLER	D-61	DISCHARGE MINEFOLD	D-61						
COOLER	D-62	DISCHARGE MINEFOLD	D-62						
COOLER	D-63	DISCHARGE MINEFOLD	D-63						
COOLER	D-64	DISCHARGE MINEFOLD	D-64						
COOLER	D-65	DISCHARGE MINEFOLD	D-65						
COOLER	D-66	DISCHARGE MINEFOLD	D-66						
COOLER	D-67	DISCHARGE MINEFOLD	D-67						
COOLER	D-68	DISCHARGE MINEFOLD	D-68						
COOLER	D-69	DISCHARGE MINEFOLD	D-69						
COOLER	D-70	DISCHARGE MINEFOLD	D-70						
COOLER	D-71	DISCHARGE MINEFOLD	D-71						
COOLER	D-72	DISCHARGE MINEFOLD	D-72						
COOLER	D-73	DISCHARGE MINEFOLD	D-73						
COOLER	D-74	DISCHARGE MINEFOLD	D-74						
COOLER	D-75	DISCHARGE MINEFOLD	D-75						
COOLER	D-76	DISCHARGE MINEFOLD	D-76						
COOLER	D-77	DISCHARGE MINEFOLD	D-77						
COOLER	D-78	DISCHARGE MINEFOLD	D-78						
COOLER	D-79	DISCHARGE MINEFOLD	D-79						
COOLER	D-80	DISCHARGE MINEFOLD	D-80						
COOLER	D-81	DISCHARGE MINEFOLD	D-81						
COOLER	D-82	DISCHARGE MINEFOLD	D-82						
COOLER	D-83	DISCHARGE MINEFOLD	D-83						
COOLER	D-84	DISCHARGE MINEFOLD	D-84						
COOLER	D-85	DISCHARGE MINEFOLD	D-85						
COOLER	D-86	DISCHARGE MINEFOLD	D-86						
COOLER	D-87	DISCHARGE MINEFOLD	D-87						
COOLER	D-88	DISCHARGE MINEFOLD	D-88						
COOLER	D-89	DISCHARGE MINEFOLD	D-89						
COOLER	D-90	DISCHARGE MINEFOLD	D-90						
COOLER	D-91	DISCHARGE MINEFOLD	D-91						
COOLER	D-92	DISCHARGE MINEFOLD	D-92						
COOLER	D-93	DISCHARGE MINEFOLD	D-93						
COOLER	D-94	DISCHARGE MINEFOLD	D-94						
COOLER	D-95	DISCHARGE MINEFOLD	D-95						
COOLER	D-96	DISCHARGE MINEFOLD	D-96						
COOLER	D-97	DISCHARGE MINEFOLD	D-97						
COOLER	D-98	DISCHARGE MINEFOLD	D-98						
COOLER	D-99	DISCHARGE MINEFOLD	D-99						
COOLER	D-100	DISCHARGE MINEFOLD	D-100						
COOLER	D-101	DISCHARGE MINEFOLD	D-101						
COOLER	D-102	DISCHARGE MINEFOLD	D-102						
COOLER	D-103	DISCHARGE MINEFOLD	D-103						
COOLER	D-104	DISCHARGE MINEFOLD	D-104						
COOLER	D-105	DISCHARGE MINEFOLD	D-105						
COOLER	D-106	DISCHARGE MINEFOLD	D-106						
COOLER	D-107	DISCHARGE MINEFOLD	D-107						
COOLER	D-108	DISCHARGE MINEFOLD	D-108						
COOLER	D-109	DISCHARGE MINEFOLD	D-109						
COOLER	D-110	DISCHARGE MINEFOLD	D-110						
COOLER	D-111	DISCHARGE MINEFOLD	D-111						
COOLER	D-112	DISCHARGE MINEFOLD	D-112						
COOLER	D-113	DISCHARGE MINEFOLD	D-113						
COOLER	D-114	DISCHARGE MINEFOLD	D-114						
COOLER	D-115	DISCHARGE MINEFOLD	D-115						
COOLER	D-116	DISCHARGE MINEFOLD	D-116						
COOLER	D-117	DISCHARGE MINEFOLD	D-117						
COOLER	D-118	DISCHARGE MINEFOLD	D-118						
COOLER	D-119	DISCHARGE MINEFOLD	D-119						
COOLER	D-120	DISCHARGE MINEFOLD	D-120						
COOLER	D-121	DISCHARGE MINEFOLD	D-121						
COOLER	D-122	DISCHARGE MINEFOLD	D-122						
COOLER	D-123	DISCHARGE MINEFOLD	D-123						
COOLER	D-124	DISCHARGE MINEFOLD	D-124						
COOLER	D-125	DISCHARGE MINEFOLD	D-125						
COOLER	D-126	DISCHARGE MINEFOLD	D-126						
COOLER	D-127	DISCHARGE MINEFOLD	D-127						
COOLER	D-128	DISCHARGE MINEFOLD	D-128						
COOLER	D-129	DISCHARGE MINEFOLD	D-129						
COOLER	D-130	DISCHARGE MINEFOLD	D-130						
COOLER	D-131	DISCHARGE MINEFOLD	D-131						
COOLER	D-132	DISCHARGE MINEFOLD	D-132						
COOLER	D-133	DISCHARGE MINEFOLD	D-133						
COOLER	D-134	DISCHARGE MINEFOLD	D-134						
COOLER	D-135	DISCHARGE MINEFOLD	D-135						
COOLER	D-136	DISCHARGE MINEFOLD	D-136						
COOLER	D-137	DISCHARGE MINEFOLD	D-137						
COOLER	D-138	DISCHARGE MINEFOLD	D-138						
COOLER	D-139	DISCHARGE MINEFOLD	D-139						
COOLER	D-140	DISCHARGE MINEFOLD	D-140						
COOLER	D-141	DISCHARGE MINEFOLD	D-141						
COOLER	D-142	DISCHARGE MINEFOLD	D-142						
COOLER	D-143	DISCHARGE MINEFOLD	D-143						
COOLER	D-144	DISCHARGE MINEFOLD	D-144						
COOLER	D-145	DISCHARGE MINEFOLD	D-145						
COOLER	D-146	DISCHARGE MINEFOLD	D-146						
COOLER	D-147	DISCHARGE MINEFOLD	D-147						
COOLER	D-148	DISCHARGE MINEFOLD	D-148						
COOLER	D-149	DISCHARGE MINEFOLD	D-149						
COOLER	D-150	DISCHARGE MINEFOLD	D-150						
COOLER	D-151	DISCHARGE MINEFOLD	D-151						
COOLER	D-152	DISCHARGE MINEFOLD	D-152						
COOLER	D-153	DISCHARGE MINEFOLD	D-153						
COOLER	D-154	DISCHARGE MINEFOLD	D-154						
COOLER	D-155	DISCHARGE MINEFOLD	D-155						
COOLER	D-156	DISCHARGE MINEFOLD	D-156						
COOLER	D-157	DISCHARGE MINEFOLD	D-157						
COOLER	D-158	DISCHARGE MINEFOLD	D-158						
COOLER	D-159	DISCHARGE MINEFOLD	D-159						
COOLER	D-160	DISCHARGE MINEFOLD	D-160						
COOLER	D-161	DISCHARGE MINEFOLD	D-161						
COOLER	D-162</								

FIG. 22

C - 11

1

FIG. 22 (C-11) EMISSION CONTROL (MT)

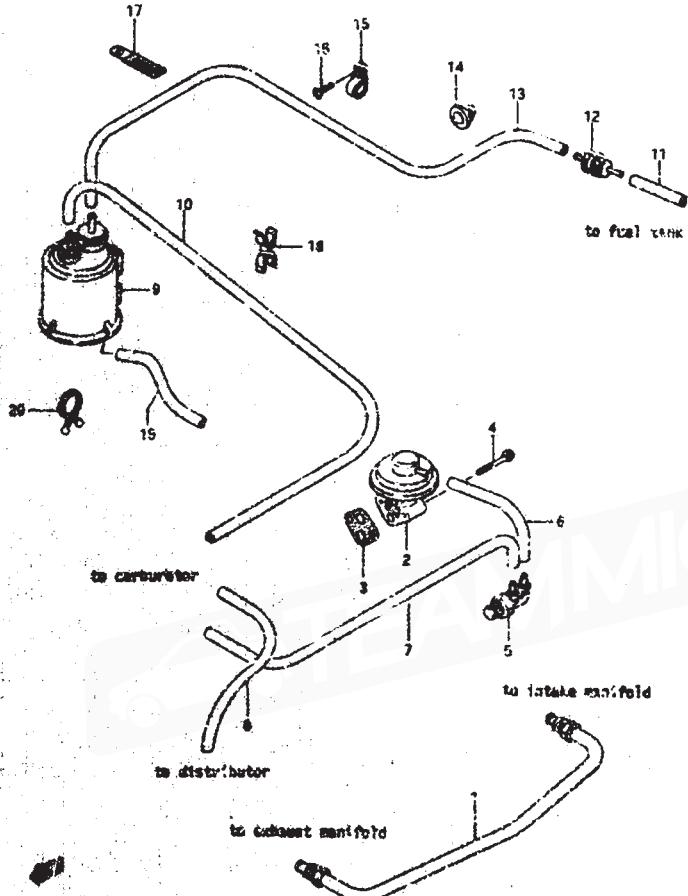

REF.NO.	PART NO.	DESCRIPTION	REMARKS
1	18530-84000	PIPE, EGR	1
2	19111-81100	VALVE, EGR	1
3	18529-78101	ORISKET, EGR valve	1
4	01537-06453	BOLT	2
5	18530-78101	VALVE ASSY, BVS	1
6	09343-03079	HOSE, vacuum (931,L:100)	1
7	09343-03086	HOSE, vacuum (931,L:170)	1
8	09343-05100	HOSE, vacuum (971,L:220)	1
9	18530-78400	CANISTER	1
10	09343-07064	HOSE, canister to CARB	1 L:600
11	09343-05276	HOLE, tank to valve	1 L:600
12	05491-73100	VALVE, 2 way check	1
13	09343-05290	OSE, valve to canister	1 L:600
14	03-28-73001	GRABINET	1
15	07-12-14402	CLAMP	2
16	03141-06123	SCREW	2
17	09408-06413	CLAMP	1
18	09408-70056	CLAMP	1
19	09343-07144	HOSE, air induction	1
20	09408-00021	CLAMP	1

卷之三

SWEET F 30

1. AIR CHAMBERS	1-1	2. DRAINSIDE	1-1	3. GEAR SHIFT CONTROL	2-1	4. OIL PUMP AND OIL PAN (AT)	2-18	5. WHEEL NOSE	C-10
61. ACCLY (AT)	1-2	62. CYLINDER BLOCK	2-4	63. GEAR SHIFT ROD (MT)	C-6	64. PADDOCK STAND	2-1	65. SADDLE PLATE	C-7
67. CRANKSET (AT)	2-2	72. CYLINDER HEAD	2-5	73. INTAKE MANIFOLD	C-11	74. PARKING BRAKE	2-1	75. SWING ARM	C-8
78. ENGINE COOLANT TANK	2-3	79. EXHAUST MANIFOLD	2-7	80. LADLE	C-12	81. TIREING BELT	2-18	82. TIRE	C-9
83. ENGINE COOLANT THERMOSTAT	2-4	84. FLOOR SHIFT LEVER	2-1	85. MOTOR	C-13	86. TRANSMISSION (AT)	2-11	87. TRANSMISSION (MT)	C-12
88. ENGINE COOLANT THERMOSTAT	2-5	89. FRONT SUSPENSION	2-2	90. OIL PAN (AT)	C-14	91. WEIGHTS FOR GEAR	C-15	92. WEIGHTS FOR GEAR	C-16
93. ENGINE COOLANT THERMOSTAT	2-6	94. FRONT SUSPENSION	2-3	95. REAR SUSPENSION	C-15	96. WEIGHTS FOR GEAR	C-17	97. WEIGHTS FOR GEAR	C-18

FIG.23

C - 12

23

FIG.23 (C-12) EMISSION CONTROL (AT)


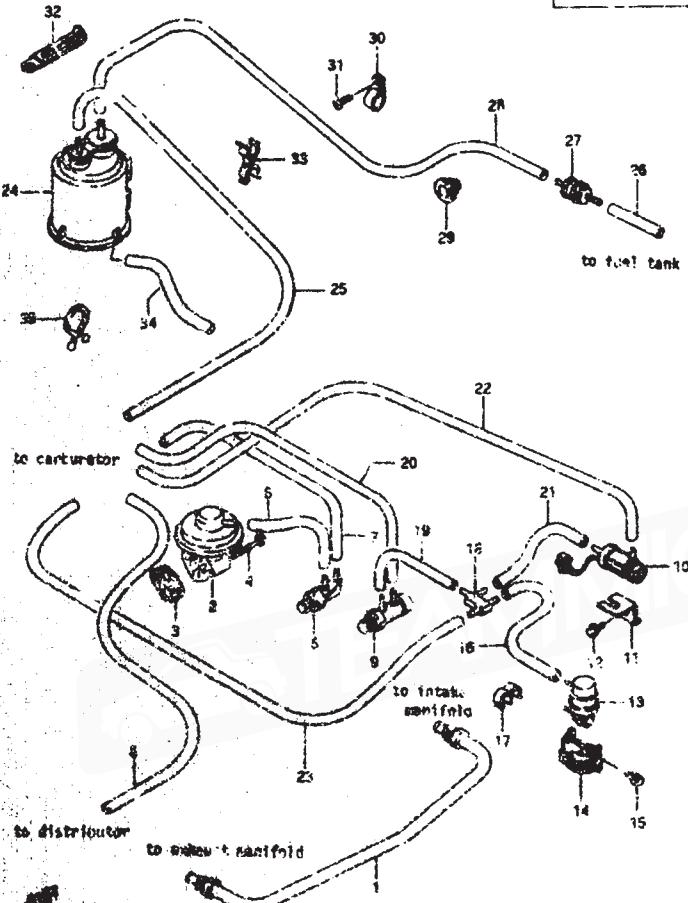


FIG.24

C - 13

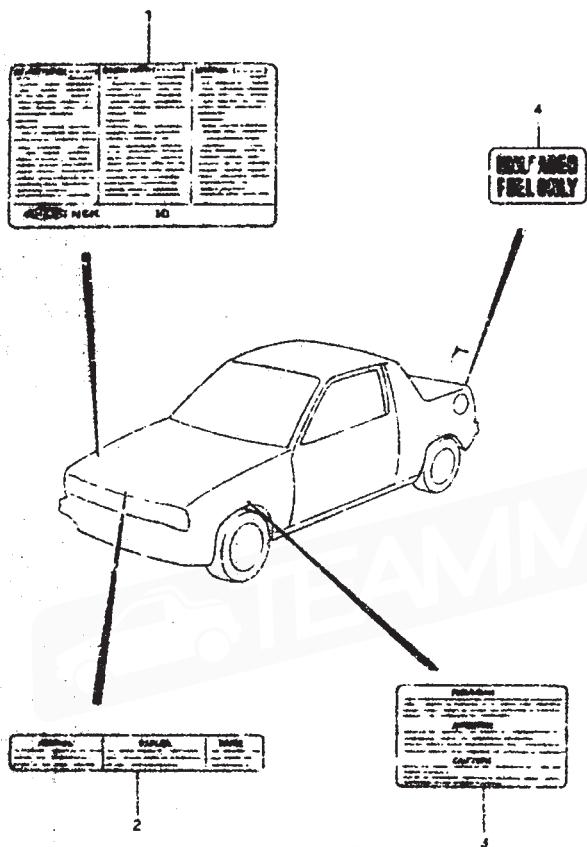

5491 E24


SS401 E24

AIR CLEANER.....	C-2	CHRONOMETER.....	B-8	GEAR SHIFT CONTROL.....	E-3	OIL PUMP AND OIL PAN (AT).....	D-16	WATER HOSE-C-12
AT ASSEMBLY (AT).....	D-9	CYLINDER BLOCK.....	H-4	GEAR SHIFT FORK (MT).....	D-6	RADIATOR.....	C-8	WATER PUMP-C-7
AT SLIDING SET (AT).....	D-12	CYLINDER HEAD.....	B-3	INTAKE MANIFOLD.....	B-11	SELECTOR LEVER (AT).....	E-9	
AT PARKING BRAKE (AT).....	C-13	DIFFERENTIAL BEARING.....	B-7	LABEL.....	C-13	TIMING BELT.....	B-10	
CAT SHAFT AND VALVE.....	D-49	LOSSION CLUTCHING.....	C-1	MOTOR.....	C-4	TRANSMISSION (AT).....	D-11	
CHARACTERISTIC.....	D-17	LOSSION CLUTCHING SET.....	D-2	OIL HOSE (AT).....	D-2	TRANSMISSION (MT).....	D-5	
CHIMMER (AT).....	D-2	DRIVINE CLUTCHING.....	D-6	OIL PAN.....	B-3	TRANSMISSION CASE (AT).....	D-10	
LEADWIRE CABLE.....	C-27	FUEL TANK.....	D-8	OIL PUMP.....	D-6	TRANSMISSION CASE (MT).....	D-9	

FIG.24 (C-13) LABEL

REF.NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J19G2-63000	LABEL, information	1	
2	17951-75101	LABEL, engine cooling fan	1	
3	17955-80010	LABEL, cooling water caution	1	
4	H6932-73060	LABEL, fuel limitation	1	


PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.						
31191-79010	F-2	33261-73010	F-5	35601-81020	F-8	38101-81000	F-14	41757-78010	G-2	48119-79000-281	G-7
31220-84010	F-2	33261-73011	F-5	35602-81020	F-8	38102-81000	F-14	41741-78001	G-2	48121-79000-281	G-7
31221-78310	F-2	33268-72010	F-5	35603-81010	F-9	38274-81000	F-14	41209-78041	G-3	48123-75-00-281	G-7
31254-79010	F-2	33310-73010	F-5	35604-81010	F-9	38310-81010	F-14	42111-78040	G-2	48*24-79000	G-7
31255-78210	F-2	33321-72110	F-5	35612-81010	F-8	38319-75000	F-14	42250-78261	G-3	48126-79000	G-7
31264-78310	F-2	33324-79610	F-5	35630-81010	F-9	38372-81010	F-14	42310-78010	G-2	48127-79000	G-7
31266-78221	F-2	33341-76410	F-5	35651-81000	F-9	3840-66112	F-15	42431-78020	G-2	48152-79000	G-7
31281-79010	F-2	33361-84010	F-5	35653-81000	F-9	38450-75001	F-15	42441-78001	G-2	48210-81100	G-7
31311-79620	F-2	33351-84000	F-13	35658-81000	F-9	38480-81000	F-15	42451-78040	G-2	48220-81130	G-8
31312-79010	F-2	33353-81000	F-13	35670-81010	F-9	38490-81000	F-15	43110-75150	G-4	48291-81000	G-8
31313-79010	F-2	33610-71520	F-6	35671-81000	F-9	38491-81000	F-15	43130-75150	G-4	48310-78361	G-7
31320-79620	F-2	33613-78000	F-6	35910-80001	F-9	38496-58110	F-15	43210-82040-18J	G-4	48381-51040	G-7
31331-78310	F-2	33640-78000	F-6	36210-78012	F-8	38500-78010	F-12	43221-78130	G-4	48411-81130-281	G-7
31372-79010	F-2	33700-81070	F-5	36212-78001	F-8	38610-78304	F-12	43222-78130	G-4	48419-75000	G-7
31400-83510	F-3	33710-78170	F-5	36441-78040	F-8	38810-78102	F-12	43223-78130	G-4	48421-81000-2E1	G-7
31394-89510	F-3	33730-81070	F-5	36412-78040	F-8	38837-79500	F-15	43224-78130	G-4	48451-78000	G-8
31376-82610	F-3	33740-81070	F-5	36413-78041	F-8	39100-81120	F-13	43225-78130	G-4	48511-78002	G-8
31517-82310	F-3	33750-81070	F-5	36410-78040	F-8	39191-81000	F-13	43226-78130	G-4	48521-78001	G-8
31380-82510	F-3	33810-84000	F-6	36493-81030	E-5	39250-78300	F-13	43227-78130	G-4	48525-78001	G-8
31382-82610	F-3	33850-78052	F-6	36610-81170	F-10	39312-81000	F-11	43231-78130	G-4	48528-78200	G-9
31383-82610	F-3	33850-81000	F-6	36610-81180	F-10	39400-83810	F-12	43232-78130	G-4	48531-78002	G-8
31388-82610	F-3	33868-82000	F-5	36620-81071	F-10	39471-73001	F-12	43233-78130	G-4	48534-78000	G-8
31387-82610	F-3	33868-81010	F-5	36630-81021	F-10	39500-78130	F-12	43234-78130	G-4	48535-52000	G-8
31411-82510	F-3	33882-81071	F-5	36630-81071	F-10	39535-78130	F-12	43235-78130	G-4	48536-58000	G-8
31412-82610	F-3	34101-8113C	F-7	36660-81000	F-10	39536-78130	F-12	43236-78130	G-4	48540-78000	G-8
32613-82610	F-3	34100-81140	F-7	36650-81020	F-10	43237-78130	G-4	48551-78000	G-8		
31614-82510	F-3	34111-79060	F-7	36717-80021	F-10	43238-78130	G-4	48561-78000	G-8		
31645-82610	F-3	34112-79010	F-7	36740-80000	F-6	43239-78130	G-4	48562-78000	G-8		
31618-82610	F-3	34120-81130	F-7	36791-81000	F-10	43241-79000	G-6	48570-78001	G-8		
31621-82510	F-3	34120-81140	F-7	36810-78100	F-11	43250-78200	G-4	48810-78000	G-9		
31622-82610	F-3	34151-79000	F-7	36820-66000	F-11	41111-78220	G-2	43421-78/02	G-5	48819-52000	G-9
31681-82610	F-3	34152-79000	F-7	36840-82010	F-11	41211-78000	G-2	43511-78002	G-6	48830-78001	G-9
31623-82110	F-3	34173-64010	F-7	36919-84000	F-10	41231-78001	G-2	44101-78013	G-5	48841-78000	G-9
31656-82610	F-3	34320-78000	F-7	36930-82000	F-10	41310-79222	G-3	44102-78013	G-5	49410-78101	G-10
31710-82610	F-3	34620-79021	F-7	37131-78020	F-12	41311-78020	G-3	44115-78012	G-5	49411-78010	G-11
31775-82110	F-3	34810-81011	J-10	37110-82000	F-13	41411-78000	G-3	44116-78012	G-5	49471-73000	G-10
31392-82610	F-3	34825-87020	J-10	37145-79010	F-13	41430-78000	G-3	44117-78513	G-5	49480-78001	G-11
32600-82510	F-3	34830-84000	B-11	37408-84221	F-12	41440-78000	G-3	44118-78012	G-5	49510-78121	G-11
33900-78310	F-3	36910-78002	F-7	37610-78007	D-5	41461-78001	G-3	44119-78513	G-5	49511-78140	G-10
33182-75110	F-3	38121-81010	F-8	37728-78101	E-4	41462-78000	G-3	45111-78401	G-2	49521-78120	G-11
33440-74610	F-5	38121-81010	F-8	37740-66010	F-12	41463-82000	G-3	45151-78401	G-2	49610-78000	G-10
33451-52011	F-3	35934-31010	F-8	37820-82001	F-4	1609-78410	G-2	45200-78002	3-2	49611-78220	G-11
33210-73010	F-3	35937-81010	F-8	37870-81000	C-12	41681-58010	G-3	45723-82000	G-2	49710-81000	G-10
33210-76310	F-3	35937-67020	F-8	37940-79000	F-12	41710-78052	G-2	46510-84002	G-6	49710-81100	G-11
33278-75610	F-3	35934-47020	F-8	37980-78100	F-12	41712-78070	G-2	48100-79000-281	6-7	49720-75001	G-10

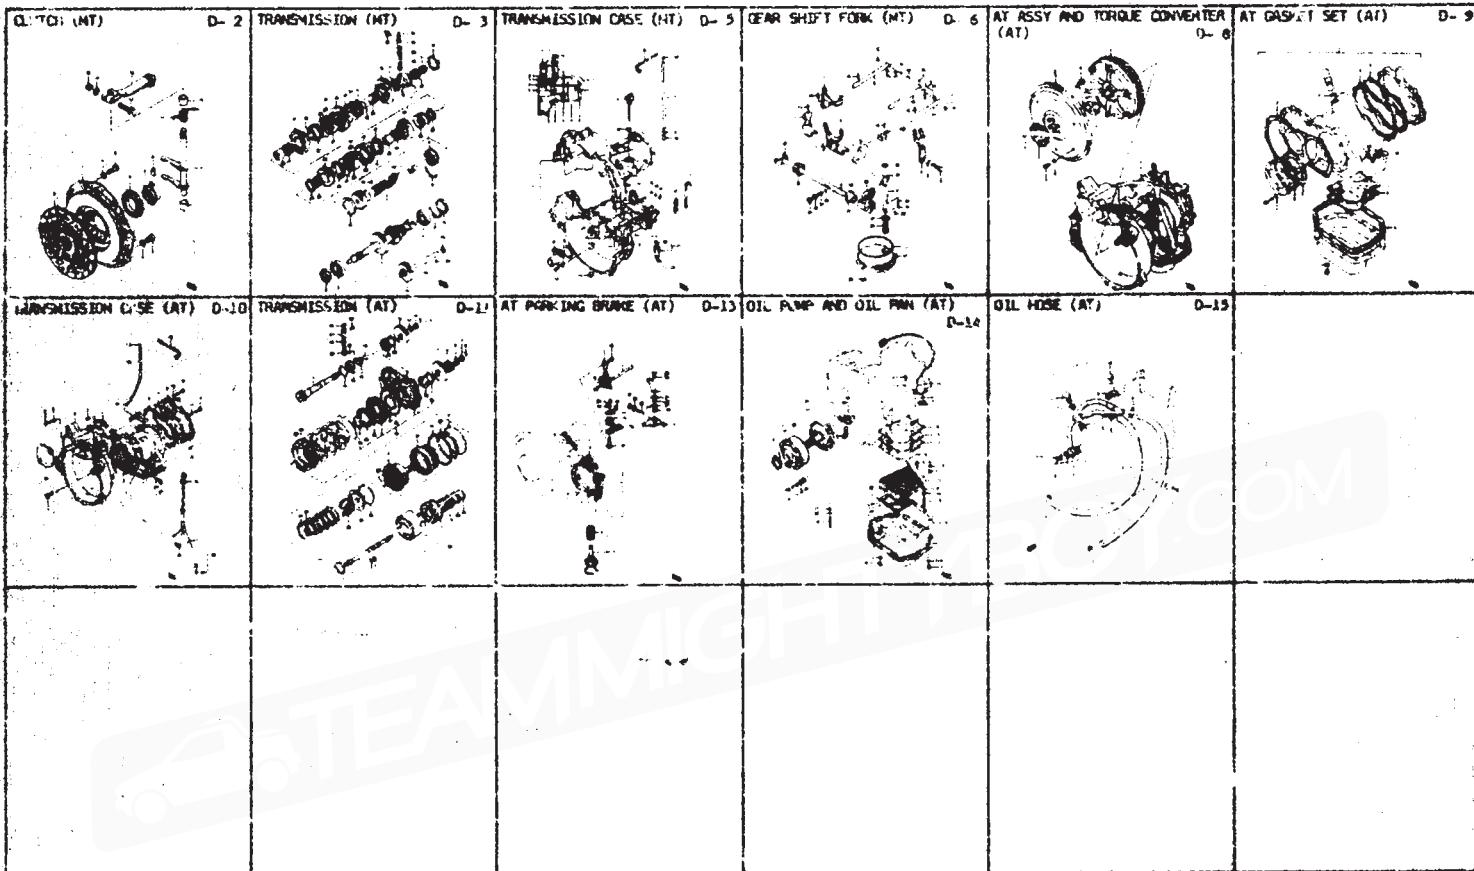

AIR CLEANER.....	D-2 CRANKSHAFT.....	D-8 CLEAR SHIFT CONTROL.....	C-3 OIL PUMP AND OIL PAN (AT).....	D-14 WATER HOSE.....	C-10 WATER PUMP.....	C-7
AT ASSY (AT).....	D-8 CYLINDER BLOCK.....	B-11 GEAR SHIFT FORK (MT).....	D-6 RADIATOR.....	C-8	WATER PUMP.....	C-7
AT GASKET SET (AT).....	D-9 CYLINDER HEAD.....	B-11 INTAKE MANIFOLD.....	B-11 SELECTOR LEVER (AT).....	E-5		
AT PARKING BRAKE (AT).....	D-15 DIFFERENTIAL GEAR.....	E-2 LABEL.....	C-13 TIMING BELT.....	B-10		
CAM SHAFT AND VALVE.....	B-9 EMISSION CONTROL.....	C-11 MUFFLER.....	C-4 TRANSMISSION (AT).....	D-11		
CARBURETOR.....	B-12 ENGINE GASKET SET.....	D-2 OIL HOSE (AT).....	D-12 TRANSMISSION (AT).....	T-3		
CLUTCH (MT).....	D-2 ENGINE MOUNTING.....	B-5 OIL PAN.....	C-5 TRANSMISSION CASE (AT).....	D-10		
CONTROL CALIBRE.....	C-3 FUEL PUMP.....	C-5 OIL PUMP.....	C-7 TRANSMISSION CASE (MT).....	D-5		

BATTERY.....	F-6 FRONT BODY PANEL.....	I-2 FRONT SEAT.....	J-12 LOCK SET AND RADIO.....	F-15 REAR SUSPENSION.....	G-3 STEERING WHEEL.....	G-7
Brake Master Cylinder.....	H-2 FRONT BUMPER.....	I-8 FRONT SUSPENSION.....	G-2 PARKING BRAKE.....	H-6 REAR WHEEL BRAKE.....	H-5 STRIKE TAPE AND MUD FLAP J-4	J-4
Brake Pipe.....	H-3 FRONT DOOR GLASS.....	I-8 FRONT WHEEL BRAKE.....	H-4 PEDAL.....	G-16 ROAD WHEEL AND TIRE.....	F-12 SWITCH.....	F-12
CAR HEATER.....	I-13 FRONT DOOR LOCK.....	J-9 FRONT WINDOW.....	J-6 REAR AXLE.....	G-6 SEAT BELT.....	J-13 VENTILATOR.....	I-12
DECK RAIL PIPE.....	J-5 FRONT DOOR PANEL.....	J-7 FUEL TANK.....	J-10 REAR BODY PANEL.....	I-6 SIDE BODY PANEL.....	I-7 WASHER.....	F-15
DISTRIBUTOR.....	F-5 FRONT FENDER.....	I-5 GENERATOR.....	F-3 REAR BUMPER.....	I-9 SPEEDOMETER.....	F-7 WIPER.....	F-19
FLOOR MAT.....	J-2 FRONT HOOD PANEL.....	I-5 INSTRUMENT PANEL.....	I-11 REAR GATE LOCK.....	I-10 STARTING MOTOR.....	F-2 WIRING HARNESS.....	F-10
FRONT AXLE.....	G-5 FRONT LAMP.....	F-8 INTERIOR TRIM.....	J-3 REAR LAMP.....	F-5 STEERING LINK.....	G-8	

FIG. 25 (D-2) CLUTCH (MT)

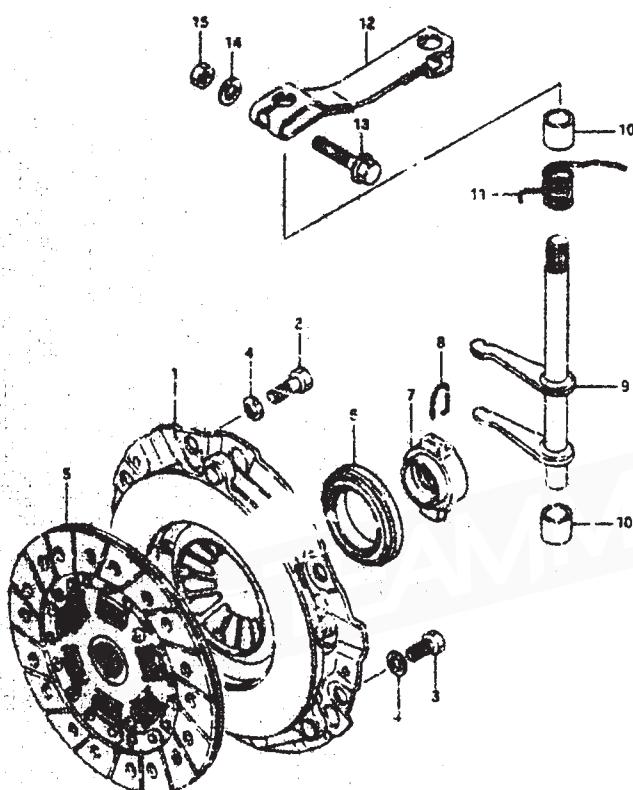

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22100-78014	COVER ASSY, clutch	1	
2	08111-08035	BOLT	2	
3	01107-38163	BOLT	4	
4	08521-21083	LOCK WASHER	6	
5	22400-84016	DISC, clutch	1	
6	08269-32003	BEARING, release	1	
7	23161-98021	RETAINER, release bearing	1	
8	08448-12002	SPRING	2	
9	23040-78002	SHAFT, clutch release	1	
10	08100-12011	BUSH	2	
11	08448-16003	SPRING	1	
12	23266-78400	ARM, clutch balance	1	
13	01317-08363	BOLT	1	
14	08322-11083	WASHER	1	
15	08310-11083	NUT	1	

SINOT E24

SINOT E24

AIR CLEANER	C-2	DRAIN SHAFT	B-5	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE-C-10
AT ASY (AT)	D-4	CYLINDER BLOCK	B-4	GEAR SHIFT FORK (MT)	D-6	RADIATOR	C-9	WATER PUMP-C-7
AT BASKET SET (AT)	B-8	CYLINDER HEAD	B-3	HITANE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-3	
AT PARKING BRAKE (AT)	B-13	DIFFERENTIAL GEAR	B-2	LABEL	C-13	TIMING BELT	D-16	
CLUTCH AND SHIFTER	B-9	DRIVE IN GEAR	B-11	NEPPIER	D-4	TRANSMISSION (AT)	D-11	
CLUTCH KIT	D-12	SPRING CARRIER SET	B-2	OIL HOSE (AT)	D-15	TRANSMISSION (MT)	D-3	
CONTROL DRIVE	D-3	SPRING RETAINER	B-6	OIL PAN	D-15	TRANSMISSION CASE (AT)	D-16	
					D-6	TRANSMISSION CASE (MT)	D-10	

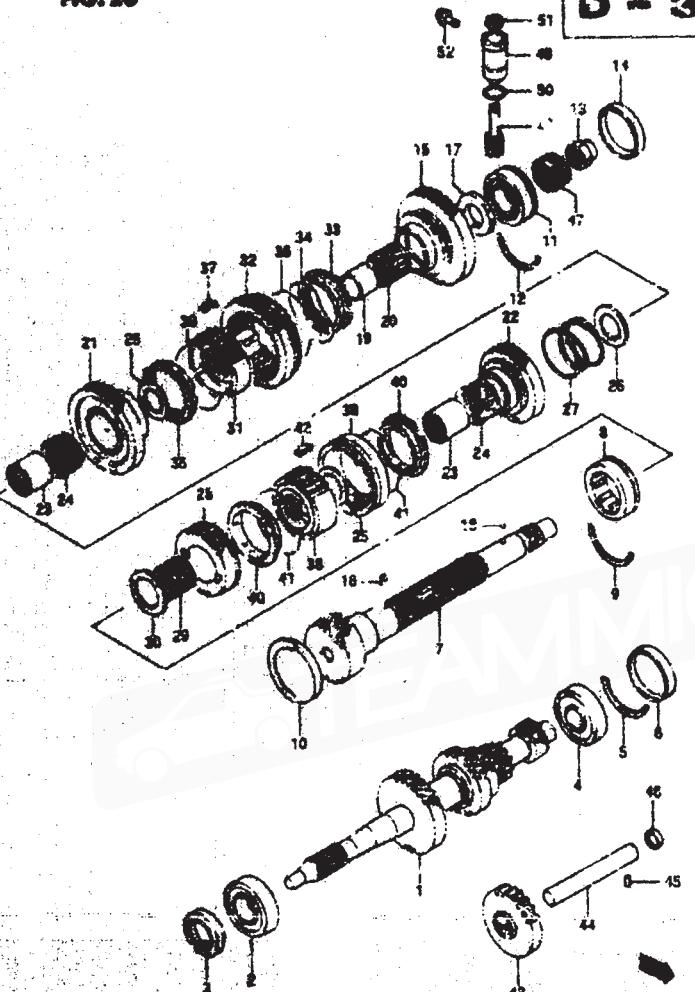


FIG. 26 (D-3) TRANSMISSION (MT)

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	24110-84160	SHAFT, 1/4"UC	1 NT:12/11/18/24/30
2	08133-63047	BUSHING, RH	1
3	08133-20084	SEAL, OIL	1
4	08133-63047	BEARING, LH	1
5	08130-47006	C RING	1
6	08241-47002	PUL., LH bearing	1
7	24110-84160	SHAFT, counter	1 NT:12
8	08163-30010	BUSHING, RH	1
9	08130-50012	C RING	1
10	08241-40022	PUL., RH bearing	1
11	08133-63040	BUSHING, LH	1
12	08130-50013	C RING	1
13	08130-18004	NUT	1
14	08241-54012	PUL., LH bearing	1
15	24111-04700	GEAR, counter shaft 157	1 NT:12
16	08161-08009	ROLLER	1
17	08164-20000	WASHER	1
18	08111-08003	BALL	1
19	08100-20124	SPACER	1
20	08263-23007	BEARING	1
21	24311-84300	GEAR, counter shaft 240	1 NT:30
22	24311-78180	LEHR, counter shaft 310	1 NT:30
23	08110-24009	SPACER	2
24	08263-30007	BEARING	2
25	08167-74002	WASHER	2
26	08167-24004	WASHER	1
27	08467-48001	SPRING	1
28	24311-78180	GEAR, counter shaft 410	1 NT:23
29	08263-25003	BEARING	1
30	08110-25000	WASHER	1


卷之三

SECRET 634

AM CLEANSER	C-2	CYLINDER HEAD	B-8	DEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE-C-10
AT BAG SET	D-9	CYLINDER BLOCK	B-4	DEAR SHIFT PORK (MT)	D-6	RADIATOR	C-6	WATER PUMP-C-7
AT CYLINDER SET 2AT	D-9	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-2	
AT. PARKING BRAKE (MT)	D-11	DIFFERENTIAL GEAR	E-3	LINEL	C-13	TIMING BELT	B-16	
AT. TURBOCHARGE (MT)	D-9	DR. BELT	C-11	MUFFLER	C-4	TRANSMISSION (AT)	D-11	
AT. TURBOCHARGE (MT)	D-11	DRIVE CYLINDER SET	E-2	G.W. HOSE (AT)	B-15	TRANSMISSION (MT)	D-3	
AT. TURBOCHARGE (MT)	D-11	DRIVE CYLINDER SET	E-2	G.W. HOSE (MT)	B-15	TRANSMISSION CASE (AT)	D-10	
AT. TURBOCHARGE (MT)	D-11	FUEL PUMP	C-5	OIL PUMP	C-2	TRANSMISSION CASE (MT)	D-3	
AT. TURBOCHARGE (MT)	D-11	FUEL PUMP	C-5	OIL PUMP	C-2	TRANSMISSION CASE (MT)	D-3	

FIG. 26

D - 4

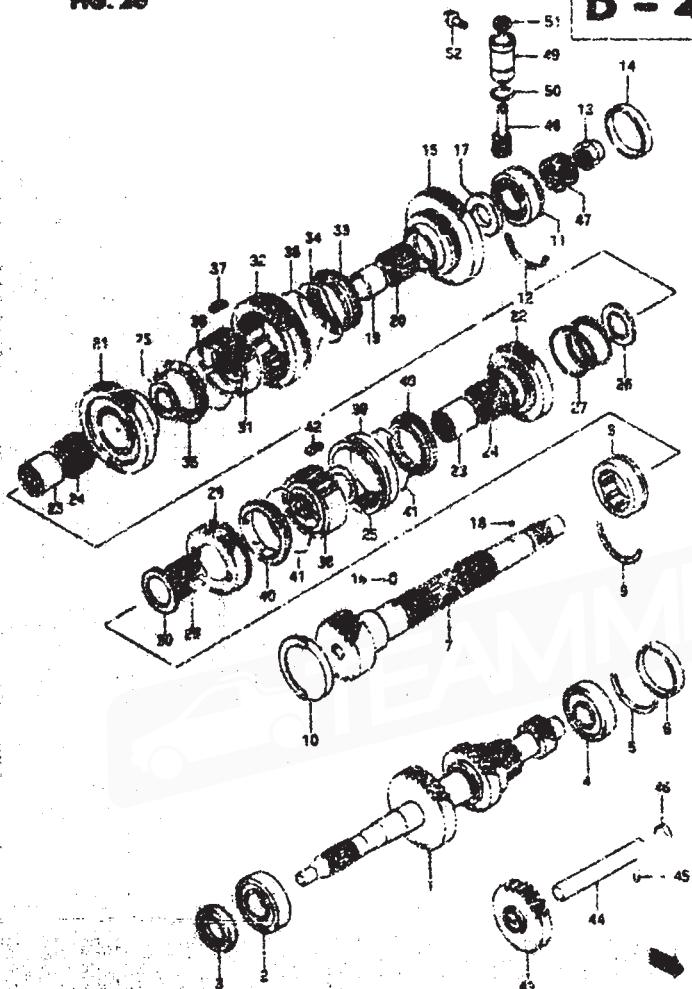

38

FIG. 26 (D-4) TRANSMISSION (MT)

M/T


REF. NO.	PART NO.	DESCRIPTION	ITEM
31	24411-84300	HUB, low speed synchronizer	1
32	24421-84301	SLEEVE, low speed synchronizer	1
33	24431-82140	RING, low gear	1
34	24436-84300	SPRING, low	1
35	24451-82040	RING, 2nd gear	1
36	09308-00018	SPRING	2
37	09422-05011	KEY	3
38	24412-70001	HUB, high speed synchronizer	1
39	24422-85001	SLEEVE, high speed ring	1
40	24431-74024	RING, high speed	2
41	09308-00007	SPRING	2
42	09422-05011	KEY	3
43	24506-84300	GEAR, forward 1st gear	1
44	24501-74001	SHIFT, reverse gear	1
45	09202-00018	PIN	1
46	09201-14021	LUG	1
47	26121-70000	GEAR, synchronizer drive	1
48	26131-70142	GEAR, synchronizer driven	1
49	29431-70400	GEAR, synchronizer gear	1
50	09200-17001	O RING	1
51	09202-08001	SEAL, oil	1
52	09120-02032	SOCKET	1

SIGHT 624

AIR CLEANER	C-2	CRANKSHAFT	B-8	GEAR SHIFT CONTROL	E-5	GEAR, SHIFT CONTROL	D-14	WATER HOSE-C-10
AT ABSY (AT)	C-1	CYLINDER BLOCK	B-4	GEAR, SHIFT FWD (AT)	D-6	MAGNATOR	C-8	WATER HOSE C-7
AT CLUTCH SET (AT)	C-1	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-3	
AT PARKING BRAKE (AT)	D-13	DRIVEN PLATE (AT)	B-1	LAGE	C-13	ENGINE BELT	B-10	
CAM SHAFT AND VALVE	D-10	EMISSION CONTROL	C-1	NUFFLER	C-4	TRANSMISSION HOSE (AT)	D-11	
CHARGE COOLER	B-12	EMISSION GASKET	C-1	OIL PAN	D-13	TRANSMISSION HOSE (MT)	D-3	
CLUTCH CYL	C-2	EMISSION GASKET	C-4	OIL PAN	D-13	TRANSMISSION OIL (AT)	D-10	
COOLANT TUBE	C-1	FWD. PLATE	C-9	OIL PUMP	D-6	TRANSMISSION CASE (AT)	D-14	

FIG. 27 (G-5) TRANSMISSION CASE (NT)

Q'TY

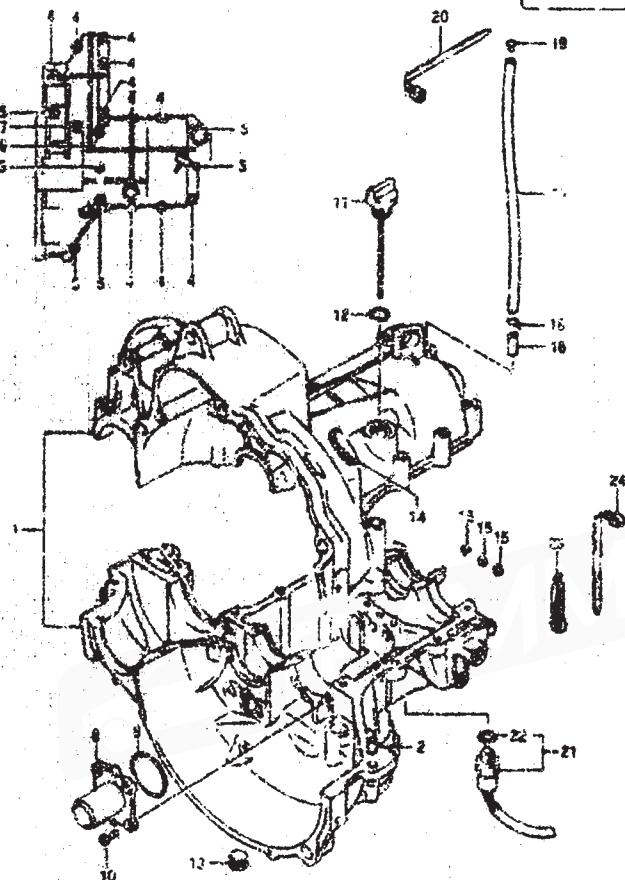

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	24700-24300	CASE ASSY., TRANSMISSION	1	
2	08424-08250	BOLT	2	
3	01337-08402	WASHER	1	
4	08397-08503	WASHER	10	
5	08397-08703	WASHER	5	
6	01337-08903	WASHER	1	
7	08107-15036	WASHER (24-36)	1	
8	24741-73102	RETAINER, INLET WASH.	1	
9	08280-42602	O RING	1	
10	02122-06146	SCREW	4	
11	24830-70000	SPRING, OIL LEVEL	1	
12	05290-15005	O RING	1	
13	08246-16034	PLATE, OIL LEVEL	1	
14	02230-70000	PLATE, Timing hole	1	
15	08061-12001	PLATE, GEAR WASH. SIGHT	3	
16	08341-04002	UNION, DIFFERENTIAL	1	
17	08343-07073	WIRE, HOODSON	1	
18	08402-10303	O. R.P.	1	
19	24830-70000	PLATE, BUSHING & PINS	1	
20	08007-14403	CLAMP	1	
21	17810-70000	SWITCH, BACK UP LAMP	1	
22	02240-41002	O RING	1	
23	08004-06403	CLAMP	1	
24	08007-14403	CLAMP	1	


SAFETY CAR

SAFETY CAR

AIR CLEANER	10-C	CHASSIS	5-B	CLUTCH SHIFT CABLE	6-T	CYL PUMP AND CYL PWR (AT)	6-T	GEAR WIRE-C-10
AT BELT (AT)	10-D	CYLINDER BLOCK	5-C	GEAR SHIFT CABLE (INT)	6-S	INDICATOR	6-S	WATER PUMP-C-7
AT BELT SET (AT)	10-E	CYLINDER HEAD	5-D	WHEEL ANGLE	6-H	SELECTOR LEVER / AT	6-S	
AT BELT SET (AT)	10-F	DIFFERENTIAL GEAR	5-E	LEVEL	6-I	TIMING BELT	6-S	
AT BELT SET (AT)	10-G	DRIVE SHAFT	5-F				6-S	
AT BELT SET (AT)	10-H	MUFFLER	5-G				6-S	
AT BELT SET (AT)	10-I	MAIN GEAR (AT)	5-H				6-S	
AT BELT SET (AT)	10-J	MAIN GEAR	5-I				6-S	
AT BELT SET (AT)	10-K	MAIN GEAR	5-J				6-S	
AT BELT SET (AT)	10-L	MAIN GEAR	5-K				6-S	
AT BELT SET (AT)	10-M	MAIN GEAR	5-L				6-S	
AT BELT SET (AT)	10-N	MAIN GEAR	5-M				6-S	
AT BELT SET (AT)	10-O	MAIN GEAR	5-N				6-S	
AT BELT SET (AT)	10-P	MAIN GEAR	5-O				6-S	
AT BELT SET (AT)	10-Q	MAIN GEAR	5-P				6-S	
AT BELT SET (AT)	10-R	MAIN GEAR	5-Q				6-S	
AT BELT SET (AT)	10-S	MAIN GEAR	5-R				6-S	
AT BELT SET (AT)	10-T	MAIN GEAR	5-S				6-S	
AT BELT SET (AT)	10-U	MAIN GEAR	5-T				6-S	
AT BELT SET (AT)	10-V	MAIN GEAR	5-U				6-S	
AT BELT SET (AT)	10-W	MAIN GEAR	5-V				6-S	
AT BELT SET (AT)	10-X	MAIN GEAR	5-W				6-S	
AT BELT SET (AT)	10-Y	MAIN GEAR	5-X				6-S	
AT BELT SET (AT)	10-Z	MAIN GEAR	5-Y				6-S	
AT BELT SET (AT)	10-A	MAIN GEAR	5-Z				6-S	
AT BELT SET (AT)	10-B	MAIN GEAR	5-A				6-S	
AT BELT SET (AT)	10-C	MAIN GEAR	5-B				6-S	
AT BELT SET (AT)	10-D	MAIN GEAR	5-C				6-S	
AT BELT SET (AT)	10-E	MAIN GEAR	5-D				6-S	
AT BELT SET (AT)	10-F	MAIN GEAR	5-E				6-S	
AT BELT SET (AT)	10-G	MAIN GEAR	5-F				6-S	
AT BELT SET (AT)	10-H	MAIN GEAR	5-G				6-S	
AT BELT SET (AT)	10-I	MAIN GEAR	5-H				6-S	
AT BELT SET (AT)	10-J	MAIN GEAR	5-I				6-S	
AT BELT SET (AT)	10-K	MAIN GEAR	5-J				6-S	
AT BELT SET (AT)	10-L	MAIN GEAR	5-K				6-S	
AT BELT SET (AT)	10-M	MAIN GEAR	5-L				6-S	
AT BELT SET (AT)	10-N	MAIN GEAR	5-M				6-S	
AT BELT SET (AT)	10-O	MAIN GEAR	5-N				6-S	
AT BELT SET (AT)	10-P	MAIN GEAR	5-O				6-S	
AT BELT SET (AT)	10-Q	MAIN GEAR	5-P				6-S	
AT BELT SET (AT)	10-R	MAIN GEAR	5-Q				6-S	
AT BELT SET (AT)	10-S	MAIN GEAR	5-R				6-S	
AT BELT SET (AT)	10-T	MAIN GEAR	5-S				6-S	
AT BELT SET (AT)	10-U	MAIN GEAR	5-T				6-S	
AT BELT SET (AT)	10-V	MAIN GEAR	5-U				6-S	
AT BELT SET (AT)	10-W	MAIN GEAR	5-V				6-S	
AT BELT SET (AT)	10-X	MAIN GEAR	5-W				6-S	
AT BELT SET (AT)	10-Y	MAIN GEAR	5-X				6-S	
AT BELT SET (AT)	10-Z	MAIN GEAR	5-Y				6-S	
AT BELT SET (AT)	10-A	MAIN GEAR	5-Z				6-S	
AT BELT SET (AT)	10-B	MAIN GEAR	5-A				6-S	
AT BELT SET (AT)	10-C	MAIN GEAR	5-B				6-S	
AT BELT SET (AT)	10-D	MAIN GEAR	5-C				6-S	
AT BELT SET (AT)	10-E	MAIN GEAR	5-D				6-S	
AT BELT SET (AT)	10-F	MAIN GEAR	5-E				6-S	
AT BELT SET (AT)	10-G	MAIN GEAR	5-F				6-S	
AT BELT SET (AT)	10-H	MAIN GEAR	5-G				6-S	
AT BELT SET (AT)	10-I	MAIN GEAR	5-H				6-S	
AT BELT SET (AT)	10-J	MAIN GEAR	5-I				6-S	
AT BELT SET (AT)	10-K	MAIN GEAR	5-J				6-S	
AT BELT SET (AT)	10-L	MAIN GEAR	5-K				6-S	
AT BELT SET (AT)	10-M	MAIN GEAR	5-L				6-S	
AT BELT SET (AT)	10-N	MAIN GEAR	5-M				6-S	
AT BELT SET (AT)	10-O	MAIN GEAR	5-N				6-S	
AT BELT SET (AT)	10-P	MAIN GEAR	5-O				6-S	
AT BELT SET (AT)	10-Q	MAIN GEAR	5-P				6-S	
AT BELT SET (AT)	10-R	MAIN GEAR	5-Q				6-S	
AT BELT SET (AT)	10-S	MAIN GEAR	5-R				6-S	
AT BELT SET (AT)	10-T	MAIN GEAR	5-S				6-S	
AT BELT SET (AT)	10-U	MAIN GEAR	5-T				6-S	
AT BELT SET (AT)	10-V	MAIN GEAR	5-U				6-S	
AT BELT SET (AT)	10-W	MAIN GEAR	5-V				6-S	
AT BELT SET (AT)	10-X	MAIN GEAR	5-W				6-S	
AT BELT SET (AT)	10-Y	MAIN GEAR	5-X				6-S	
AT BELT SET (AT)	10-Z	MAIN GEAR	5-Y				6-S	
AT BELT SET (AT)	10-A	MAIN GEAR	5-Z				6-S	
AT BELT SET (AT)	10-B	MAIN GEAR	5-A				6-S	
AT BELT SET (AT)	10-C	MAIN GEAR	5-B				6-S	
AT BELT SET (AT)	10-D	MAIN GEAR	5-C				6-S	
AT BELT SET (AT)	10-E	MAIN GEAR	5-D				6-S	
AT BELT SET (AT)	10-F	MAIN GEAR	5-E				6-S	
AT BELT SET (AT)	10-G	MAIN GEAR	5-F				6-S	
AT BELT SET (AT)	10-H	MAIN GEAR	5-G				6-S	
AT BELT SET (AT)	10-I	MAIN GEAR	5-H				6-S	
AT BELT SET (AT)	10-J	MAIN GEAR	5-I				6-S	
AT BELT SET (AT)	10-K	MAIN GEAR	5-J				6-S	
AT BELT SET (AT)	10-L	MAIN GEAR	5-K				6-S	
AT BELT SET (AT)	10-M	MAIN GEAR	5-L				6-S	
AT BELT SET (AT)	10-N	MAIN GEAR	5-M				6-S	
AT BELT SET (AT)	10-O	MAIN GEAR	5-N				6-S	
AT BELT SET (AT)	10-P	MAIN GEAR	5-O				6-S	
AT BELT SET (AT)	10-Q	MAIN GEAR	5-P				6-S	
AT BELT SET (AT)	10-R	MAIN GEAR	5-Q				6-S	
AT BELT SET (AT)	10-S	MAIN GEAR	5-R				6-S	
AT BELT SET (AT)	10-T	MAIN GEAR	5-S				6-S	
AT BELT SET (AT)	10-U	MAIN GEAR	5-T				6-S	
AT BELT SET (AT)	10-V	MAIN GEAR	5-U				6-S	
AT BELT SET (AT)	10-W	MAIN GEAR	5-V				6-S	
AT BELT SET (AT)	10-X	MAIN GEAR	5-W				6-S	
AT BELT SET (AT)	10-Y	MAIN GEAR	5-X				6-S	
AT BELT SET (AT)	10-Z	MAIN GEAR	5-Y				6-S	
AT BELT SET (AT)	10-A	MAIN GEAR	5-Z				6-S	
AT BELT SET (AT)	10-B	MAIN GEAR	5-A				6-S	
AT BELT SET (AT)	10-C	MAIN GEAR	5-B				6-S	
AT BELT SET (AT)	10-D	MAIN GEAR	5-C				6-S	
AT BELT SET (AT)	10-E	MAIN GEAR	5-D				6-S	
AT BELT SET (AT)	10-F	MAIN GEAR	5-E				6-S	
AT BELT SET (AT)	10-G	MAIN GEAR	5-F				6-S	
AT BELT SET (AT)	10-H	MAIN GEAR	5-G				6-S	
AT BELT SET (AT)	10-I	MAIN GEAR	5-H				6-S	
AT BELT SET (AT)	10-J	MAIN GEAR	5-I				6-S	
AT BELT SET (AT)	10-K	MAIN GEAR	5-J				6-S	
AT BELT SET (AT)	10-L	MAIN GEAR	5-K				6-S	
AT BELT SET (AT)	10-M	MAIN GEAR	5-L				6-S	
AT BELT SET (AT)	10-N	MAIN GEAR	5-M				6-S	
AT BELT SET (AT)	10-O	MAIN GEAR	5-N				6-S	
AT BELT SET (AT)	10-P	MAIN GEAR	5-O				6-S	
AT BELT SET (AT)	10-Q	MAIN GEAR	5-P				6-S	
AT BELT SET (AT)	10-R	MAIN GEAR	5-Q				6-S	
AT BELT SET (AT)	10-S	MAIN GEAR	5-R				6-S	
AT BELT SET (AT)	10-T	MAIN GEAR	5-S				6-S	
AT BELT SET (AT)	10-U	MAIN GEAR	5-T				6-S	
AT BELT SET (AT)	10-V	MAIN GEAR	5-U				6-S	
AT BELT SET (AT)	10-W	MAIN GEAR	5-V				6-S	
AT BELT SET (AT)	10-X	MAIN GEAR	5-W				6-S	
AT BELT SET (AT)	10-Y	MAIN GEAR	5-X				6-S	
AT BELT SET (AT)	10-Z	MAIN GEAR	5-Y				6-S	
AT BELT SET (AT)	10-A	MAIN GEAR	5-Z				6-S	
AT BELT SET (AT)	10-B	MAIN GEAR	5-A				6-S	
AT BELT SET (AT)	10-C	MAIN GEAR	5-B				6-S	
AT BELT SET (AT)	10-D	MAIN GEAR	5-C				6-S	
AT BELT SET (AT)	10-E	MAIN GEAR	5-D				6-S	
AT BELT SET (AT)	10-F	MAIN GEAR	5-E				6-S	
AT BELT SET (AT)	10-G	MAIN GEAR	5-F				6-S	
AT BELT SET (AT)	10-H	MAIN GEAR	5-G				6-S	
AT BELT SET (AT)	10-I	MAIN GEAR	5-H				6-S	
AT BELT SET (AT)	10-J	MAIN GEAR	5-I				6-S	
AT BELT SET (AT)	10-K	MAIN GEAR	5-J				6-S	
AT BELT SET (AT)	10-L	MAIN GEAR	5-K				6-S	
AT BELT SET (AT)	10-M	MAIN GEAR	5-L				6-S	
AT BELT SET (AT)	10-N	MAIN GEAR	5-M				6-S	
AT BELT SET (AT)	10-O	MAIN GEAR	5-N				6-S	
AT BELT SET (AT)	10-P	MAIN GEAR	5-O				6-S	
AT BELT SET (AT)	10-Q	MAIN GEAR	5-P				6-S	
AT BELT SET (AT)	10-R	MAIN GEAR	5-Q				6-S	
AT BELT SET (AT)	10-S	MAIN GEAR	5-R				6-S	
AT BELT SET (AT)	10-T	MAIN GEAR	5-S				6-S	
AT BELT SET (AT)	10-U	MAIN GEAR	5-T				6-S	
AT BELT SET (AT)	10-V	MAIN GEAR	5-U				6-S	
AT BELT SET (AT)	10-W	MAIN GEAR	5-V				6-S	
AT BELT SET (AT)	10-X	MAIN GEAR	5-W				6-S	
AT BELT SET (AT)	10-Y	MAIN GEAR	5-X				6-S	
AT BELT SET (AT)	10-Z	MAIN GEAR	5-Y				6-S	
AT BELT SET (AT)	10-A	MAIN GEAR	5-Z				6-S	
AT BELT SET (AT)	10-B	MAIN GEAR	5-A				6-S	
AT BELT SET (AT)	10-C	MAIN GEAR	5-B				6-S	
AT BELT SET (AT)	10-D	MAIN GEAR	5-C				6-S	
AT BELT SET (AT)	10-E	MAIN GEAR	5-D				6-S	
AT BELT SET (AT)	10-F	MAIN GEAR	5-E				6-S	
AT BELT SET (AT)	10-G	MAIN GEAR	5-F				6-S	
AT BELT SET (AT)	10-H	MAIN GEAR	5-G				6-S	
AT BELT SET (AT)	10-I	MAIN GEAR	5-H				6-S	
AT BELT SET (AT)	10-J	MAIN GEAR	5-I				6-S	
AT BELT SET (AT)	10-K	MAIN GEAR	5-J				6-S	
AT BELT SET (AT)	10-L	MAIN GEAR	5-K				6-S	
AT BELT SET (AT)	10-M	MAIN GEAR	5-L				6-S	
AT BELT SET (AT)	10-N	MAIN GEAR	5-M					

FIG.26 (D-6) GEAR SHIFT FORK (MT)

QTY

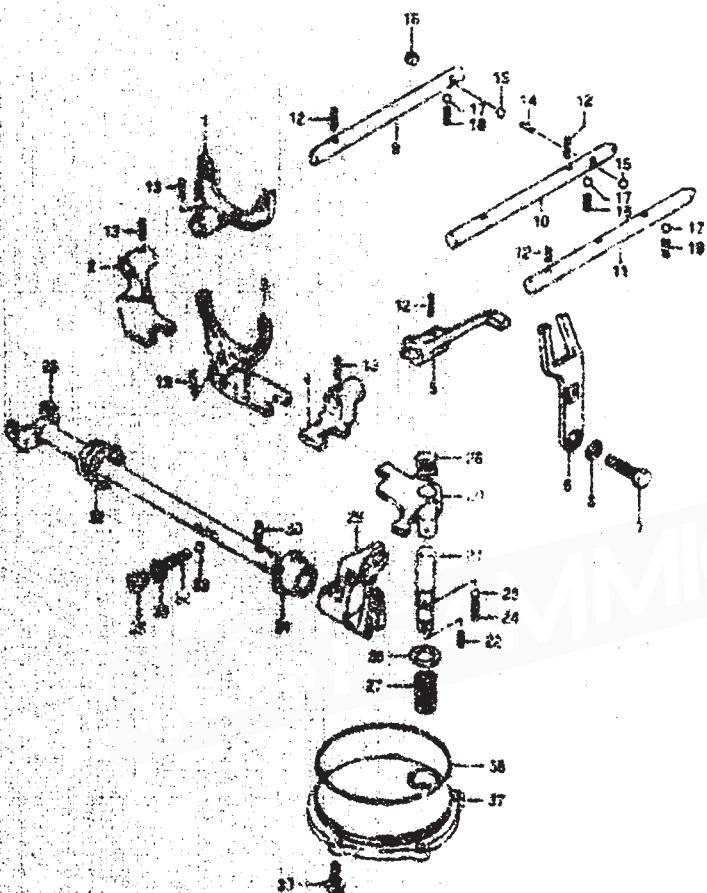

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	25211-04301	FORK, low speed	1	
2	25211-04302	Yoke, low speed	1	
3	25221-78004	FORK, high speed	1	
4	25261-04301	Yoke, reverse gear	1	
5	25251-78003	ARM, reverse gear	1	
6	25460-04300	LEVER, reverse gear shift	1	
7	25211-78000	BOLT	1	
8	09148-18377	WASHER	1	
9	25611-04300	SHAFT, low speed	1	
10	25421-78002	SHAFT, high speed	1	
11	25431-04302	SHAFT, reverse gear	1	
12	09208-04006	PIN	4	
13	09208-04009	PIN	4	
14	25261-03002	BUSHING	1	
15	06112-12604	BALL	1	
16	09208-10802	PLATE	1	
17	06122-10004	BALL	3	
18	10440-07021	SPRING	2	
19	0-140-07003	SPRING	1	
20	25441-78002	ARM, GEAR SHFT	1	
21	25271-78002	SHAFT, GEAR SHFT (MT)	1	
22	08221-02000	PDI	1	
23	06112-10004	BALL	1	
24	09440-07020	SPRING	3	
25	09156-14012	WASHER	1	
26	09440-17020	SPRING	1	
27	09440-17011	SPRING	1	

SAFETY DATA

GEAR SHIFT CONTROL	D-3	OIL TANK AND OIL PUMP (AT)	D-14	WATER PUMP-C-10
GEAR SHIFT FORK (MT)	D-4	WAGNER	D-8	WATER PUMP-C-7
GEAR SHIFT LEVER	D-11	SELECTOR LEVER (AT)	D-9	
GEAR	D-12	THROTTLE ADJUST	D-10	
GEAR	D-13	THROTTLE ADJUST	D-11	
GEAR FORK	D-14	TRANSMISSION (AT)	D-12	
GEAR FORK	D-15	TRANSMISSION (MT)	D-13	
GEAR FORK	D-16	TRANSMISSION CASE (AT)	D-14	
GEAR FORK	D-17	TRANSMISSION CASE (MT)	D-15	

pg. 28

10-7

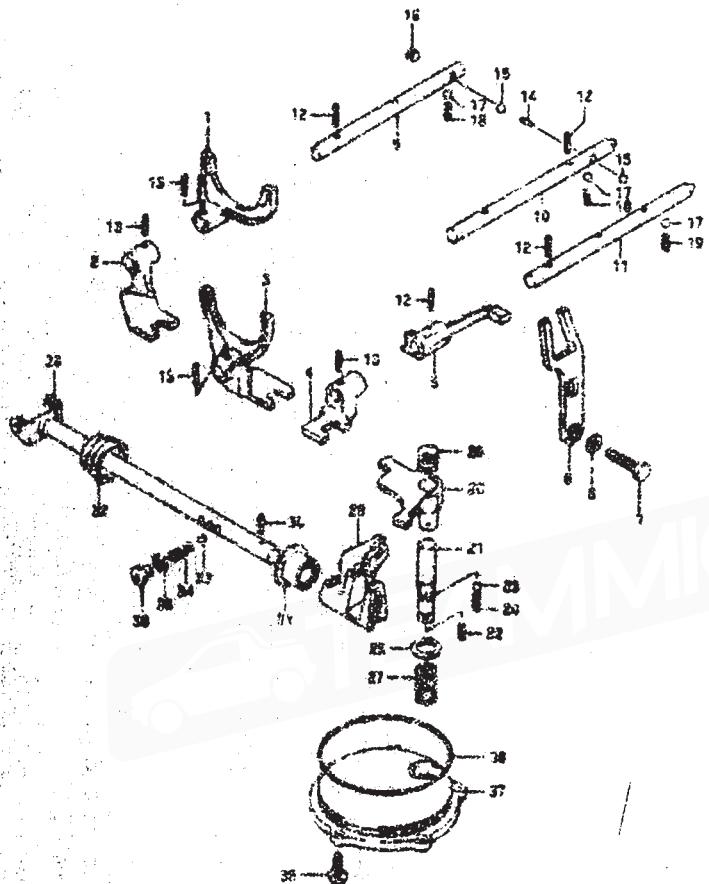


FIG. 4A (D-7) GEAR SHIFT FORM (WT)

REF. NO.	PART NO.	DESCRIPTION	QUANTITY
28	25510-04001	SHFT, GEAR SHIFT	1
29	25521-760	Yoke, gear shift	1
30	25520-04000	FOR	1
31	GP204-14001	SETL, OIL	1
32	26278-76001	SPST	1
33	05112-16003	BALL	1
34	US447-07001	SPRING	1
35	05118-10007	SPRING	1
36	05121-16006	GOLT	1
37	25573-76000	CAP, GEAR SHIFT	1
38	05082-96001	O RING	1
39	05117-06003	WLT	1


三

三五七言

14. PLUNGER	0-2	CYLINDER BLOCK	D-8	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	S-14	BATCH NAME-C-16
BY PART (AT)	-0-2			GEAR SHIFT PORK (AT)	S-6	MATERIAL	-0-	WATER PUMP-C-7
AT MASTIC SET	0-7	CYL. HEAD	D-4	INTAKE MANIFOLD	S-5	NEUTRAL LEVER (AT)	-0-	
AT OVERDRIVE GEAR	0-11	DIFFERENTIAL GEAR	D-2	LAWL	S-11	SHIFTING BELT	E-3	
BY PART, ASSEMBLED	S-6	DRIVESHIFT CONTROL	D-1	MAPLE	S-4	TRANSMISSION (AT)	D-11	
DRIVESHIFT	S-12	DRIVE SHAFT SET	E-2	OIL FILTER (AT)	S-12	TRANSFER CASE SHELL	D-5	
DRIVESHIFT KIT	S-12	DRIVE SHAFT SET	E-2	OIL LEVEL (AT)	S-12	TRANSFER CASE SHELL (AT)	S-18	
DRIVESHIFT KIT	S-12	DRIVE SHAFT SET	E-2	OIL PUMP (AT)	S-6	TRANSFER CASE SHELL (AT)	S-18	
DRIVESHIFT KIT	S-12	DRIVE SHAFT SET	E-2	OIL PAN	S-6	TRANSFER CASE SHELL (AT)	S-18	
DRIVESHIFT KIT	S-12	DRIVE SHAFT SET	E-2	OIL PUMP	S-6	TRANSFER CASE SHELL (AT)	S-18	

FIG. 29 (D-8) AT ASY AND TORQUE CONVERTER (A)

8/71

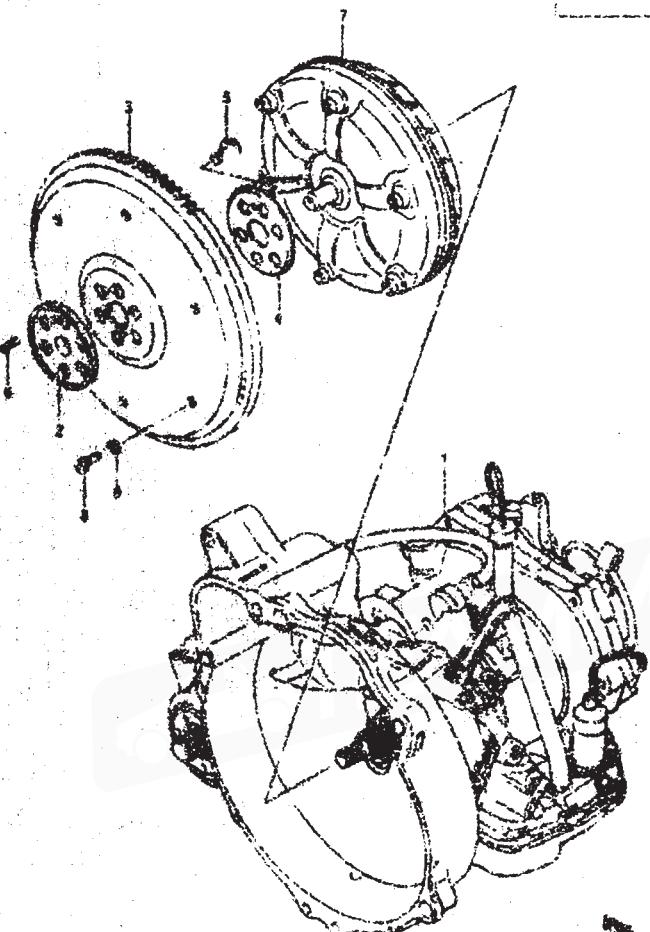

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	20302-42040	TRANSMISSION ASY., AUTOMATIC	1
2	22411-78131	FLANGE, DRIVE PLATE	1
3	22420-78133	PLATE, DRIVE PLATE	1
4	22431-78131	PLATE, DRIVE PLATE	1
5	16045-10077	BOLT	6
6	05308-06009	PIN	1
7	22710-78130	CONVERTER, TORQUE	1
8	37120-80020	COVER	6
9	16021-32066	LOCK WASHER	6


SIGHT GLASS

SIGHT GLASS

AIR CLEANER	D-2	CHARGING UNIT	D-8	GEAR SHIFT LEVER	E-3	OIL PUMP AND OIL PAN (AT)	D-14	SHIFTER ASSEMBLY	D-10
AT ASY, LATE	D-14	CYLINDER BLOCK	D-4	GEAR SHIFT TUBE (AT)	D-16	INDICATOR	D-8	SHIFTER PLATE	D-7
AT DRIVEN GEAR UNIT	D-9	CYLINDER HEAD	D-5	TRANS. SHAFT GEAR	D-17	SELECTOR LEVER (AT)	D-9		
AT FORWARD GEAR UNIT	D-12	DIFFERENTIAL GEAR	E-2	UJAS	C-13	THROTTLE BELT	D-18		
CYLINDER AND PLATE	D-8	SUPER CHARGE JACKET	D-1	REAR LINE	C-4	TRANSMISSION (AT)	D-17		
MANUAL	D-22	SUPER CHARGE JACKET	D-2	TRANSMISSION (AT)	D-10	TRANSMISSION (AT)	D-3		
VALVE BODY	D-1	TRANSMISSION JACKET	D-6	OIL PUMP	D-9	TRANSMISSION CASE (AT)	D-10		
VALVE BODY	D-3	FLUID LINE	D-5	OIL PUMP	D-4	TRANSMISSION CASE (AT)	D-2		

FIG. 30 (C-9) AT 2000 ft. SET (AT)

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	24790-78021	GASKET SET, AUTOMATIC	1
2	24781-78021	GASKET, case	1
3	24786-78020	GASKET, main cover	2
4	23841-78030	GASKET, oil pump	3
5	24785-78030	GASKET, shift valve plate	2
6	24784-78030	GASKET, oil pan	3
7	23840-78010	GASKET, gear plug	1
8	22871-78030	GASKET, oil pipe base seal	3
9	22851-78030	O RING, oil pipe body	1
10	24793-78120	O RING SET, cylinder	1
11	30280-78001	O RING, spoolvalve case	1
12	24795-78130	O RING, rodcase plug	2

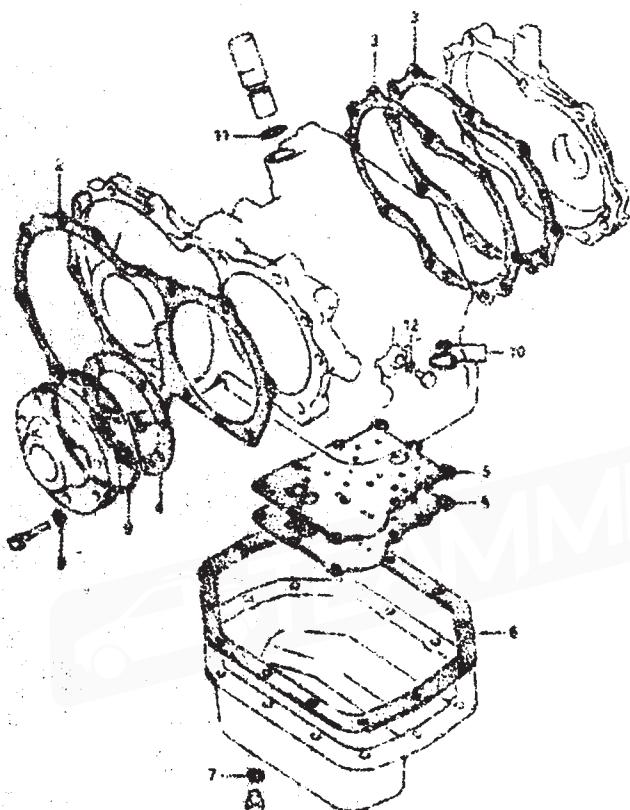


53-4011

D - 10

FIG. 31 (A-10) PARSONS CASE (AT)

三·五

ITEM NO.	PART NO.	DESCRIPTION	REMARKS
1	24711-74000	CLIP, transmission main	1
2	24731-78270	CASET, case	1
3	24751-16430	FIR	1
4	34721-10131	MAINING, case	1
5	11167-08463	BOLT	2
6	01121-21083	LOCK WASHER	2
7	24711-84900	BOLT	5
8	24770-78272	COPER, case	1
9	24764-78250	COPPET, case cover	2
10	24752-78230	FIR	2
11	01167-08463	BOLT	4
12	01171-08463	BOLT	4
13	01121-21083	LOCK WASHER	6
14	24811-78137	COPER, receiver body	1
15	09341-08462	Washer, receiver body	1
16	09341-077073	HORN, receiver	1
17	08441-10001	CLIP	1
18	24812-78000	PLUG, receiver body	1
19	08467-18463	CLAMP	1
20	24621-78130	PAIR, receiver	2
21	24736-78830	O RING	2
22	24809-08463	SPACER, oil level	3
23	24942-08463	PIPE ADPT, oil fitting	2
24	24209-08463	JO RINGS	1
25	01117-08463	BOLT	1
26	09211-10001	FLANGE	2

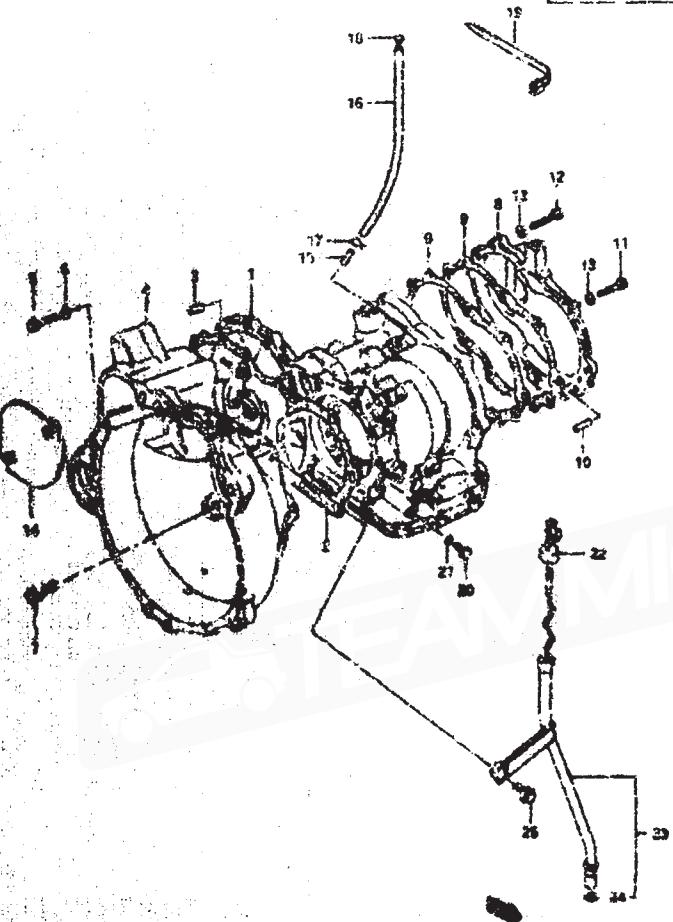


100

卷之三

THE PISTON	C-2	SHOCKCRAFT	B-6	MEAN SHIFT CONTROL	B-5	GIL PUMP AND GIL PAN	B-16	WATER HOSE	C-10
NO BODY SHOT	C-3	GIL FLOOR BLOCK	B-4	GIL SHIFT PUMP (AT)	B-6	FALLOUT	C-8	WATER PUMP	C-1
NO BODY SHOT (CONT)	C-4	GIL FLOOR PLATE	B-3	MEAN BODYPLATE	B-11	SHOOTING LEVER (AT)	E-5		
NO BODY SHOT (CONT)	C-13	SHOOTING PLATE	B-6	LABEL	B-13	SHOOTING BELT	B-10		
NO BODY SHOT (CONT)	C-14	SHOOTING PLATE	B-6	MOTOR	C-6	SHOOTING GUN (AT)	B-11		
NO BODY SHOT (CONT)	C-15	SHOOTING PLATE	B-6	GIL MINE (AT)	B-19	SHOOTING GUN (AT)	B-3		
NO BODY SHOT (CONT)	C-16	SHOOTING PLATE	B-6	GIL PLATE	B-7	THROTTLE AND GEAR	B-19		
NO BODY SHOT (CONT)	C-17	SHOOTING PLATE	B-6	GIL PLATE	B-10	THROTTLE AND GEAR (CONT)	B-3		

FIG. 32

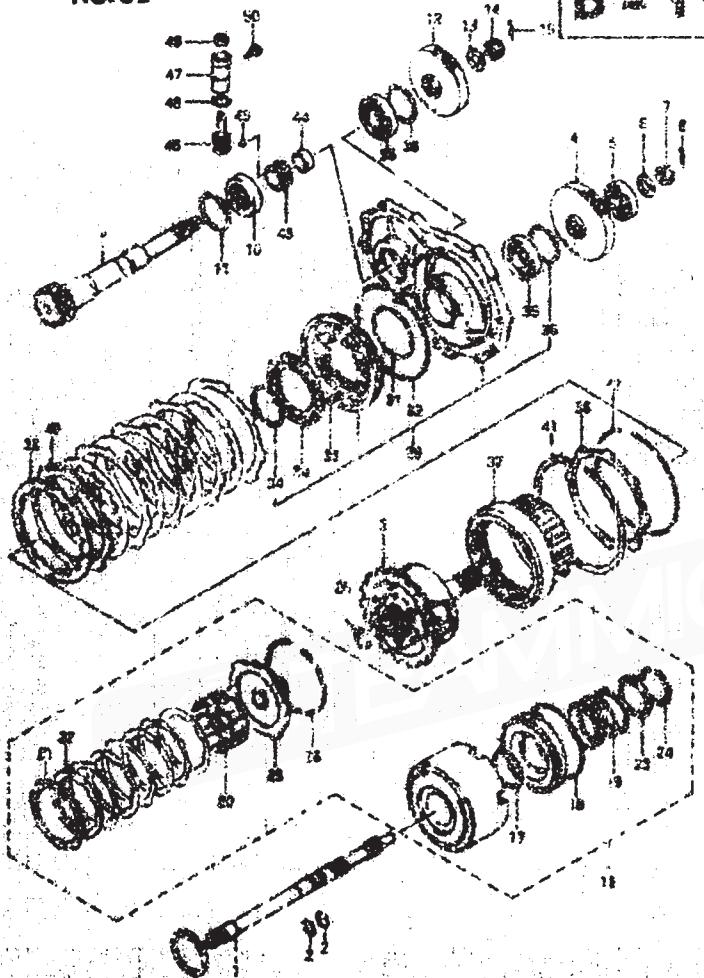

10-1

FIG. 32 (D-11) TRANSMISSION (S1)

REF. NO.	PART NO.	DESCRIPTION	AMOUNT
1	26111-78430	SHIFT, INDEX	1
2	26191-78230	RING, INDEX shift seal	2
3	26228-78430	SHAFT ASSTY, CLUTCH/ASR	1
4	26271-78231	GEAR, INTEGRATION USRV	1
5	26212-03001	BEARING	1
6	26246-78130	WHEEL	1
7	26262-78230	NUT	1
8	36111-00310	ROTHER PIN	1
9	26136-78235	SHIFT, CLUTCH	1
10	06243-78232	ADAPTER	1
11	26142-78130	RING, USRV	1
12	36261-78230	GEAR, INTEGRATION USRV	1
13	26270-78130	WHEEL	1
14	26260-78230	NUT	1
15	06111-30100	ROTHER PIN	1
16	26220-04000	CLUTCH ASSTY, INTEGRATION USRV	1
17	26262-78230	10 RING, USRV	1
18	26143-78230	10 RING, USRV	1
19	26214-78230	SPIRAL, CLUTCH ASSTY	2
20	26171-78230	PLATE, CLUTCH	1
21	26264-78230	PLATE, CLUTCH	1
22	26271-78230	PLATE, CLUTCH ASSTY	1
23	26262-78230	SPRING, CLUTCH SPRING	1
24	26263-78230	RING, USRV	1
25	26170-78230	PLATE, 10 RING GEAR	1
26	26272-78230	PLATE, 10 RING	1
27	26261-78230	PLATE, 10 RING SPRINGS	1
28	26266-78230	WHEEL	1

· 10 ·

卷之三

ATP GLOMERUS	C-2	CHROMIA	C-3	ONE DAY COOKIES	C-6	TEL PUMP AND OR. FOR 120V	C-14	NEVER HAD C-14
AT ABSY CAT	C-8	CYS HEAVY BLOCK	C-4	CLAY SHUTTLE FABR. UNIT	C-6	REPLACEMENT	C-1	NEVER HAD C-1
AT THE ST KEY TAC	C-10	CHLORINE NODD	C-1	MONITOR MANIFOLD	C-11	REULATOR LEAKS OUT	C-3	
AT PRACTICE HOME CARS	C-13	DIMINISHING RATIO	C-1	SHOWER	C-12	PROBLEMS	C-1	
AT A NEW BLDG	C-14	DISINTEGRATION	C-17	PLUMBERS	C-14	ROOFING LEAKS	C-11	
AT PRACTICE	C-15	DRUGS	C-1	PLUMBERS	C-14	ROOFING LEAKS	C-11	
AT PRACTICE	C-16	DRUGS	C-2	PLUMBERS	C-14	ROOFING LEAKS	C-11	
AT PRACTICE	C-17	DRUGS	C-2	PLUMBERS	C-14	ROOFING LEAKS	C-11	
AT PRACTICE	C-18	DRUGS	C-2	PLUMBERS	C-14	ROOFING LEAKS	C-11	
AT PRACTICE	C-19	DRUGS	C-2	PLUMBERS	C-14	ROOFING LEAKS	C-11	
AT PRACTICE	C-20	DRUGS	C-2	PLUMBERS	C-14	ROOFING LEAKS	C-11	

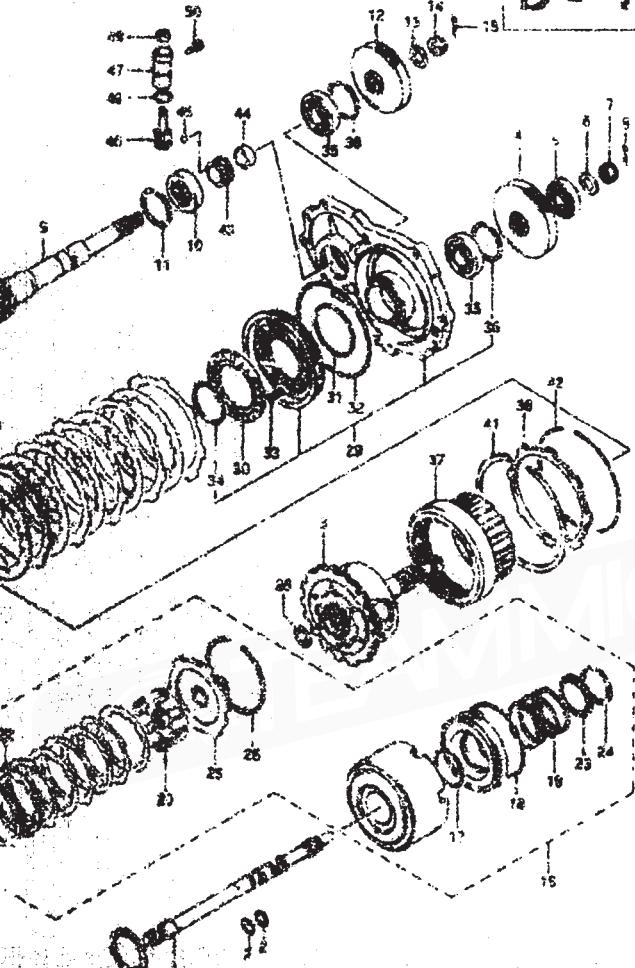



FIG.32 (D-12). TRANSMISSION (AT)

REF. NO.	PART NO.	DESCRIPTION	NOTES
29	26630-78430	GEAR ASSY, reverse brake	1
30	26661-78230	SEAT, spring	1
31	26671-78230	O RING, inner	1
32	26672-78230	O RING, outer	1
33	26681-78230	SPRING, piston return	20
34	26693-78230	RING, end	1
35	08113-62347	BEARING	2
36	08331-31476	CIRCLIP	2
37	26641-79430	GEAR, reverse ring	1
38	26651-78230	FLANGE, central shaft	1
39	26653-64900	DISC, reverse valve	1
40	26661-78230	PLATE, reverse valve outer	1
41	16891-78230	RING, disc stop	1
42	26792-78230	RING, piston stop	1
43	26121-64321	GEAR, speedometer drive	1
44	26141-74230	SPACER	1
45	08111-09404	BALL	1
46	26131-64101	GEAR, speedometer drive	1
47	26141-65673	CAGE, speedometer gear	1
48	08200-64006	O RING	1
49	08300-08001	SEAL, oil	1
50	08120-08002	BOLT	1

ASSEMBLED

1.2. GEAR ASSEMBLY	1.3. GEAR SHIFT CONTROL	1.4. GEAR SHIFT CONTROL	1.5. OIL PUMP AND OIL PAN (AT)	1.6. WATER HOSE (C-10)
1.7. OIL PAN	1.8. CYLINDER BLOCK	1.9. BEAR SHIFT FORK (AT)	1.10. RADIATOR	1.11. WATER PUMP (C-1)
1.12. OIL SIGHT GLASS	1.13. CYLINDER HEAD	1.14. INTAKE MANIFOLD	1.15. SELECTOR LEVER (AT)	1.16. OIL TUBE
1.17. OIL SIGHT GLASS	1.18. DIFFERENTIAL GEAR (S-2)	1.19. LABEL	1.20. TURBINE BELT	1.21. OIL TUBE
1.19. OIL SIGHT GLASS	1.20. DIFFERENTIAL GEAR (S-2)	1.21. OIL TUBE	1.22. TRANSMISSION OIL	1.23. OIL TUBE
1.23. OIL SIGHT GLASS	1.24. DIFFERENTIAL GEAR (S-2)	1.25. OIL TUBE	1.26. TRANSMISSION OIL (AT)	1.27. OIL TUBE
1.27. OIL SIGHT GLASS	1.28. OIL PUMP	1.29. OIL PUMP	1.30. TRANSMISSION OIL (AT)	1.31. OIL TUBE
1.29. OIL SIGHT GLASS	1.30. OIL PUMP	1.31. OIL PUMP	1.32. TRANSMISSION OIL (AT)	1.33. OIL TUBE

FIG. 33 (D-13) AT PARKING BRAKE (AT)

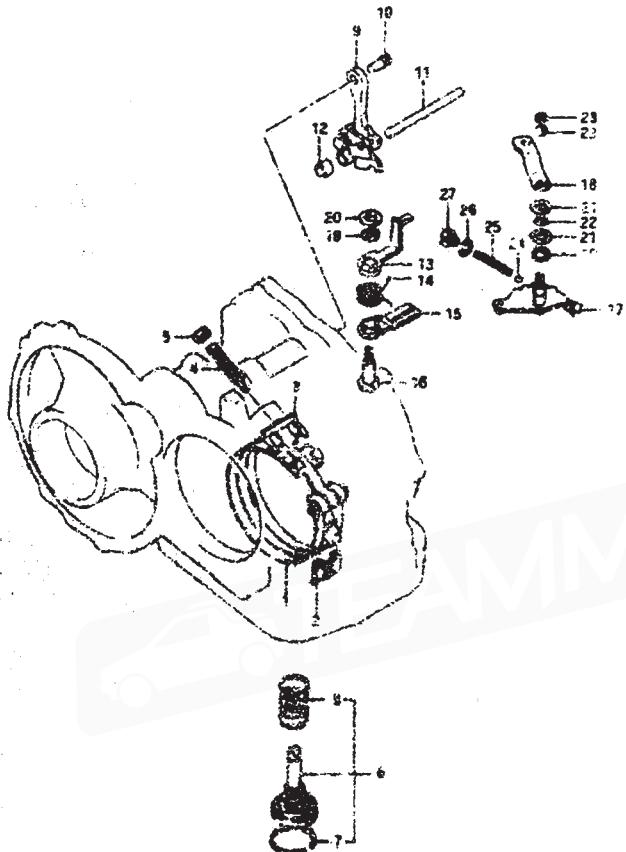

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	26700-78132	Servo ASSY, low brake	1	
2	26790-78232	SHUTTLE, brake band apply	1	
3	26760-78231	STRUT, brake band actuator	1	
4	26771-78230	BOLT	1	
5	01310-22106	NUT	1	
6	25740-78230	PISTON ASSY, low servo	1	
7	26742-78231	SEALING	1	
8	26782-78230	SPRING	1	
9	25910-78230	RODE ASSY, parking lock	1	
10	23421-78230	SHIFT, parking lock pole	2	
11	23931-78230	PIN, support	1	
12	23932-78230	SPACER	1	
13	23970-78231	SLEEVE, toggle operating lever	1	
14	23974-78230	SPRING, return	1	
15	23990-78231	LEVER, parking lock	1	
16	23981-78230	SHIFT, parking selector	1	
17	23990-78232	LEVER, manual valve	1	
18	23941-78231	LEVER, manual control shift	1	
19	23954-78230	WASHER	2	
20	01211-00103	CUSHION	1	
21	01240-10041	WASHER	2	
22	03950-78230	O RING	1	
23	08760-20046	NUT	2	
24	03121-00009	BALL	4	
25	03440-00021	SPRING	1	
26	19169-10021	SHIM	1	
27	23042-10004	PLUG	1	

## SAFETY CIRCUIT


AIR CLEANER	C-2	CHIMNEY(SHFT)	B-0	GEAR SHIFT CONTROL	E-7	GYL. FLUID AND OIL PAN (AT)	D-14	GYL. FLUID AND OIL PAN (AT)	C-10
AT CLUTCH (AT)	B-6	CYLINDER BLOCK	B-6	GEAR SHIFT (2RD/3RD/4TH)	D-6	END PLATE	C-6	ENDER PLATE	C-7
AT CYLINDER HEAD	B-6	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-2		
AT DIFFERENTIAL ASSEMBLY	B-1	DIFFERENTIAL ASSEMBLY	E-7	LADLE	B-12	TURBO BELT	B-14		
ONE SHIFT BAND VALVE	B-1	DRIVE FOR CHIMNEY	C-12	MUFFLER	E-7	TRANS. PRESSURE (AT)	D-11		
CLUTCH	B-12	DRIVE BELT SET	B-2	OIL HOLE (AT)	D-1	TRANSMISSION ENCL.	D-3		
CLUTCH SHFT	C-1	DRIVING CHIMNEY	E-6	OIL PAN	D-3	TRANSMISSION CASE (AT)	D-10		
COUPLED BELT	C-3	HYD. PUMP	C-9	GYL. PUMP	D-9	TRANSMISSION OIL PUMP	D-13		

FIG. 34 (D-14) OIL PUMP AND OIL PAN (AT)

Q.TY

REMARKS


REF. NO.	PART NO.	DESCRIPTION	Q.TY
1	24750-84300	SOLVENTSIDE ASSY, transmission	1
2	24752-78131	O RING SET	1
3	01107-06143	BOLT	2
4	02321-21061	LOCK WASHER	2
5	24760-84320	PIN, GEAR	1
6	24784-78230	GASKET	1
7	24961-78230	MAGNETO, oil cleaner	1
8	01107-06125	BOLT	14
9	02321-21063	LOCK WASHER	14
10	02427-10097	PLUG	1
11	01106-12009	GASKET	1
12	26310-73131	VALVE ASSY, transmission	1
13	26301-78130	PLATE, shift valve body	1
14	26303-78130	GASKET, body plate	2
15	01422-06506	STUD BOLT	2
16	01921-21066	LOCK WASHER	2
17	01801-21066	NUT	2
18	01107-06142	BOLT	2
19	01107-06156	BOLT	1
20	01921-21066	LOCK WASHER	9
21	01822-21066	WASHER	9
22	26370-78231	SPRINGER, oil	1
23	23801-78230	PUMP ASSY, oil	1
24	22630-78230	COVER, oil pump	1
25	22631-78230	RING, seal	2
26	22661-78230	GASKET, pump cover	1
27	22661-78230	SEAL, oil	1
28	22691-78130	O-RING, cover	1
29	22671-78231	WASHER, seal	7
30	03321-11066	WASHER	7
31	05321-23066	LOCK WASHER	7
32	01107-06106	BOLT	7

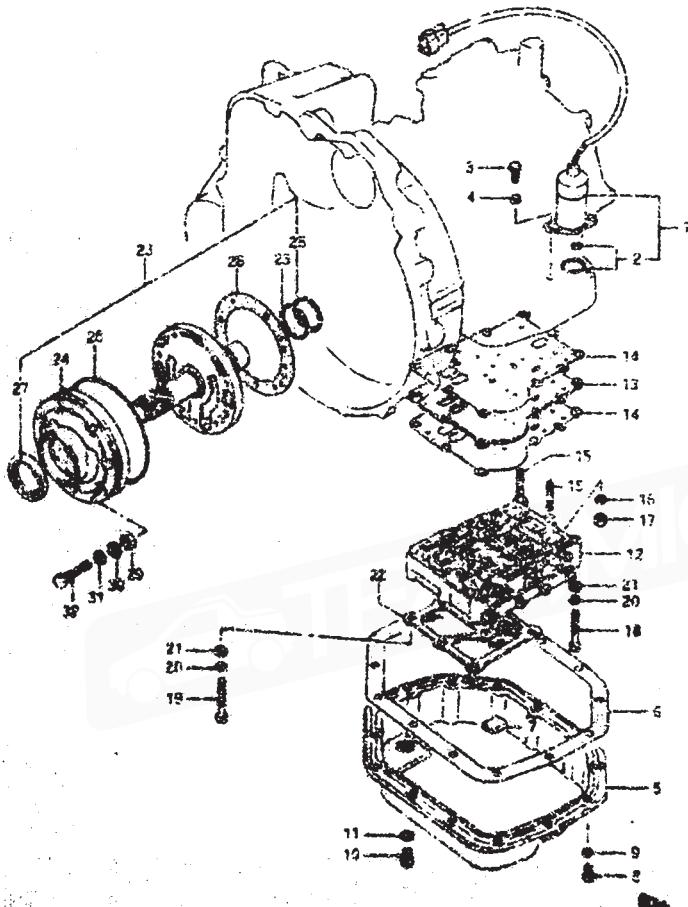

58-61 824

58-61 826

AIR CLEANER	2-2	DISPENSER	2-2	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	MASTER HOSE C-19
AT ASST (AT)	1-4	OIL FILTER BLOCK	2-2	GEAR SHIFT FORK (MT)	D-4	RADIATOR	C-6	MASTER PUMP C-7
AT BUSHING SET (AT)	1-4	GEAR WHEEL BEARING	2-2	SELECTOR LEVER (AT)	E-3	SHOCK ABSORBER	C-13	TRANS. BELL C-19
AT HORNING BEARING (AT)	1-4	DIFFERENTIAL BEARING	2-2	LABEL		SWING ARM (AT)	D-14	TRANS. BELL C-19
CLUTCH BEARING AND BUSHING	2-2	DRIVE SHAFT GEAR	C-14	PLUG	C-4	TRANSMISSION (AT)	D-3	TRANS. BELL C-19
CLUTCH CABLE	2-2	DRIVELINE GEARBOX SET	2-2	PULLEYS	C-4	TRANSMISSION (MT)	D-3	TRANS. BELL C-19
CLUTCH KIT	2-2	DRIVELINE MOUNTING SET	2-2	GAUGE	C-1	TRANSMISSION LINE CLAMP	D-4	TRANS. BELL C-19
DRIVING CHAIN	2-2	FUEL TANK	2-2	GEAR PUMP	C-1	TRANSMISSION LINE CLAMP	D-4	TRANS. BELL C-19
DRIVING CHAIN	2-2	GEAR PUMP	2-2	GEAR PUMP	C-1	TRANSMISSION LINE CLAMP	D-4	TRANS. BELL C-19

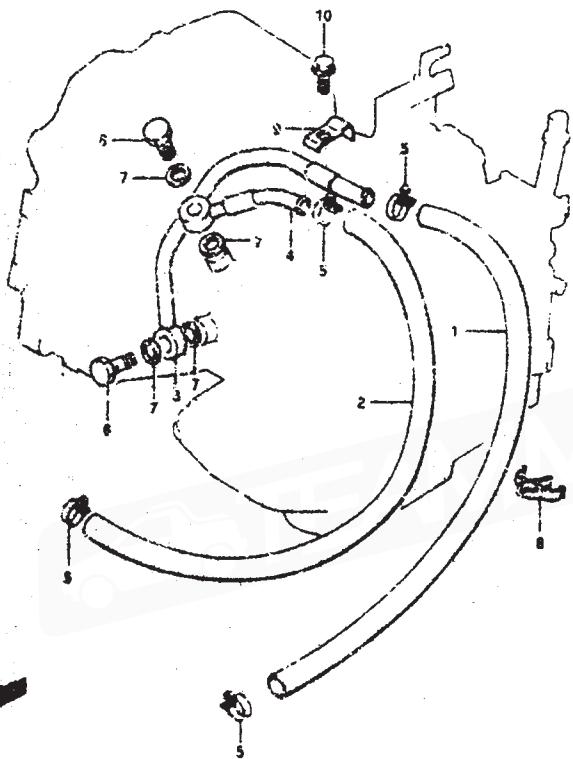

REF.NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	2A891-84501	HOSE, oil outlet	1	
2	2A892-84502	HOSE, oil inlet	1	
3	2A293-84503	PIPE, oil outlet	1	
4	2A894-84502	PIPE, oil inlet	1	
5	09400-13302	CLAMP	4	
6	09360-10022	BOLT, union	2	
7	09168-100208	GASKET	4	
8	09408-00043	CLAMP	1	
9	2A895-84501	PLATE, oil pipe	1	
10	01547-06143	BOLT	1	

SC407 E24

SC407 E26

AIR CLEANER	D-2	SHAFT/HUB	B-4	GEAR SHFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-16	WATER HOSE C-4U
AT ASSEMBLY (AT)	D-4	CYLINDER BLOCK	B-4	GEAR SHFT FORK (AT)	D-6	RADIATOR	D-8	WATER PUMP C-7
AT GASKET SET (AT)	D-5	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-5	
AT PUMPING SHAFT (AT)	D-15	DIFFERENTIAL GEAR	E-2	LABEL	C-19	YOUNG BILLET	B-10	
CHASSIS SUPPORT	D-8	IMPROVEMENT CONTROL	C-11	NEUTRON	C-4	TRANSFORMER (AT)	D-11	
CHASSIS SUPPORT AND VALVE	D-9	PROTECTOR	D-12	NEUTRON	C-4	TRANSFORMER (AT)	D-12	
CHASSIS SUPPORT	D-10	PROTECTOR	D-13	NEUTRON	C-4	TRANSFORMER (AT)	D-13	
CHASSIS SUPPORT	D-11	PROTECTOR	D-14	NEUTRON	C-4	TRANSFORMER (AT)	D-14	
CHASSIS SUPPORT	D-12	PROTECTOR	D-15	NEUTRON	C-4	TRANSFORMER (AT)	D-15	
CHASSIS SUPPORT	D-13	PROTECTOR	D-16	NEUTRON	C-4	TRANSFORMER (AT)	D-16	
CHASSIS SUPPORT	D-14	PROTECTOR	D-17	NEUTRON	C-4	TRANSFORMER (AT)	D-17	
CHASSIS SUPPORT	D-15	PROTECTOR	D-18	NEUTRON	C-4	TRANSFORMER (AT)	D-18	
CHASSIS SUPPORT	D-16	PROTECTOR	D-19	NEUTRON	C-4	TRANSFORMER (AT)	D-19	
CHASSIS SUPPORT	D-17	PROTECTOR	D-20	NEUTRON	C-4	TRANSFORMER (AT)	D-20	
CHASSIS SUPPORT	D-18	PROTECTOR	D-21	NEUTRON	C-4	TRANSFORMER (AT)	D-21	
CHASSIS SUPPORT	D-19	PROTECTOR	D-22	NEUTRON	C-4	TRANSFORMER (AT)	D-22	
CHASSIS SUPPORT	D-20	PROTECTOR	D-23	NEUTRON	C-4	TRANSFORMER (AT)	D-23	
CHASSIS SUPPORT	D-21	PROTECTOR	D-24	NEUTRON	C-4	TRANSFORMER (AT)	D-24	
CHASSIS SUPPORT	D-22	PROTECTOR	D-25	NEUTRON	C-4	TRANSFORMER (AT)	D-25	
CHASSIS SUPPORT	D-23	PROTECTOR	D-26	NEUTRON	C-4	TRANSFORMER (AT)	D-26	
CHASSIS SUPPORT	D-24	PROTECTOR	D-27	NEUTRON	C-4	TRANSFORMER (AT)	D-27	
CHASSIS SUPPORT	D-25	PROTECTOR	D-28	NEUTRON	C-4	TRANSFORMER (AT)	D-28	
CHASSIS SUPPORT	D-26	PROTECTOR	D-29	NEUTRON	C-4	TRANSFORMER (AT)	D-29	
CHASSIS SUPPORT	D-27	PROTECTOR	D-30	NEUTRON	C-4	TRANSFORMER (AT)	D-30	
CHASSIS SUPPORT	D-28	PROTECTOR	D-31	NEUTRON	C-4	TRANSFORMER (AT)	D-31	
CHASSIS SUPPORT	D-29	PROTECTOR	D-32	NEUTRON	C-4	TRANSFORMER (AT)	D-32	
CHASSIS SUPPORT	D-30	PROTECTOR	D-33	NEUTRON	C-4	TRANSFORMER (AT)	D-33	
CHASSIS SUPPORT	D-31	PROTECTOR	D-34	NEUTRON	C-4	TRANSFORMER (AT)	D-34	
CHASSIS SUPPORT	D-32	PROTECTOR	D-35	NEUTRON	C-4	TRANSFORMER (AT)	D-35	
CHASSIS SUPPORT	D-33	PROTECTOR	D-36	NEUTRON	C-4	TRANSFORMER (AT)	D-36	
CHASSIS SUPPORT	D-34	PROTECTOR	D-37	NEUTRON	C-4	TRANSFORMER (AT)	D-37	
CHASSIS SUPPORT	D-35	PROTECTOR	D-38	NEUTRON	C-4	TRANSFORMER (AT)	D-38	
CHASSIS SUPPORT	D-36	PROTECTOR	D-39	NEUTRON	C-4	TRANSFORMER (AT)	D-39	
CHASSIS SUPPORT	D-37	PROTECTOR	D-40	NEUTRON	C-4	TRANSFORMER (AT)	D-40	
CHASSIS SUPPORT	D-38	PROTECTOR	D-41	NEUTRON	C-4	TRANSFORMER (AT)	D-41	
CHASSIS SUPPORT	D-39	PROTECTOR	D-42	NEUTRON	C-4	TRANSFORMER (AT)	D-42	
CHASSIS SUPPORT	D-40	PROTECTOR	D-43	NEUTRON	C-4	TRANSFORMER (AT)	D-43	
CHASSIS SUPPORT	D-41	PROTECTOR	D-44	NEUTRON	C-4	TRANSFORMER (AT)	D-44	
CHASSIS SUPPORT	D-42	PROTECTOR	D-45	NEUTRON	C-4	TRANSFORMER (AT)	D-45	
CHASSIS SUPPORT	D-43	PROTECTOR	D-46	NEUTRON	C-4	TRANSFORMER (AT)	D-46	
CHASSIS SUPPORT	D-44	PROTECTOR	D-47	NEUTRON	C-4	TRANSFORMER (AT)	D-47	
CHASSIS SUPPORT	D-45	PROTECTOR	D-48	NEUTRON	C-4	TRANSFORMER (AT)	D-48	
CHASSIS SUPPORT	D-46	PROTECTOR	D-49	NEUTRON	C-4	TRANSFORMER (AT)	D-49	
CHASSIS SUPPORT	D-47	PROTECTOR	D-50	NEUTRON	C-4	TRANSFORMER (AT)	D-50	
CHASSIS SUPPORT	D-48	PROTECTOR	D-51	NEUTRON	C-4	TRANSFORMER (AT)	D-51	
CHASSIS SUPPORT	D-49	PROTECTOR	D-52	NEUTRON	C-4	TRANSFORMER (AT)	D-52	
CHASSIS SUPPORT	D-50	PROTECTOR	D-53	NEUTRON	C-4	TRANSFORMER (AT)	D-53	
CHASSIS SUPPORT	D-51	PROTECTOR	D-54	NEUTRON	C-4	TRANSFORMER (AT)	D-54	
CHASSIS SUPPORT	D-52	PROTECTOR	D-55	NEUTRON	C-4	TRANSFORMER (AT)	D-55	
CHASSIS SUPPORT	D-53	PROTECTOR	D-56	NEUTRON	C-4	TRANSFORMER (AT)	D-56	
CHASSIS SUPPORT	D-54	PROTECTOR	D-57	NEUTRON	C-4	TRANSFORMER (AT)	D-57	
CHASSIS SUPPORT	D-55	PROTECTOR	D-58	NEUTRON	C-4	TRANSFORMER (AT)	D-58	
CHASSIS SUPPORT	D-56	PROTECTOR	D-59	NEUTRON	C-4	TRANSFORMER (AT)	D-59	
CHASSIS SUPPORT	D-57	PROTECTOR	D-60	NEUTRON	C-4	TRANSFORMER (AT)	D-60	
CHASSIS SUPPORT	D-58	PROTECTOR	D-61	NEUTRON	C-4	TRANSFORMER (AT)	D-61	
CHASSIS SUPPORT	D-59	PROTECTOR	D-62	NEUTRON	C-4	TRANSFORMER (AT)	D-62	
CHASSIS SUPPORT	D-60	PROTECTOR	D-63	NEUTRON	C-4	TRANSFORMER (AT)	D-63	
CHASSIS SUPPORT	D-61	PROTECTOR	D-64	NEUTRON	C-4	TRANSFORMER (AT)	D-64	
CHASSIS SUPPORT	D-62	PROTECTOR	D-65	NEUTRON	C-4	TRANSFORMER (AT)	D-65	
CHASSIS SUPPORT	D-63	PROTECTOR	D-66	NEUTRON	C-4	TRANSFORMER (AT)	D-66	
CHASSIS SUPPORT	D-64	PROTECTOR	D-67	NEUTRON	C-4	TRANSFORMER (AT)	D-67	
CHASSIS SUPPORT	D-65	PROTECTOR	D-68	NEUTRON	C-4	TRANSFORMER (AT)	D-68	
CHASSIS SUPPORT	D-66	PROTECTOR	D-69	NEUTRON	C-4	TRANSFORMER (AT)	D-69	
CHASSIS SUPPORT	D-67	PROTECTOR	D-70	NEUTRON	C-4	TRANSFORMER (AT)	D-70	
CHASSIS SUPPORT	D-68	PROTECTOR	D-71	NEUTRON	C-4	TRANSFORMER (AT)	D-71	
CHASSIS SUPPORT	D-69	PROTECTOR	D-72	NEUTRON	C-4	TRANSFORMER (AT)	D-72	
CHASSIS SUPPORT	D-70	PROTECTOR	D-73	NEUTRON	C-4	TRANSFORMER (AT)	D-73	
CHASSIS SUPPORT	D-71	PROTECTOR	D-74	NEUTRON	C-4	TRANSFORMER (AT)	D-74	
CHASSIS SUPPORT	D-72	PROTECTOR	D-75	NEUTRON	C-4	TRANSFORMER (AT)	D-75	
CHASSIS SUPPORT	D-73	PROTECTOR	D-76	NEUTRON	C-4	TRANSFORMER (AT)	D-76	
CHASSIS SUPPORT	D-74	PROTECTOR	D-77	NEUTRON	C-4	TRANSFORMER (AT)	D-77	
CHASSIS SUPPORT	D-75	PROTECTOR	D-78	NEUTRON	C-4	TRANSFORMER (AT)	D-78	
CHASSIS SUPPORT	D-76	PROTECTOR	D-79	NEUTRON	C-4	TRANSFORMER (AT)	D-79	
CHASSIS SUPPORT	D-77	PROTECTOR	D-80	NEUTRON	C-4	TRANSFORMER (AT)	D-80	
CHASSIS SUPPORT	D-78	PROTECTOR	D-81	NEUTRON	C-4	TRANSFORMER (AT)	D-81	
CHASSIS SUPPORT	D-79	PROTECTOR	D-82	NEUTRON	C-4	TRANSFORMER (AT)	D-82	
CHASSIS SUPPORT	D-80	PROTECTOR	D-83	NEUTRON	C-4	TRANSFORMER (AT)	D-83	
CHASSIS SUPPORT	D-81	PROTECTOR	D-84	NEUTRON	C-4	TRANSFORMER (AT)	D-84	
CHASSIS SUPPORT	D-82	PROTECTOR	D-85	NEUTRON	C-4	TRANSFORMER (AT)	D-85	
CHASSIS SUPPORT	D-83	PROTECTOR	D-86	NEUTRON	C-4	TRANSFORMER (AT)	D-86	
CHASSIS SUPPORT	D-84	PROTECTOR	D-87	NEUTRON	C-4	TRANSFORMER (AT)	D-87	
CHASSIS SUPPORT	D-85	PROTECTOR	D-88	NEUTRON	C-4	TRANSFORMER (AT)	D-88	
CHASSIS SUPPORT	D-86	PROTECTOR	D-89	NEUTRON	C-4	TRANSFORMER (AT)	D-89	
CHASSIS SUPPORT	D-87	PROTECTOR	D-90	NEUTRON	C-4	TRANSFORMER (AT)	D-90	
CHASSIS SUPPORT	D-88	PROTECTOR	D-91	NEUTRON	C-4	TRANSFORMER (AT)	D-91	
CHASSIS SUPPORT	D-89	PROTECTOR	D-92	NEUTRON	C-4	TRANSFORMER (AT)	D-92	
CHASSIS SUPPORT	D-90	PROTECTOR	D-93	NEUTRON	C-4	TRANSFORMER (AT)	D-93	
CHASSIS SUPPORT	D-91	PROTECTOR	D-94	NEUTRON	C-4	TRANSFORMER (AT)	D-94	
CHASSIS SUPPORT	D-92	PROTECTOR	D-95	NEUTRON	C-4	TRANSFORMER (AT)	D-95	
CHASSIS SUPPORT	D-93	PROTECTOR	D-96	NEUTRON	C-4	TRANSFORMER (AT)	D-96	
CHASSIS SUPPORT	D-94	PROTECTOR	D-97	NEUTRON	C-4	TRANSFORMER (AT)	D-97	
CHASSIS SUPPORT	D-95	PROTECTOR	D-98	NEUTRON	C-4	TRANSFORMER (AT)	D-98	
CHASSIS SUPPORT	D-96	PROTECTOR	D-99	NEUTRON	C-4	TRANSFORMER (AT)	D-99	
CHASSIS SUPPORT	D-97	PROTECTOR	D-100	NEUTRON	C-4	TRANSFORMER (AT)	D-100	
CHASSIS SUPPORT	D-98	PROTECTOR	D-101	NEUTRON	C-4	TRANSFORMER (AT)	D-101	
CHASSIS SUPPORT	D-99	PROTECTOR	D-102	NEUTRON	C-4	TRANSFORMER (AT)	D-102	
CHASSIS SUPPORT	D-100	PROTECTOR	D-103	NEUTRON	C-4	TRANSFORMER (AT)	D-103	
CHASSIS SUPPORT	D-101	PROTECTOR	D-104	NEUTRON	C-4	TRANSFORMER (AT)	D-104	
CHASSIS SUPPORT	D-102	PROTECTOR	D-105	NEUTRON	C-4	TRANSFORMER (AT)	D-105	
CHASSIS SUPPORT	D-103	PROTECTOR	D-106	NEUTRON	C-4	TRANSFORMER (AT)	D-106	
CHASSIS SUPPORT	D-104	PROTECTOR	D-107	NEUTRON	C-4	TRANSFORMER (AT)	D-107	
CHASSIS SUPPORT	D-105	PROTECTOR	D-108	NEUTRON	C-4	TRANSFORMER (AT)	D-108	
CHASSIS SUPPORT	D-106	PROTECTOR	D-109	NEUTRON	C-4	TRANSFORMER (AT)	D-109	
CHASSIS SUPPORT	D-107	PROTECTOR	D-110	NEUTRON	C-4	TRANSFORMER (AT)	D-110	
CHASSIS SUPPORT	D-108	PROTECTOR	D-111	NEUTRON	C-4	TRANSFORMER (AT)	D-111	
CHASSIS SUPPORT	D-109	PROTECTOR	D-112	NEUTRON	C-4	TRANSFORMER (AT)	D-112	
CHASSIS SUPPORT	D-110	PROTECTOR	D-113	NEUTRON	C-4	TRANSFORMER (AT)	D-113	
CHASSIS SUPPORT	D-111	PROTECTOR	D-114	NEUTRON	C-4	TRANSFORMER (AT)	D-114	
CHASSIS SUPPORT	D-112	PROTECTOR	D-115	NEUTRON	C-4	TRANSFORMER (AT)	D-115	
CHASSIS SUPPORT	D-113	PROTECTOR	D-116	NEUTRON	C-4	TRANSFORMER (AT)	D-116	
CHASSIS SUPPORT	D-114	PROTECTOR	D-117	NEUTRON	C-4	TRANSFORMER (AT)	D-117	
CHASSIS SUPPORT	D-115	PROTECTOR	D-118	NEUTRON	C-4	TRANSFORMER (AT)	D-118	
CHASSIS SUPPORT	D-116	PROTECTOR	D-119	NEUTRON	C-4	TRANSFORMER (AT)	D-119	
CHASSIS SUPPORT	D-117	PROTECTOR	D-120	NEUTRON	C-4	TRANSFORMER (AT)	D-120	
CHASSIS SUPPORT	D-118	PROTECTOR	D-121	NEUTRON	C-4	TRANSFORMER (AT)	D-121	
CHASSIS SUPPORT	D-119	PROTECTOR	D-122	NEUTRON	C-4	TRANSFORMER (AT)	D-122	
CHASSIS SUPPORT	D-120	PROTECTOR	D-123	NEUTRON	C-4	TRANSFORMER (AT)	D-123	
CHASSIS SUPPORT	D-121	PROTECTOR	D-124	NEUTRON	C-4	TRANSFORMER (AT)	D-124	
CHASSIS SUPPORT	D-122	PROTECTOR	D-125	NEUTRON	C-4	TRANSFORMER (AT)	D-125	
CHASSIS SUPPORT	D-123	PROTECTOR	D-126	NEUTRON	C-4	TRANSFORMER (AT)	D-126	
CHASSIS SUPPORT	D-124	PROTECTOR	D-127	NEUTRON	C-4	TRANSFORMER (AT)	D-127	
CHASSIS SUPPORT	D-125	PROTECTOR	D-128	NEUTRON	C-4	TRANSFORMER (AT)	D-128	
CHASSIS SUPPORT	D-126	PROTECTOR	D-129	NEUTRON	C-4	TRANSFORMER (AT)	D-129	
CHASSIS SUPPORT	D-127	PROTECTOR	D-130	NEUTRON	C-4	TRANSFORMER (AT)	D-130	
CHASSIS SUPPORT	D-128	PROTECTOR	D-131	NEUTRON	C-4	TRANSFORMER (AT)	D-131	
CHASSIS SUPPORT	D-129	PROTECTOR	D-132	NEUTRON	C-4	TRANSFORMER (AT)	D-132	
CHASSIS SUPPORT	D-130	PROTECTOR	D-133	NEUTRON	C-4	TRANSFORMER (AT)	D-133	
CHASSIS SUPPORT	D-131	PROTECTOR	D-134	NEUTRON	C-4	TRANSFORMER (AT)	D-134	
CHASSIS SUPPORT	D-132	PROTECTOR	D-135	NEUTRON	C-4	TRANSFORMER (AT)	D-135	
CHASSIS SUPPORT	D-133	PROTECTOR	D-136	NEUTRON	C-4	TRANSFORMER (AT)	D-136	
CHASSIS SUPPORT	D-134	PROTECTOR	D-137	NEUTRON	C-4	TRANSFORMER (AT)	D-137	
CHASSIS SUPPORT	D-135	PROTECTOR	D-138	NEUTRON	C-4	TRANSFORMER (AT)	D-138	
CHASSIS SUPPORT	D-136	PROTECTOR	D-139	NEUTRON	C-4	TRANSFORMER (AT)	D-139	
CHASSIS SUPPORT	D-137	PROTECTOR	D-140	NEUTRON	C-4	TRANSFORMER (AT)	D-140	
CHASSIS SUPPORT	D-138	PROTECTOR	D-141	NEUTRON	C-4	TRANSFORMER (AT)	D-141	
CHASSIS SUPPORT	D-139	PROTECTOR	D-142	NEUTRON	C-4	TRANSFORMER (AT)	D-142	
CHASSIS SUPPORT	D-140	PROTECTOR	D-143	NEUTRON	C-4	TRANSFORMER (AT)	D-143	
CHASSIS SUPPORT	D-141	PROTECTOR	D-144	NEUTRON	C-4	TRANSFORMER (AT)	D-144	
CHASSIS SUPPORT	D-142	PROTECTOR	D-145	NEUTRON	C-4	TRANSFORMER (AT)	D-145	
CHASSIS SUPPORT	D-143	PROTECTOR	D-146	NEUTRON	C-4	TRANSFORMER (AT)	D-146	
CHASSIS SUPPORT	D-144	PROTECTOR	D-147	NEUTRON	C-4	TRANSFORMER (AT)	D-147	
CHASSIS SUPPORT	D-145	PROTECTOR	D-148	NEUTRON	C-4	TRANSFORMER (AT)	D-148	
CHASSIS SUPPORT	D-146	PROTECTOR	D-149	NEUTRON	C-4	TRANSFORMER (AT)	D-149	
CHASSIS SUPPORT	D-147	PROTECTOR	D-150	NEUTRON	C-4	TRANSFORMER (AT)	D-150	
CHASSIS SUPPORT	D-148	PROTECTOR	D-151	NEUTRON	C-4	TRANSFORMER (AT)	D-151	
CHASSIS SUPPORT	D-149	PROTECTOR	D-152	NEUTRON	C-4	TRANSFORMER (AT)	D-152	
CHASSIS								


PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.
4910-78221	I-11	52674-60010	H-5	56371-78000	I-2	67321-81000	I-6	69511-78000	I-2	73111-81000-10C	I-11
49751-78220	I-11	52550-60832	H-5	57111-81001	I-3	63591-70000	I-6	73112-81000-10C	I-11	73121-81001	I-11
49751-79001	I-10	53101-81011	H-5	57121-81001	I-3	63511-81000	I-7	73130-81000	I-11	73311-81000-10C	I-11
49810-78000	I-10	53102-81011	H-5	57210-81004	I-3	63551-78001	I-2	63556-78001	I-2	73421-81000-10C	I-11
		53117-78510	H-5	57210-81021	I-3	63556-78001	I-2	63556-78001	I-2	73510-81000-10C	I-11
		53210-78410	H-5	57221-81001	I-3	63610-81130	I-7	73620-81000-281	I-11	73625-81000	I-12
		53231-78010	H-5	57300-81001	I-3	63710-81130	I-7	73645-81000-281	I-11	73646-81000	I-12
		53235-60010	H-5	57410-81000	I-3	63721-81000	I-6	73650-81000	I-11	73651-81000	I-12
		53236-60010	H-5	57420-81000	I-3	64110-81000	I-7	73660-81000	I-11	73661-81000	I-12
		53402-67010	H-5	57515-79001	I-8	64113-81100	I-7	73674-81000	I-11	73675-81000	I-12
<b>50000</b>											
51100-78411	H-2	53448-81011	H-5	57450-81011	I-5	64120-81000	I-7	71121-81000	I-2	72640-81000	I-12
51100-78821	H-2	53610-81010	H-5	57710-81011	I-5	64171-81100	I-7	71510-81100	J-6	73644-81000-281	I-12
51180-78010	H-2	53820-5 010	H-5	58110-81010	I-2	64211-81000	I-7	71521-81100	J-6	73645-81000-281	I-12
51191-78010	H-2	53831-81011	H-5	58160-81010	I-2	64310-81830	I-7	71711-81000-281	I-6	73646-81000	I-12
51192-78010	H-2	53851-81011	H-5	58300-81860	I-2	64320-81100	I-7	71721-81000	I-8	73650-81000	I-12
51193-78011	H-2	53652-81011	H-5	58400-81812	I-2	64510-81000	I-7	71741-81000	I-8	73660-81000	I-12
51194-78011	H-2	53711-80018	H-5	58440-81001	I-2	64513-81100	I-7	71751-71000	I-8	73671-81000	I-12
51200-81010	H-2	53721-81010	H-5	58910-81030	I-2	64520-81000	I-7	71811-81100-281	I-9	73681-81001	I-12
51220-81010	H-2	53726-81010	H-5	58919-81040	I-2	64571-81100	I-7	72111-81002-742	I-8	73810-81010-281	I-12
52241-67029	H-2	53727-82011	H-5	58930-81002	I-2	64611-81000	I-7	72111-81002-747	I-8	73814-81010	I-12
51250-78-00	H-2	53742-82010	H-5	59710-81001	I-2	64710-81830	I-7	72111-81002-7R2	I-6	73815-81010	I-12
51260-77000	H-2	54040-81810	H-6	64720-81100	I-7	72111-81002-7R8	I-8	74400-81000	I-12	74511-81000	I-12
51244-81100	H-2	54112-84010	H-6	64760-81001	J-11	72111-81002-7R8	I-6	74521-81000	I-12	74522-81000	I-12
51410-81100	H-3	54410-81110	H-5	65111-81110	I-7	72111-81002-7R8	I-8	74521-81000	I-12	74522-81000	I-12
51420-78411	H-3	54481-78000	H-6	65121-81000	I-7	72111-81002-7R2	I-8	74531-81000	I-12	74532-81000	I-12
51430-81100	H-3	54482-78010	H-6	65302-78210	I-6	72111-81002-7R3	I-8	75120-81110-396	J-2	75151-81110-284	J-2
51440-78410	H-3	54493-77996	H-6	65310-78440	I-6	72111-81002-7R8	I-8	75151-81110-284	J-2	75210-81002	J-2
51440-81100	H-3	54499-78000	H-6	65310-81120	I-6	72210-81110	J-4	75220-81001	J-2	75240-81001	J-2
51470-78010	H-3	55108-78611	H-4	65320-78310	I-6	72220-81110	J-4	75250-81000	I-3	75250-81000	J-2
51490-78410	H-3	55101-78431	H-4	65330-78030	I-1	72311-81001	I-3	75250-81000	I-3	75251-81000	J-2
51500-78410	H-3	55102-78451	H-4	65331-81120	I-6	65343-78210	I-6	72321-81000	I-5	75281-81110	J-2
51510-78010	H-3	55134-78250	H-4	65321-81100	I-6	65344-72201	I-6	72331-81000	I-5	75411-81110	J-6
51540-78010	H-3	55141-78450	H-4	65330-81100	I-6	65511-78450	I-6	72361-81000	I-4	75412-81110	I-6
51540-78350	H-3	55151-78450	H-4	65341-81000	I-6	65512-78200	I-6	72511-78000	I-2	75521-81110-281	J-2
51540-78400	H-3	55151-66310	H-4	65342-81000	I-6	65514-78200	I-6	72611-81000	I-3	75451-81000	J-3
51550-78010	H-3	55191-78450	H-4	65350-81111	I-6	65711-78201	I-6	72729-64000	I-2	76110-78000	J-7
51570-64000	H-3	55201-78650	H-4	65334-70001	I-11	65811-72201	I-6	72810-81100	I-10	76120-81000	J-7
51570-81100	H-3	55204-78651	H-4	65270-81100	I-6	56110-78001-52V	J-2	72815-81100	I-10	76121-81011-281	J-9
51570-77000	H-3	55210-78240	H-4	65271-78200-10C	I-11	66110-78202-52V	J-2	72830-81100	I-9	76131-81011-281	J-5
51570-78000	H-3	55234-78250	H-4	65279-81101	I-6	66411-78000	I-6	72851-81100	I-10	76141-81010-281	J-3
52480-60000	H-3	55811-78401	H-4	62814-70000-281	I-12	66422-71000	I-6	72854-81100	I-10	76151-81010-281	J-3
52580-78011	H-3	55521-78400	H-4	62821-81000	I-12	67700-81102	I-6	72854-81100	I-10	76160-78000	J-7
52660-67000	H-3	56308-78131	I-2	63111-81000	I-7	68901-81010	I-7	72855-81100	I-10	76170-81000	J-7
52480-60000	H-3	56309-78160	I-2	63210-81130	I-7	68002-81010	J-7	72891-81100	I-10	76230-81110-42A	J-3
52480-60000	H-3	56321-78200	I-2	63310-81120	I-7	68190-78000	I-7	72894-81110	I-10	76240-81110-42A	J-3

DIFFERENTIAL GEAR	E- 2	GEAR SHIFT CONTROL (AT)	E- 3	GEAR SHIFT CONTROL (AT)	E- 4	SELECTOR LEVER (AT)	E- 5		

AIR CLEANER	C-2	CRANKSHAFT	E-8	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE	C-10
AT ASSY (AT)	D-8	CYLINDER BLOCK	B-4	GEAR SHIFT FORK (MT)	D-6	RADIATOR	C-8	WATER PUMP	C-7
AT GASKET SET (AT)	D-9	CYLINDER HEAD	B-3	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-5		
AT PARKING BRAKE (AT)	D-13	DIFFERENTIAL GEAR	E-2	LABEL	C-13	TIMING BELT	B-10		
CAM SHIRT AND VALVE	B-9	EMISSION CONTROL	C-11	MUFFLER	C-4	TRANSMISSION (AT)	D-11		
CARBURETOR	B-12	ENGINE GASKET SET	B-2	OIL HOSE (AT)	D-15	TRANSMISSION (MT)	D-3		
CLUTCH (MT)	D-7	ENGINE MOUNTING	B-6	OIL PAN	B-5	TRANSMISSION CASE (AT)	D-10		
CONTROL CABLE	C-3	FUEL PUMP	C-5	OIL PUMP	C-6	TRANSMISSION CASE (MT)	D-9		

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RADIO	F-13	REAR SUSPENSION	G-3	STEERING WHEEL	G-7
Brake Master Cylinder	H-2	FRONT BUMPER	I-8	FRONT SUSPENSION	J-2	PARKING BRAKE	J-6	REAR WHEEL BRAKE	H-5	STRIPPE TAPE AND MUD FLAP	J-4
Brake Piping	H-3	FRONT DOOR GLASS	J-8	FRONT WHEEL BRAKE	H-4	PEDAL	G-10	ROAD WHEEL AND TIRE	G-4	SWITCH	J-12
Car Heater	I-15	FRONT DOOR LOCK	J-9	FRONT WINDOW	J-6	REAR AXLE	G-6	SEAT BELT	J-15	VENTILATOR	I-12
Deck Rail Pipe	J-5	FRONT DOOR PANEL	J-7	FUEL TANK	J-10	REAR BODY PANEL	I-6	SIDE BODY PANEL	I-7	WASHER	F-15
DISSEMBLE	F-5	FRONT FENDER	I-5	GENERATOR	F-3	REAR BUMPER	I-9	SPEEDOMETER	F-7	WIPER	F-14
FLOOR MAT	J-2	FRONT HOOD PANEL	I-3	INSTRUMENT PANEL	J-11	REAR DOOR LOCK	I-10	STARTING MOTOR	F-2	WIRING HARNESS	J-1
FRONT AXLE	G-8	HIGH TAIL	F-8	INTERIOR LINER	J-3	REAR LAMP	F-9	STEERING LINK	G-6		

FIG.36 (E-2) DIFFERENTIAL GEAR

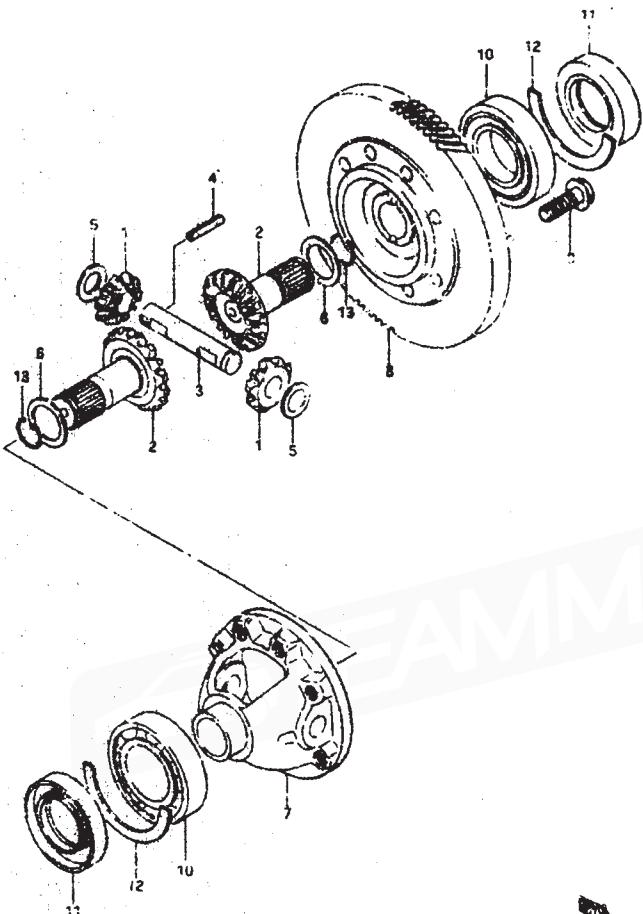


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	27331-75101	PINION, differential	2	MT
1-2	27331-78130	PINION, differential	2	AT
2	27341-75100	GEAR, differential side	2	
3	27331-79401	SHAFT, pinion	1	
4	09202-05014	PIN	1	
5	08211-19261	THRUST WASHER	2	
6-1	08221-25356	WASHER (T:0.6)	0-2	
6-2	08211-25351	WASHER (T:1.0)	0-2	
6-3	09160-25026	WASHER (T1.2)	0-2	
7	27411-75101	CASE, differential	1	
8-1	27341-78140	GEAR, final	1	MT
8-2	27341-78231	GEAR, final	1	AT
9	09103-10014	BOLT	8	
10	08143-62077	BEARING	2	
11-1	09283-35022	SEAL, oil	2	MT
11-2	09283-35019	SEAL, oil	2	AT
12	09300-72007	O RING	2	
13	09361-24001	SNAP RING	2	

SSAOT E24

AIR CLEANER.....	C-2	CRANKSHAFT.....	B-6	GEAR SHIFT CONTROL.....	E-3	OIL PUMP AND OIL PAN (AT).....	D-14	WATER HOSE C-10
AT ASSY (AT).....	D-8	CYLINDER BLOCK.....	B-4	GEAR SHIFT FORK (MT).....	E-6	RADIATOR.....	C-8	WATER PUMP C-7
AT GASKET SET (AT).....	D-9	CYLINDER HEAD.....	B-5	INTAKE MANIFOLD.....	B-11	SELECTOR LEVER (AT).....	E-5	
AT PARKING BRAKE (AT).....	D-13	DIFFERENTIAL GEAR-E-2		LABEL.....	C-13	TIMING BELT.....	B-14	
CAM SHAFT AND VALVE.....	D-9	DRIVELINE CONTROL-C-1		MUFFLER.....	C-1	TRANSMISSION (AT).....	D-11	
CARBURETOR.....	D-12	ENGINE GASKET SET-B-2		OIL HOSE (AT).....	D-15	TRANSMISSION (MT).....	D-3	
DRIVEN BELT.....	D-2	ENGINE MOUNTING-B-6		OIL PAN.....	B-5	TRANSMISSION CASE (AT).....	D-10	
CONTROL CABLE.....	D-3	FUEL PUMP.....	D-9	OIL PUMP.....	C-6	TRANSMISSION CASE (MT).....	D-5	

FIG. 37 (E-3) GEAR SHIFT CONTROL (MT)

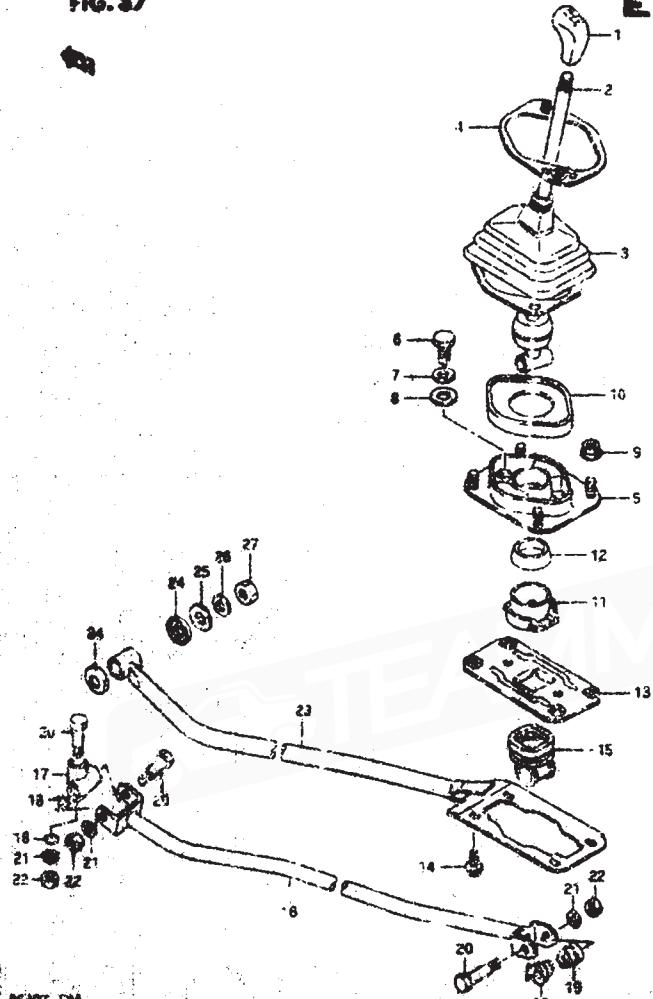


REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	2A113-84000-281	NUT	1
2	2A116-79003	LEVER, gear shift control	1
3	2A135-76100	BOOT, lever	1
4	2A145-78000	COVER, lever boot	1
5	2A160-78002	HOUSING, lever	1
6	01107-10163	BOLT	2
7	08321-21103	LOCK WASHER	2
8	08322-11103	WASHER	2
9	08346-14003	MUT	4
10	2A169-78000	COVER, housing dust seal	1
11	2A115-78140	SEAT, lever No.1	1
12	2A117-78160	SEAT, lever No.2	1
13	2A190-78442	PLATE, lever guide	1
14	01537-06103	BOLT	4
15	2A274-79001	BOOT, shaft	1
16	2A230-78240	SHIFT, gear shift control	1
17	2A271-76000	JOINT, shaft	1
18	07280-08009	O RING	2
19	09303-08015	BUSH	2
20	0P111-06017	BOLT	3
21	08321-21062	LOCK WASHER	3
22	08310-11063	MUT	3
23	2A260-78001	AGO, extension	1
24	2A269-78000	SEAL, extended rod shaft	2
25	0P140-10076	WASHER (10.2x17x1.6)	1
26	0A121-21103	LOCK WASHER	1
27	0A110-12103	MUT	1

SEM 52

卷之三

ARM COLUMBIA	C-2	CRANKSHAFT	B-6	GEAR SHIFT CONTROL	E-3	OIL PUMP AND OIL PAN (AT)	D-14	WATER HOSE	C-10
AT ASSY. (AT)	C-8	CYLINDER BLOCK	B-4	GEAR SHIFT PORK (MT)	D-5	RELATOR	C-6	MISTER KUMPS	C-7
AT BASKET, MET. CAVI	D-9	CYLINDER HEAD	B-5	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-3		
AT JACKING NUT (AT)	C-1	DIFFERENTIAL GEAR	F-2	LABEL	C-13	THIMBLE BELT	B-10		
CAM SHAFT AND VALVE	B-9	DRIVE LOP CONTROL	C-11	MUFFLER	C-4	TOO WHISPER (AT)	D-11		
CHARGEOFATOR	B-12	ENGINE GASKET SET	B-2	NOISE (AT)	D-15	TRANSMISSION (MT)	D-3		
COOLER, AIR	B-1	ENGINE MOUNTING	B-6	OIL PAN	D-3	TRANSMISSION CASE (AT)	D-10		
COOLING, CHARGE	C-1	OIL PUMP	D-9	OIL PUMP	C-6	TRANSMISSION CASE (MT)	D-9		

FIG.39 (E-4) GEAR SHIFT CONTROL (AT)

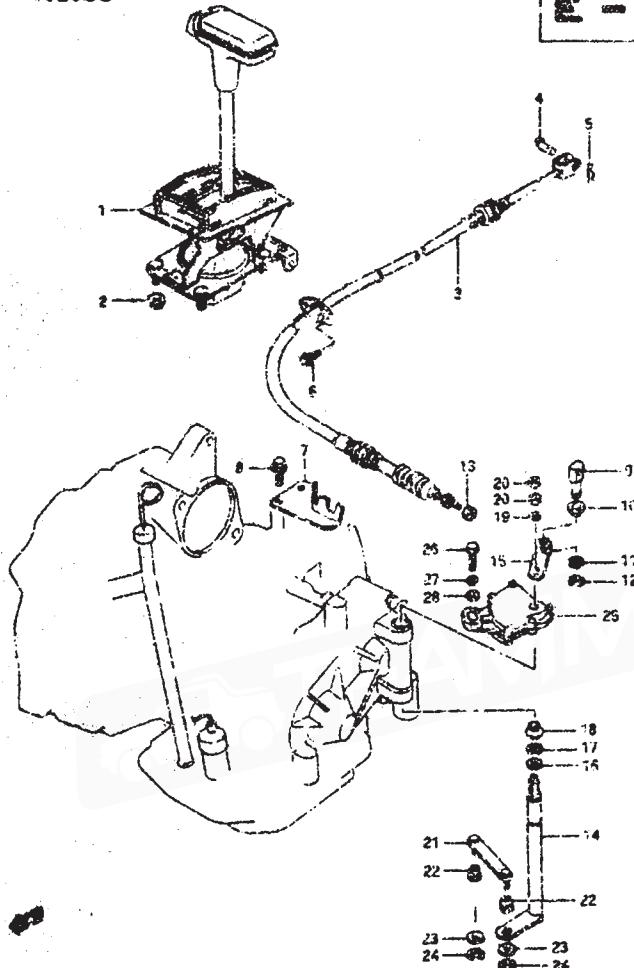


REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	28100-81031	SELECTOR ASSY., MANUAL	1
2	08314-16031	NUT	1
3	28210-78133	CABLE ASSY., SHIFT SELECTOR	1
4	09200-08046	PIN	1
5	07303-96001	SNAP PIN	1
6	04317-02163	BOLT	2
7	28211-78130	SHIM, SELECTOR SHAFT	1
8	04317-08203	SIX 7	2
9	28291-78232	JOINT, SELECTOR CABLE	1
10	07303-48012	BUSH	1
11	08321-11063	WASHER	1
12	08322-11063	E RING	1
13	09140-03017	NUT	1
14	28202-78237	SHIFT, SHIFT SWITCH	1
15	28340-78231	ARM, SHIFT SWITCH	1
16	07466-121072	WASHER	2
17	08332-11063	E RINGS	1
18	28324-78230	ROUT, SHIFT SHAFT	1
19	08140-08092	WASHER	1
20	08340-77087	NUT	2
21	28310-78231	ROD, MANUAL SELECT	1
22	0P305-03001	BUSH	2
23	08352-21463	WASHER	2
24	08332-11063	E RING	2
25	37720-78101	SWITCH ASSY., SHIFT	1
26	01107-08356	BOLT	1
27	08321-21036	LOCK WASHER	1
28	08322-11064	WASHER	1

SHOOT E24

SHOOT E24

AT CLUTCH	0-2	DRIVESHAFT	0-8	GEAR SHIFT CONTROL	0-3	011 PUMP AND OIL PAN (AT)	0-14	WATER HOSE-C-10
AT ASST (AT)	0-8	CYLINDER BLOCK	0-4	GEAR SHIFT FORK (AT)	0-6	WATERATOR	0-9	WATER PUMP-C-7
AT BUMPER SET (AT)	0-9	CYLINDER HEAD	0-3	INTAKE SOLENOID	0-11	SELECTOR LEVER (AT)	0-5	
AT PARKING BRAKE (AT)	0-13	DIFFERENTIAL GEAR-E-2	1 ADDE	LINKAGE	0-13	TUNING BELT	0-10	
CAM SHIFT AND VALVE	0-2	MISSION CONTROL	0-1	MUFFLER	0-1	TRANSMISSION OIL	0-11	
CHAMBER	0-12	PROTECTOR COVER SET	0-2	OIL PAN (AT)	0-13	TRANSMISSION UNIT	0-2	
CLUTCH KIT	0-4	ENGINE MOUNTING	0-6	OIL PAN	0-5	TRANSMISSION CASE (AT)	0-18	
COOLANT PUMP	0-3	FUEL PUMP	0-3	OIL PUMP	0-6	TRANSMISSION CASE (AT)	0-3	

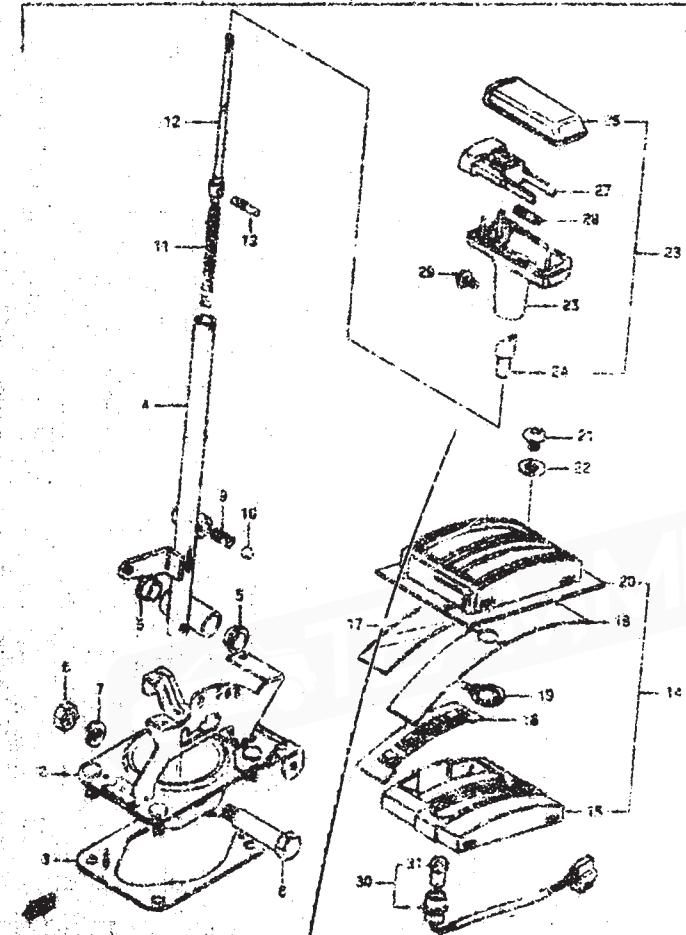

REF. NO.	PART NO.	DESCRIPTION	QUANTITY
1	24101-04461	SELECTOR ASSY., normal	1
2	24110-70232	ROD, selector lever	1
3	24115-70230	SEAT, selector	1
4	24120-70234	LEVER, selector	1
5	02004-12003	SPRING	2
6	25132-70230	SHIRT, selector lever	1
7	08321-21101	LOCK WASHER	1
8	05410-12101	NUT	2
9	08440-07005	SPRING	1
10	15123-10704	BALL	1
11	01440-02018	SPRING	1
12	24105-70235	RIB, selector lever frame	2
13	24110-70231	ARM, selector	1
14	24102-70233	ROTARY PIN ASSY., selector	1
15	25141-70231	SPRING, indicator upper	2
16	24152-70231	PLATE, select position	1
17	24163-70231	COVER, select position plate	1
18	24164-70231	DOWN, selector lever slide	1
19	24165-70230	PLATE, indicator	1
20	24166-70230	UP, selector lever slide	1
21	02111-02005	SCREW	2
22	08312-21066	WASHER	2
23	24103-70230	ROD ASSY., selector lever	1
24	24150-70231	SHIRT, select position rod	1
25	24161-70231	ROD, selector lower lever	1
26	24171-70231	ROD, selector lever upper	1
27	24191-70231	ROTARY PIN, select position	1
28	02141-02007	SPRING	1
29	02142-02005	SCREW	1
30	34050-02000	LAMP ASY., illumination	1
31	02001-12004	BALE (L12, L17)	1


S5007 E24

S5007 E24

AIR CLEANER	D-2	CHAMPION T.	E-6	GEAR SHIFT CONTROL	E-5	OIL PUMP AND OIL PAN (AT)	E-14	WATER PUMP	E-10
AT FRT. (AT)	D-6	CYLINDER BLOCK	B-4	GEAR SHIFT FORK (AT)	D-6	INDICATOR	E-6	WATER TUBE	E-7
AT GASKET SET LAT.	D-8	CYL. ROD HEAD	B-3	INTAKE CYL. POLE	D-11	SELECTOR LEVER (AT)	E-3		
AT PARKING BRAKE (AT)	B-13	LIP PREVENTOR, CYL-E-2	L16						
OIL SHIFT AND VALUE	D-9	OIL RESER. CAPTUR	D-11	L16					
CHAMBER	D-13	ENGINE GASKET SET	B-9	MUFFLER	D-15	TRANSMISSION (AT)	E-11		
MARCH KIT	B-2	ENGINE MOUNTING	D-9	OIL TUBE (AT)	D-13	TRANSMISSION (AT)	E-1		
SWITCH CABLE	D-6	FUEL TUBE	D-9	OIL PAN	D-10	TRANSMISSION CASE (AT)	E-10		
					D-6	TRANS. & OIL CASE (AT)	E-4		

# E - 16


PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.						
76241-81000-281	J-3	78632-81100	J-9	84536-81020	J-8	88193-79000	I-13	01107-06142	H-2	01107-10653	B-6
76275-81111-628	J-3	78633-81100	J-5	84571-81110	J-3	8P170-78000	I-13	01107-06163	B-3	01304-C6708	B-6
76411-81160	J-3	78634-81100	J-5	84611-81000	J-6	88190-78000	I-13	01107-06166	D-14	01411-08253	9-1
76415-81100	J-3	78635-81100	J-5	84673-81100	J-3	88193-79000	I-13	01107-06166	H-3	01411-10303	C-4
76431-81100	I-7	78660-81100	J-6	84641-81000	J-7	88194-79000	I-13	01107-06166	H-6	01411-10303	C-4
76432-81100	I-7	78661-81100	J-5	84642-81000	J-7	88195-79000	I-13	01107-06166	I-6	01421-04506	B-14
76434-81100	I-7	78662-81100	J-5	84701-81080-281	J-7	88200-78000	I-13	01107-06166	I-8	01421-19403	B-4
76437-81130	I-7	78671-81100	J-5	84702-81080-281	J-7	88259-78000-281	I-12	01107-06166	I-9	01517-06106	B-4
76438-81176	I-7	78710-78200	J-8	84703-81000	J-6	88641-78000	I-12	01107-06166	I-10	01517-06123	C-6
77400-70821	F-13	78811-78400	J-8	84732-81000-281	J-7	88711-78002	I-13	01107-06166	I-12	01517-06123	C-9
77400-70821	J-9	78981-78000	J-8	84717-81000-281	J-7	89101-81010	J-10	01107-06205	G-10	01517-06163	F-7
77400-70821	F-13	79161-81210	G-4	84800-71870-399	J-6	89210-81140	J-10	01107-06208	I-13	01517-06163	I-2
77402-78861	I-4	79811-78000	I-4	84961-41030-382	J-13	89230-81140	J-10	01107-06256	H-3	01517-06123	I-3
77461-78000	J-11	85101-81060-7HM	J-12	89241-81000	J-10	01107-06258	I-11	01517-06123	C-9		
77591-73000	J-9	85102-81060-7HM	J-12	89242-81140	J-10	01107-06258	I-11	01517-06123	H-6		
77610-81000-186	J-4	85210-81000	J-12	89260-82100	J-11	01107-06406	D-14	01517-06163	C-2		
77610-81000-271	J-4	85211-84100-281	J-12	89264-82000	J-11	01107-06406	H-3	01517-06163	B-15		
77620-81000-160	J-4	85221-84000-281	J-12	89281-81140	J-10	01107-06454	D-14	01517-06166	E-4		
77620-81000-291	J-4	85301-81060-7HM	J-12	89285-81090	J-10	01107-08126	F-12	01517-06166	H-4		
77620-81000-291	J-4	85302-81060-7HM	J-12	89411-81100	J-11	01107-08143	D-2	01517-06203	B-6		
77680-81119-60K	J-4	81130-81000	J-8	85319-81100	J-12	89810-81001-10C	I-11	01107-08166	J-6	01517-06163	C-10
77680-81118-70C	J-4	81140-81000	J-8	85427-73000	J-11	89831-81000	I-11	01107-08203	J-12	01517-06203	B-7
77680-81112-68Y	J-4	82310-82000	I-4	85426-78001	C-11	01107-08203	B-6	01517-06253	B-8		
77680-81112-68Y	J-4	82120-81000	I-4	85428-78001	C-12	01107-08206	B-7	01517-06303	C-6		
77612-80010-23R	J-4	82330-81000	I-4	85430-78001	J-11	01107-08206	I-6	01517-06303	C-7		
77813-80010-23R	J-4	82140-81000	I-6	85451-75100	C-11	01107-08206	J-10	01517-06353	C-6		
77821-01101	J-8	82191-82000	I-4	85452-75100	C-12	01107-08208	J-7	01517-06808	I-13		
77851-01101	J-4	82201-81010	J-9	85710-81000	J-12	01107-08253	C-6	01517-08126	I-8		
78110-72000	J-9	82202-81010	J-9	85721-84000-281	J-12	01107-08253	F-4	01517-08163	B-10		
78111-81100-393	J-4	82203-81010	J-9	85800-64830	F-13	90000	G-8	01517-08166	E-7		
78121-81100-896	J-4	82202-80102	J-9	86020-80102	J-11	99600-73371	J-2	01107-08431	G-7	01517-08203	B-6
78199-78000	J-9	82891-80100	J-9	86161-78000	J-3	99000-73441	J-2	01107-08303	C-6	01517-08303	B-7
78241-40002	J-9	82991-84000	J-9	86311-58300-281	J-7	01107-08306	G-7	01517-08356	E-4		
78460-78000-281	J-8	83110-81000-281	J-9	86401-81110-42F	J-12	01107-08356	E-4	01517-08403	F-4		
78463-78000	J-9	83130-81000-281	J-9	86610-81000	J-12	01107-08403	D-10	01517-08253	B-3		
78471-77000-281	J-9	83661-81010	J-8	86630-81000	J-12	01107-08408	J-10	01517-08408	B-11		
78472-78000-281	J-8	83710-81001-42A	I-7	86810-81000	J-12	01107-08503	B-10	01517-08503	C-10		
78481-77000-281	J-9	83720-81001-42A	J-7	86932-73060	C-13	01107-08503	E-3	01517-08256	B-3		
78501-72001	J-1	83811-81020	J-8	88100-78000	I-13	01107-10166	C-4	01517-08353	C-4		
78502-78007	J-8	83821-81020	J-8	88111-78000	I-13	01107-10203	B-6	01517-08353	C-5		
78440-81100	J-5	83830-81010	J-8	88112-78000	I-13	01107-06106	G-8	01517-08356	B-2		
78520-81100	J-5	83860-81010	J-8	88119-79000	I-13	01107-06108	H-5	01107-10253	F-3		
78630-81100	J-5	83911-81000	J-7	88120-78C01	I-13	01107-06123	D-2	01517-08406	B-10		
78650-81100	J-4	84511-81120	I-6	88140-78000	I-13	01107-06126	F-14	01107-10256	C-4		
78651-81100	J-5	84531-81020	J-8	88150-78001	I-13	01107-10306	I-2	01517-08353	H-4		

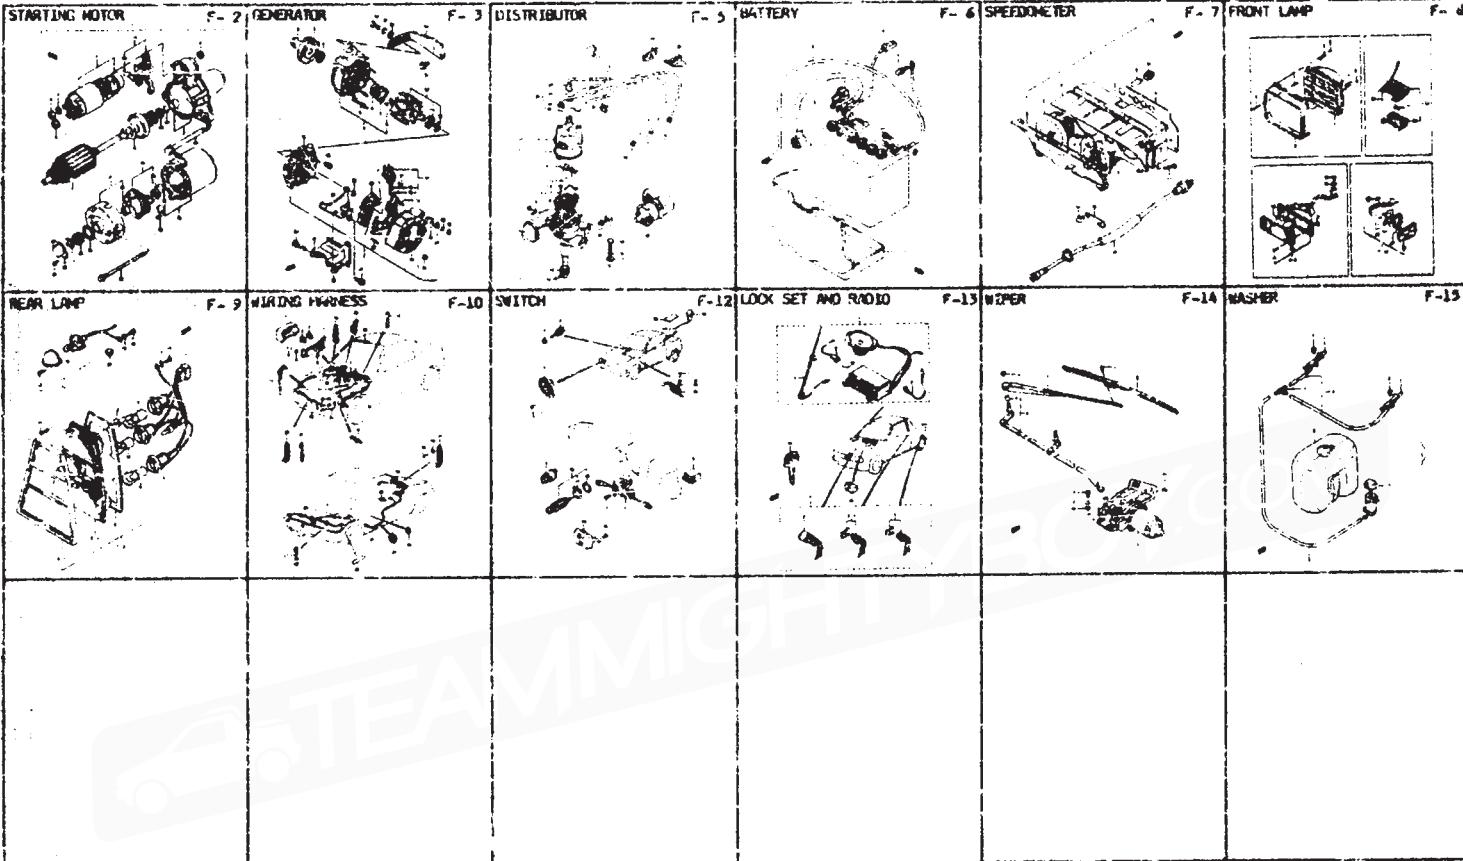

AIR CLEANER.....	C-2 CRANKSHAFT.....	B-8 GEAR SHIFT CONTROL.....	E-3 OIL PUMP AND OIL PAN (AT).....	D-14 WATER HOSE.....	G-10 RADIATOR.....	C-8 WATER PUMP.....	C-7
AT ASSY (AT).....	D-9 CYLINDER BLOCK.....	D-4 GEAR SHIFT FORK (MT).....	G-6 RADIATOR.....	H-6	I-11 SELECTOR LEVER (AT).....	E-9	
AT CASKET SET (AT).....	D-9 CYLINDER HEAD.....	B-3 INTAKE MANIFOLD.....	H-11	J-12	L-13 TIMING BELT.....	B-10	
AT PARKING BRAKE (AT).....	D-13 DIFFERENTIAL GEAR-L-2 LABEL.....	C-11 MUFFLER.....	J-13	M-4 TRANSMISSION (AT).....	D-11	N-15 TRANSMISSION (MT).....	O-3
CARBUKTOR.....	B-9 EMISSION CONTROL-C-11 MUFFLER.....	B-12 ENGINE GASKET SET-L-2 OIL HOSE (AT).....	B-6 OIL PAN.....	B-5 TRANSMISSION CASE (AT).....	D-16		
CLUTCH (MT).....	D-2 ENGINE MOUNTING.....	B-6 OIL PAN.....	B-5 TRANSMISSION CASE (MT).....	D-9			
CONTROL CABLE.....	C-3 FUEL PUMP.....	C-5 OIL PUMP.....	C-6 TRANSMISSION CASE (MT).....				

BATTERY.....	F-6 FRONT BODY PANEL.....	I-2 FRONT SEAT.....	J-12 LOCK SET AND RADIO.....	F-13 REAR SUSPENSION.....	G-3 STEERING WHEEL.....	G-7	
FRONT ACTUATOR MOTOR-H-2	FRONT BUMPER.....	I-8 FRONT SUSPENSION-G-2 PARKING BRAKE.....	H-6 REAR WHEEL BRAKE.....	H-5 STRIPE TAPE AND NUO FLAP.....	J-4 SWITC		
BRAKE PIPING.....	H-3 FRONT DOOR CLASS-J-3 FRONT WHEEL BRAKE-H-4 PEDAL.....	G-2 PARKING BRAKE.....	H-6 REAR WHEEL AND TIRE-I-4 SWITC				
CAR WASHER.....	I-13 FRONT DOOR LOCK-J-5 FRONT WINDOW.....	G-2 PARKING BRAKE.....	G-6 ROAD WHEEL AND TIRE.....	G-12			
DOOR RAIL PIV.....	J-5 FRONT DOOR PANEL-J-7 FUEL TANK.....	J-10 REAR BODY PANEL.....	I-4 SIDE BODY PANEL.....	J-13 VENTILATION.....	I-2		
DISTRIBUTOR.....	F-5 FRONT FENDER.....	I-5 GENERATOR.....	I-5 SIDE BODY PANEL.....	J-17 WASHER.....	F-15		
FLAME MAT.....	J-2 FRONT HOOD PANEL.....	I-3 INSTRUMENT PANEL.....	I-9 REAR BUMPER.....	F-7 WIPER.....	F-14		
FRONT AXLE.....	G-5 FRONT LAMP.....	J-3 INTERIOR TRIM.....	J-3 REAR LAMP.....	F-10 STARTING MOTOR.....	F-2 WIRING HARNESS.....	F-10	
				F-9 STEERING LINK.....	G-8		

FIG.40 (F-2) STARTING MOTOR

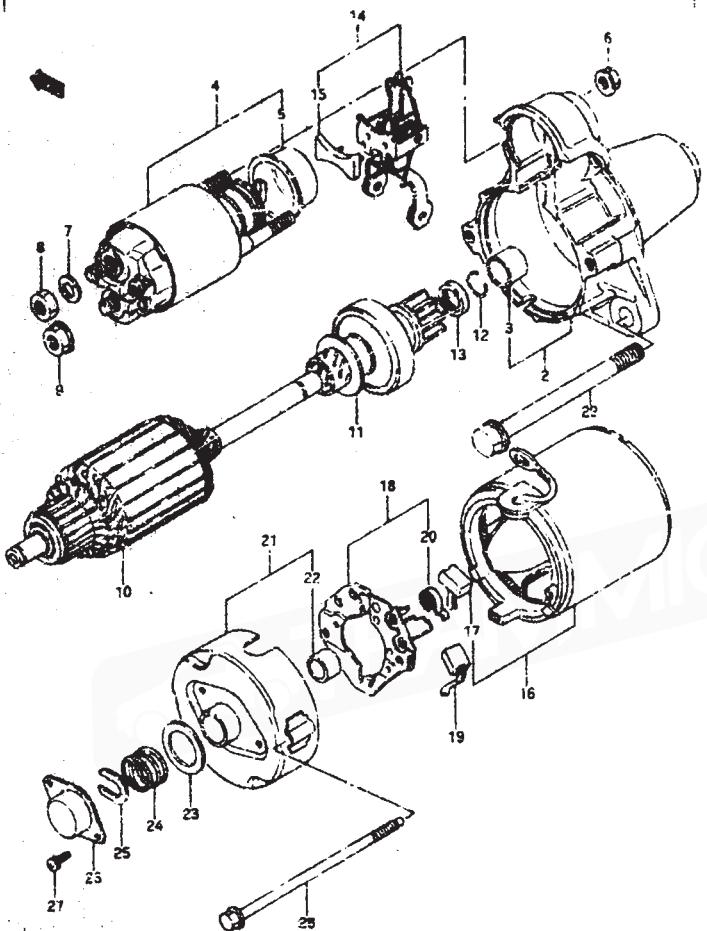

SS40T E24


BATTERY.....	F-6	FRONT BODY PANEL.....	1-2	FRONT SEAT.....	J-12	LOCK SET AND RADIO.....	T-1	R SUSPENSION.....	G-3	STEERING WHEEL.....	G-7
Brake Master Cylinder.....	H-2	FRONT BUMPER.....	J-8	FRONT SUSPENSION.....	G-6	PARKING BRAKE.....	H-4	REAR WHEEL BRAKE.....	H-5	STRIP TIRE AND MU FLAP.....	J-4
Brake Piping.....	H-3	FRONT DOOR GLASS.....	J-9	FRONT WHEEL BRAKE.....	H-4	PEDAL.....	G-10	REAR WHEEL AND TIRE.....	G-4	SWING.....	F-12
CAR HEATER.....	I-13	FRONT DOOR LOCK.....	J-9	FRONT WINDOW.....	J-6	REAR AXLE.....	H-8	SEAT BELT.....	J-13	VENTILATOR.....	J-12
BREAK RAIL PIPE.....	J-45	HORN.....	J-7	EWEL TANK.....	J-10	REAR BODY PANEL.....	I-6	SIDE BODY PANEL.....	J-7	WASHER.....	F-15
DISTRIBUTOR.....	F-5	FRONT FENDER.....	J-9	GENERATOR.....	F-3	REAR BUMPER.....	J-9	SPEDOMETER.....	F-7	WIRE.....	F-13
FLOOR MAT.....	J-2	FRONT HOOD PANEL.....	J-3	INSTRUMENT PANEL.....	J-11	REAR GATE LOCK.....	J-10	STARTING MOTOR.....	F-2	WIRING HARNESS.....	F-10
FRONT AXLE.....	G-2	FRONT LAMP.....	F-8	INTERIOR TRIM.....	J-3	REAR LAMP.....	F-9	STEERING TUBE.....	G-8		

SS40T E24

G-11

REF. NO.	PART NO	DESCRIPTION	REMARKS
1-1	31100-81300	MOTOR ASSY, starting	1 MT
1-2	31100-84110	MOTOR ASSY, starting	1 AT
2-1	31151-78010	HOUSING, motor drive	1 MT
2-2	31151-7K211	HOUSING, motor drive	1 AT
3	31192-79012	BRUSH	1
4	31220-84010	SWITCH ASSY	1
5	34221-78310	COVER	1
6	31251-78210	NUT	2
7	08321-21066	LOCK WASHER	1
8	08310-12086	NUT	1
9	31266-78221	NUT	1
10	31311-79620	ARMATURE	1
11	31320-79620	CLUTCH ASSY	1
12	31312-79010	RING, stop	1
13	31313-79010	COLLAR	1
14	31391-79010	LEVER, pinion drive	1
15	31254-79010	SEAL, switch	1
16	31110-79310	YODE ASSY	1
17	31191-78221	BRUSH	1
18	31173-79010	HOLDER ASSY, brush	1
19	31131-79010	BRUSH	1
20	31135-79010	SPRING, DRIVE	2
21	31170-78021	HOUSING, commutator end	1
22	31172-79010	BRUSH	1
23	31264-78310	GASKET	1
24	31371-78310	SPRING	1
25	31372-79010	PLATE	1
26	31174-79010	CAP, end	1
27	31136-78310	SCREW	2
28	31281-79010	BOLT	2
29	09103-08024	BOLT	2

FIG. 41 (F-3) GENERATOR

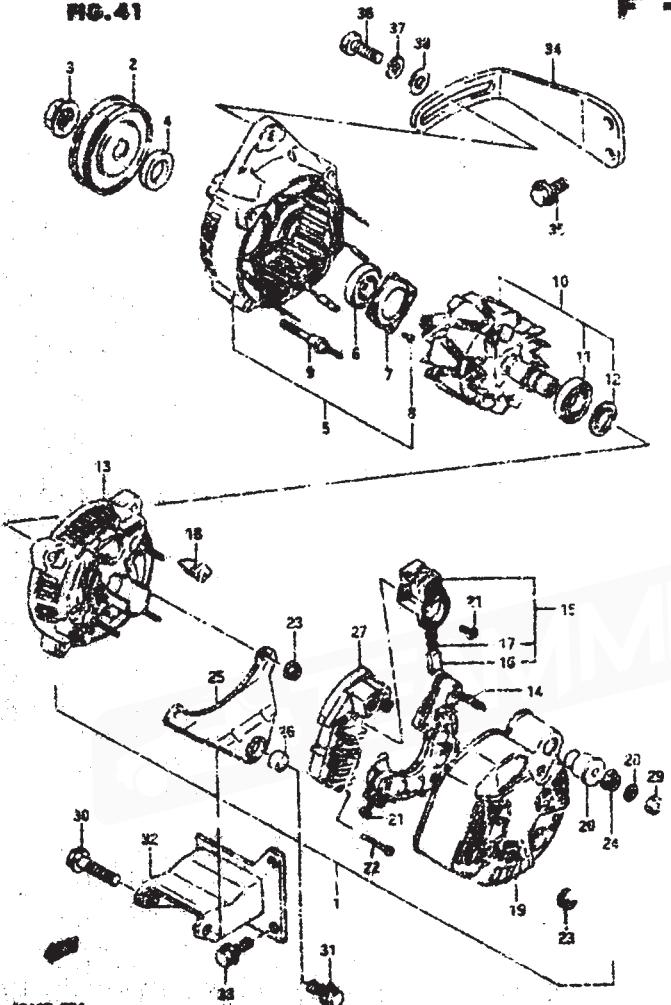


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31403-45510	GENERATOR ASSY	1	
2	31171-45510	..MALLEY	1	
3	31792-42610	..NUT	1	
4	31792-42610	..SPACER	1	
5	31585-45510	..FRAME ASSY, drive end	1	
6	31582-42610	..BEARING, drive end	1	
7	31585-42610	..RETAINER, bearing	1	
8	31395-42610	..SCREW	4	
9	31387-82110	..BOLT	8	
10	31710-42610	..MOTOR ASSY	1	
11	31612-42610	..BEARING	2	
12	31613-42610	..COVER, bearing	2	
13	31611-45510	..FRAME, end case	1	
14	31621-45510	..RECTIFER	1	
15	31654-45511	..WHEEL ASSY	1	
16	31671-81110	..BRUSH	2	
17	31635-42610	..SPRING, COMM.	2	
18	31621-42610	..INSULATOR, terminal	4	
19	31611-45510	..COMM., end case	1	
20	31514-45510	..FLASH, terminal	1	
21	31516-45510	..COPPER	7	
22	31517-42610	..COPPER	2	
23	08310-11086	..NUT	7	
24	08310-11066	..NUT	1	
25	31613-47610	..STAY	1	
26	31516-42610	..BUSH, GEAR	1	
27	32500-45510	..TOR ASSY, generator	1	
28	08311-31087	LOCK WASHER	1	
29	08310-11086	NUT	1	
30	01517-08356	BOLT	1	
31	01517-08256	BOLT	1	

SEARCH 22A

BATTERY	1-6	FRONT BODY PANEL	1-1	FRONT SEAT	1-1	LOCK SET AND TIGHTENING	1-1	REAR BUMPER	1-1	STEERING WHEEL	1-1	G-7
DRIVE MISTER CYLINDER	1-2	FRONT BUMPER	1-1-8	FRONT SUSPENSION	1-6	ARMING BRAKE	1-1-8	REAR WHEEL STRAKE	1-1-5	STRIKE TAPE AND WING FLAP	1-4	
DRIVE MISTER CYL	1-3	FRONT DOOR GLASS	1-1-9	FRONT WHEEL BRAKE	1-4	STEER	1-1-8	REAR WHEEL STRAKE AND TIRE	1-4	SWITCH	1-10	
CAB HEATER	1-13	FRONT DOOR LOCK	1-1-9	FUEL TANK	1-6	REAR AXLE	1-4	SEAT BELT	1-1-5	VENTILATOR	1-12	
CHECK GAUGES WIRE	1-14	FRONT DOOR PANEL	1-1-7	FUEL TANK	1-1-10	REAR BODY PANEL	1-6	REAR BODY PANEL	1-1-2	WHEEL	1-19	
CAB REFRIGERATOR	1-5	FRONT FENDER	1-1-3	GENERATOR	1-1-7	REAR BUMPER	1-1-9	SUSPENSION	1-1-7	WIPER	1-14	
FRONT MAT	1-2	FRONT FLOOR PANEL	1-1-3	INSTRUMENT PANEL	1-1-5	REAR WIRE LOCK	1-1-14	SWITCHES	1-1-2	WIRING HARNESS	1-17	
FRONT AXLE	1-7	FRONT LAMP	1-1-9	WHEELER CUP	1-1-5	REAR LAMP	1-1-9	SWINGING LINK	1-1-6			

FIG. 46

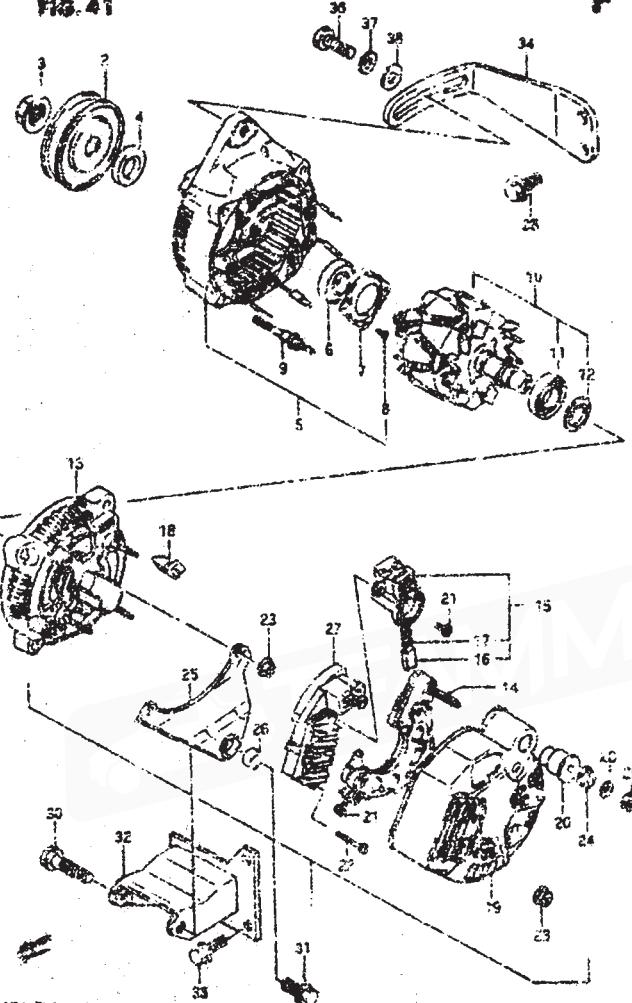

F - 4


FIG. 41 (F-4) SERVER

三

REF. NO.	PART NO.	DESCRIPTION	REMARKS
32	17910-41051	SHIM, general	1
33	03497-08163	BOLT	1
34	17-21-04000	WREN, adjuster	1
35	01517-01020	BOLT	2
36	01107-00732	BOLT	1
37	08711-21023	LOCK WASHER	1
38	08161-08030	WASHER (8.2x20x5.2)	1

• ४०८३१ • ५७८

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RATCHET	F-13	MOTOR SUSPENSION	G-5	STEERING WHEEL	G-7
BRAKE Master CYL INNER	H-2	FRONT HUMPER	I-8	FRONT SUSPENSION	G-2	HORN HO. WARM.	H-8	REAR BRAKE BRAKE	H-9	STRIPES TAPE AND HEAD FLAP	J-9
Brake P. HINGE	X-3	FRONT DOOR CLASS	J-8	FRONT WHEEL BRAKE	I-4	PEDAL	G-16	SIDE WHEEL BRAKE TIME	G-14	SWITCH	I-12
CAR HEAT NR.	J-13	FRONT DOOR LOCK	I-9	FRONT WINDSHIELD	J-6	REAR AXLE	G-8	SEAT BELT	J-13	VENTILATOR	I-12
CHICANE FL. INT.	A-9	FRONT DOOR PANEL	I-7	FUEL TANK	J-10	REAR WIND. PANEL	G-8	SIDE BODY PANEL	J-7	WHEEL	F-15
DISTRIBUTOR	A-9	FRONT FENDER	I-5	GENERATOR	F-3	REAR WINDSHIELD	H-9	SPOTMETER	F-7	WIPER	F-14
FLYING MIT.	J-2	FRONT FLOOR PANEL	I-3	SMOKEVENT PANEL	I-11	REAR SEAT LOCK	H-16	SPURTING MOUTH	F-4	ZINCING ENGINE	F-10
FRONT AXLE	G-5	FRONT LAMP	I-3	SWINGER TRIM	F-8	REAR LAMP	F-8	SPREADING LINE	G-8		

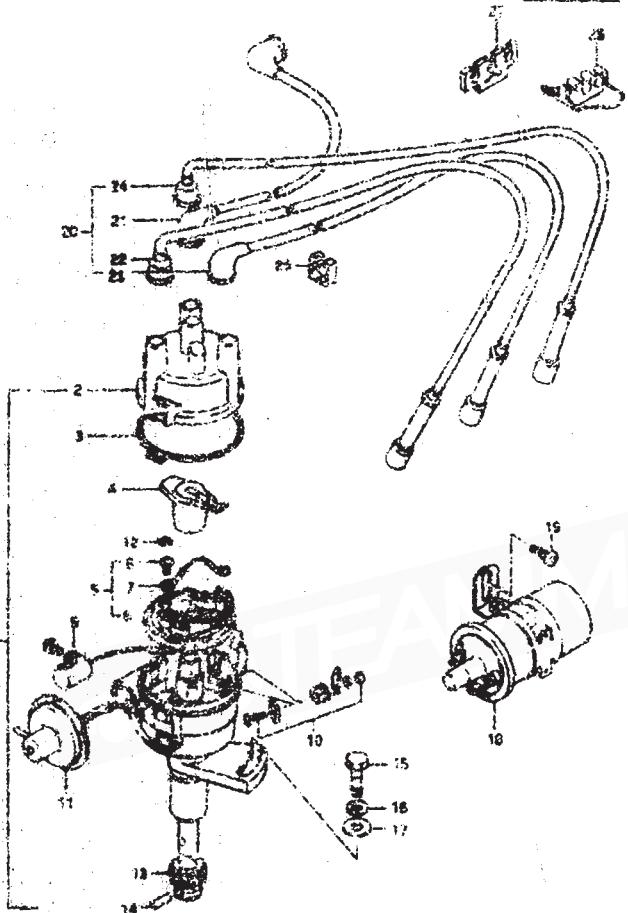

ITEM NO.	PART NO.	DESCRIPTION	REPLACES
1	35100-78010	DISTRIBUTOR ASSY	1
2	35101-78010	CAP	1
3	35102-78010	SEAL, housing	1
4	35103-78010	ROTOR ASSY	1
5	35104-78010	WIREMEN ASSY	1
6	35105-78010	...PRIMARY WIRE	1
7	35106-78010	...SECOND WIRE, second	1
8	35107-78010	...SECOND WIRE, first	2
9	35108-78010	...THERM. RAMP	1
10	35201-78010	...TERMINAL ASSY	1
11	35202-78010	...CONTROLLER ASSY, VACUUM	1
12	35203-78010	...R.F. ADJ	1
13	35207-78010	...GEAR	1
14	35208-78010	...PIN	1
15	35209-78010	BOLT (8X30)	1
16	35701-21004	LOCK WASHER	1
17	35702-08000	WASHER (1.242±0.01)	1
18	35910-04010	COIL ASSY, Ignition	1
19	36142-06123	SCREW	2
20	35703-01070	CORD ASSY, High tension	1
21	35710-01070	...CORD, high tension No.1	1
22	35710-01070	...CORD, high tension No.2	1
23	35710-01070	...CORD, high tension No.3	1
24	35720-01070	...CORD, high tension No.4	1
25	35902-01070	...CLAMP	1
26	35902-01010	...CLAMP	1
27	35908-03000	BRND	1

FRONT BODY PANEL	1-6	FRONT BODY PANEL	1-7	FRONT SEAT	1-12	LOCK SET AND PADDOCK STAND	1-13	FRONT SUSPENSION	1-14	STEERING WHEEL	1-15	STEERING WHEEL	1-16
FRONT BASTER CYLINDER	1-12	FRONT BUMPER	1-16	FRONT SUSPENSION	1-17	PARKING BRAKE	1-18	FRONT WHEEL	1-19	CHROME TIRE AND RUBBER	1-20	CHROME TIRE AND RUBBER	1-21
FRONT BRAKE PIPE	1-13	FRONT DOOR GLASS	1-8	FRONT WHEEL BRAKE	1-4	PEDAL	1-19	REAR BRAKE	1-21	SWITCH	1-12	SWITCH	1-13
FRONT BRAKES	1-14	FRONT DOOR PANEL	1-9	FRONT WHEEL	1-5	SHAY GEAR	1-14	REAR BRAKE	1-22	VENTILATOR	1-12	VENTILATOR	1-13
FRONT CENTER	1-15	FRONT DOOR PANEL	1-10	FUEL TANK	1-10	SIDE BODY PANEL	1-7	REAR BRAKE	1-23	WASHING	1-19	WASHING	1-20
FRONT DOOR	1-16	FRONT DOOR PANEL	1-11	REVERSE GEAR	1-5	REAR BRAKE	1-19	REAR BRAKE	1-24	WHEEL	1-14	WHEEL	1-15
FRONT DOOR	1-17	FRONT DOOR PANEL	1-12	REVERSE GEAR	1-6	REAR BRAKE	1-20	REAR BRAKE	1-25	WHEEL	1-15	WHEEL	1-16
FRONT DOOR	1-18	FRONT DOOR PANEL	1-13	INSTRUMENT PANEL	1-11	REAR BRAKE	1-21	REAR BRAKE	1-26	WHEEL	1-16	WHEEL	1-17
FRONT DOOR	1-19	FRONT DOOR PANEL	1-14	INSTRUMENT PANEL	1-12	REAR BRAKE	1-22	REAR BRAKE	1-27	WHEEL	1-17	WHEEL	1-18
FRONT DOOR	1-20	FRONT DOOR PANEL	1-15	INTERIOR TRIM	1-13	REAR BRAKE	1-23	REAR BRAKE	1-28	WHEEL	1-18	WHEEL	1-19

FIG. 43 (E-4) METAL

三·三

REF. NO.	PART NO.	DESCRIPTION	REMARKS
4	35110-7-320	BATTERY (12V, 26AH)	1
4	35460-70260	THAT, BATTERY	1
3	35463-70500	MODULE, terminal	1
3	56740-80200	LINK ASSTY, Function	1
3	58100-30200	CABLE, TRAILING ANODE	1
6-1	35450-70012	CABLE, GROUND	1 NT
5-2	35060-61000	CABLE, GROUND	1 AZ
7	08113-05000	WAT	1


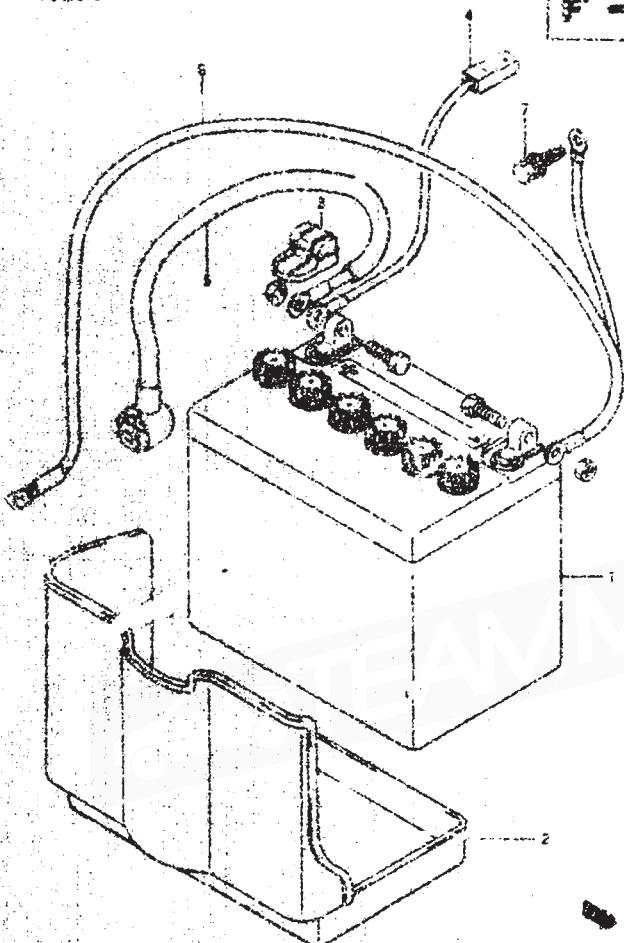


FIG. 44

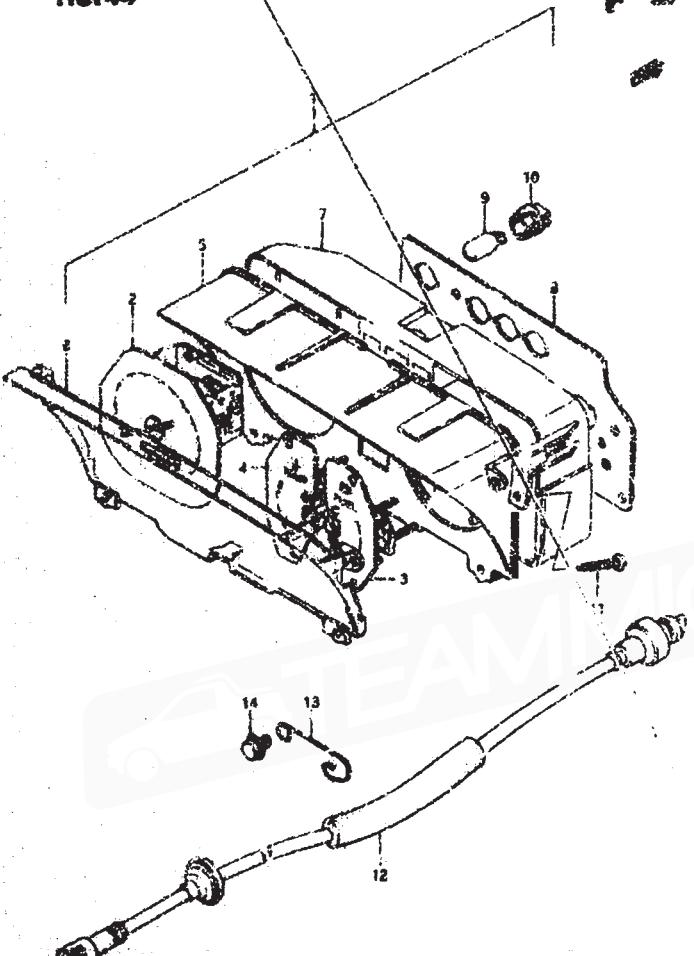

F - 7

FIG. 44 (F-7) SPEEDOMETER

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	34100-81130	SPEEDOMETER ASY	1	AT
1-2	34100-81140	SPEEDOMETER ASY	1	AT
2-1	54120-91130	SPDT ASY, SPEEDOMETER	1	AT
2-2	54120-91140	BODY ASY, SPEEDOMETER	1	AT
3	34351-78000	FOOT ASY, FUEL NOZZLE	1	
4	34460-79021	SPDT ASY, TACHOMETER	1	
5	34111-79040	WHEEL	1	
6	34112-79010	GASS	1	
7	34151-79010	CAB	1	
8	34152-79400	JF ASY, MOTOR DRIVE	1	
9	16941-1-37200	RAE (17V, 3.60)	1.0	
10	34177-64010	SPDT	1.0	
11	07462-34209	SO-EN	1	
12	34810-76000	CABLE ASY, SPEEDOMETER	1	
13	34463-79040	CLAMP	1	
14	01331-06101	BOLT	1	

FRONT BODY PANEL	1-2	FRONT SEAT	1-12	LOCK SET AND RADIO	1-13	SPARE TIRE	1-3	STEERING WHEEL	1-7
FRONT MASTER CYLINDER	1-2	FRONT BRAKES	1-8	FRONT SUSPENSION	1-2	DRIVE WHEEL S-ARE	1-5	STRIKE TAPE AND MUD FLAP	1-4
DRIVE PIPE	1-13	FRONT DOOR GLASS	1-6	FRONT WHEEL BRAKE	1-4	DRIVE WHEEL AND TIRE	1-4	SWITCH	1-12
CAB HEATER	1-13	FRONT DOOR LOCK	1-9	FRONT WHEEL	1-4	DRIVE BELT	1-13	VENTILATOR	1-13
DRIVE SHAFT PIPE	1-20	FRONT DOOR PANEL	1-1	FUEL TANK	1-10	DRIVE RD Y WHEEL	1-7	MOTOR	1-19
DISPENSER	1-3	FRONT FENDER	1-5	FRONT BODY PANEL	1-10	SPARE TIRE SR	1-7	WHEEL	1-15
FLOOR MAT	1-2	FRONT XDOOR PANEL	1-5	INSTRUMENT PANEL	1-11	FRONT BUMPER	1-7	WHEEL	1-10
FOOT PEDAL	1-20	FRONT XDOOR	1-6	INTERIOR TRIM	1-3	REAR BUMPER	1-2	WHEEL	1-10

FIG. 65

F - 3

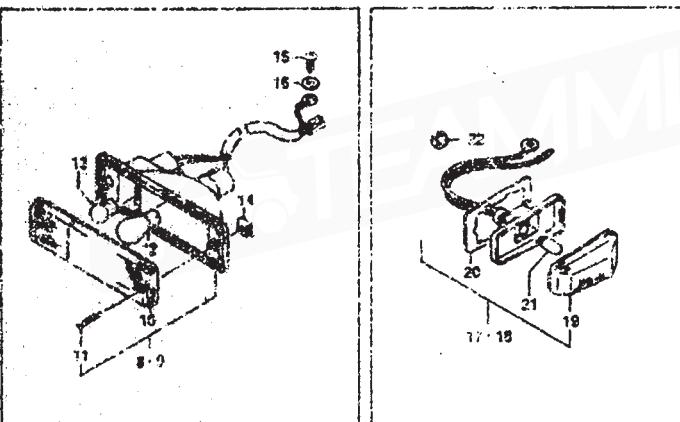
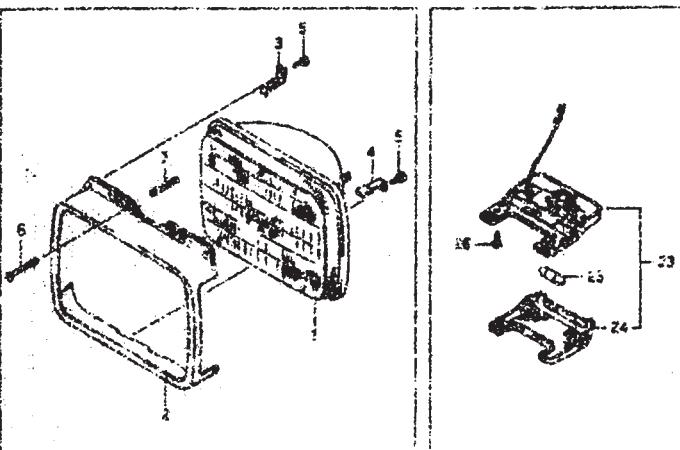


FIG. 65 (F-3) FRONT LAMP

2 TT


ITEM	PART NO.	DESCRIPTION	QTY
1	35123-50100	UNIT, ASSEMBLY	2
2	35123-50100	SIM	2
3	35136-50100	PLATE, NO.1	4
4	35137-50100	PLATE, NO.2	2
5	07212-04100	SCREW	6
6	35134-57000	SCREW, ADJUST	6
7	35135-57000	SPRING, ADJUST	6
8	35001-51000	LAMP ASSY, SIDE/REAR RH	1
9	35002-51000	LAMP ASSY, SIDE/REAR LH	1
10	35613-51000	LENS	2
11	03112-00200	SCREW	4
12	09471-40000	BULB (12V-3W)	2
13	09471-12000	BULB (22V, 3W)	2
14	09146-04010	NUT	4
15	03111-00120	SCREW	7
16	03522-21000	WIRE HAR	2
17	35610-50000	LAMP ASSY, SIDE TURN SIGNAL RH	1
18	35610-50000	LAMP ASSY, SIDE TURN SIGNAL LH	1
19	36412-70000	LENS	2
20	36413-70000	SCREW	2
21	09471-12075	BULB (12V, 3W)	2
22	09308-00010	SHAMMET	2
23	36210-70002	LAMP ASSY, SIDE	2
24	36212-70000	LENS	2
25	09471-12075	BULB (12V, 3W)	2
26	05141-05240	SCREW	2

SHEET 22A

HATSTYLING.....	F-6	FRONT BODY PANEL.....	I-2	FRONT SEAT.....	J-12	LOCK SET AND RADIO.....	K-7	REAR SUSPENSION.....	L-3	STEERING WHEEL.....	M-7
SPRING PNEUMATIC.....	H-2	FRONT BUMPER.....	J-6	FRONT SUSPENSION.....	G-2	PARKING BRAKE.....	H-6	REAR WHEEL BRAKE.....	H-5	STRIP TAPE AND SWFLAP.....	N-4
SPRING PNEUMATIC.....	H-3	FRONT DOOR GLASS.....	J-6	FRONT WHEEL BRAKE.....	H-6	PEDAL.....	I-16	RAD WHEEL AND TIRE.....	G-4	SWFLAP.....	P-12
DAMPER PIPE.....	I-13	FRONT DOOR LOCK.....	J-9	FRONT WINDSHIELD.....	J-6	REAR AXLE.....	G-6	SWFLAP.....	J-13	VENTILATOR.....	J-12
DOOR GEAR PIPE.....	I-2	FRONT DOOR PANEL.....	J-2	FUEL TANK.....	J-10	REAR BODY PANEL.....	I-6	SWFLAP PANEL.....	J-7	WHEEL.....	P-15
DRIVER'S SEAT.....	F-3	FRONT FENDER.....	I-3	GENERATOR.....	F-3	REAR COVER.....	I-6	SWFLAP METER.....	J-7	WHEEL BEARING.....	P-15
DRIVER'S SEAT.....	I-2	FRONT HEAD PANEL.....	I-3	INSTRUMENT PANEL.....	F-3	REAR GATE LOCK.....	I-10	SWFLAP MOTOR.....	J-7	WHEEL BEARING.....	P-15
FRONT.....	I-2	FRONT LAMP.....	F-5	INTERIOR TRIM.....	J-3	REAR LAMP.....	I-9	SWFLAP LINK.....	J-10	WHEEL BEARING.....	P-10

FIG.46 (F-9) REAR LAMP

2'7"

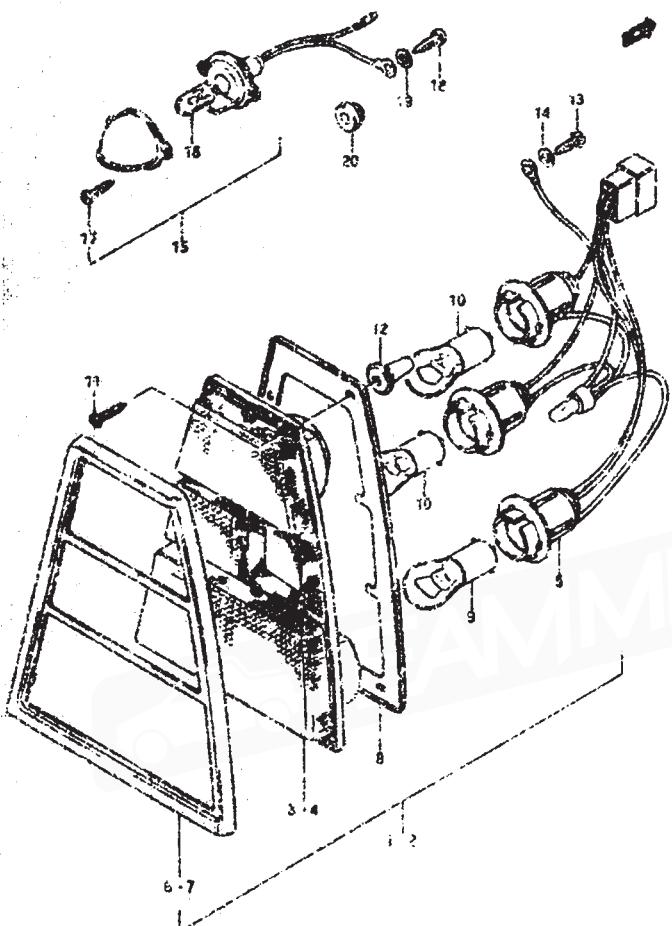


REF. NO.	ART. NO.	DESCRIPTION	REMARKS
1	35673-81010	LAMP ASSY, combination RH	1
2	35506-1 D10	LAMP ASSY, combination LH	1
3	35450-41010	UNIT, combination RH	1
4	35473-81010	UNIT, combination LH	1
5	35538-81000	SOCKET	2
6	35651-81000	BULB, RH	1
7	35671-81000	BULB, LH	1
8	35653-41000	BASE, base	2
9	03471-12051	BULB (12V, 21/3W)	2
10	03471-12056	BULB (12V, 25W)	4
11	03462-34169	SCREW	3
12	09139-04004	NUT	4
13	03111-03126	SCREW	2
14	03322-21056	WASHER	2
15	35610-80001	LAMP ASSY, license	2
16	03471-12076	BULB (12V, 3W)	2
17	03111-03165	SCREW	4
18	03111-03126	SCREW	2
19	03322-21036	WASHER	2
20	03468-16009	SCREW	1

## 35673-81010

BATTERY.....	J-6	FRONT BODY PANEL.....	J-2	FRONT SEAT.....	J-12	LOCK SET AND RADIO.....	F-13	REAR SUSPENSION.....	G-3	STEERING WHEEL.....	G-7
FRONT MASTER CYLINDER.....	H-2	FRONT BUMPER.....	J-8	FRONT SUSPENSION.....	G-6	PARKING BRAKE.....	H-6	REAR WHEEL STRAKE.....	H-5	STRIKE TIRE AND MUQ FLAP.....	J-4
STABILIZER PIPE.....	J-3	FRONT DOOR GLASS.....	J-3	FRONT WHEEL (SPAKE).....	H-3	PEELER.....	G-10	REAR WHEEL STRAKE.....	G-4	SIDE TIRE.....	J-12
CLOTH HEATER.....	J-13	FRONT DOOR LOCK.....	J-9	FRONT WINDSHIELD.....	J-6	REAR ANGLE.....	G-6	REAR WHEEL STRAKE.....	J-13	MUD FLAP.....	J-12
WIND SHIELD PIPE.....	J-2	FRONT DOOR PANEL.....	J-7	FUEL TANK.....	J-10	REAR BODY PANEL.....	I-6	SIDE BODY PANEL.....	I-7	WHEEL HUB.....	J-12
STEERING RACK.....	J-8	FRONT HEAD PANEL.....	J-3	GENERATOR.....	F-5	REAR BRAKE.....	I-6	SPIDER HUB.....	F-7	WHEEL HUB.....	F-10
FLANGE KEY.....	J-10	FRONT HEAD PANEL.....	J-3	INSTRUMENT PANEL.....	J-11	REAR BRAKE MOTOR.....	I-10	SPIDER HUB.....	F-7	WHEEL HUB.....	F-10
PROTEC ROD.....	J-8	FRONT LAMP.....	J-8	INTERIOR FRNT.....	J-3	REAR LAMP.....	F-9	STEERING LINE.....	G-4	WHEEL HUB.....	K-10

FIG. 47

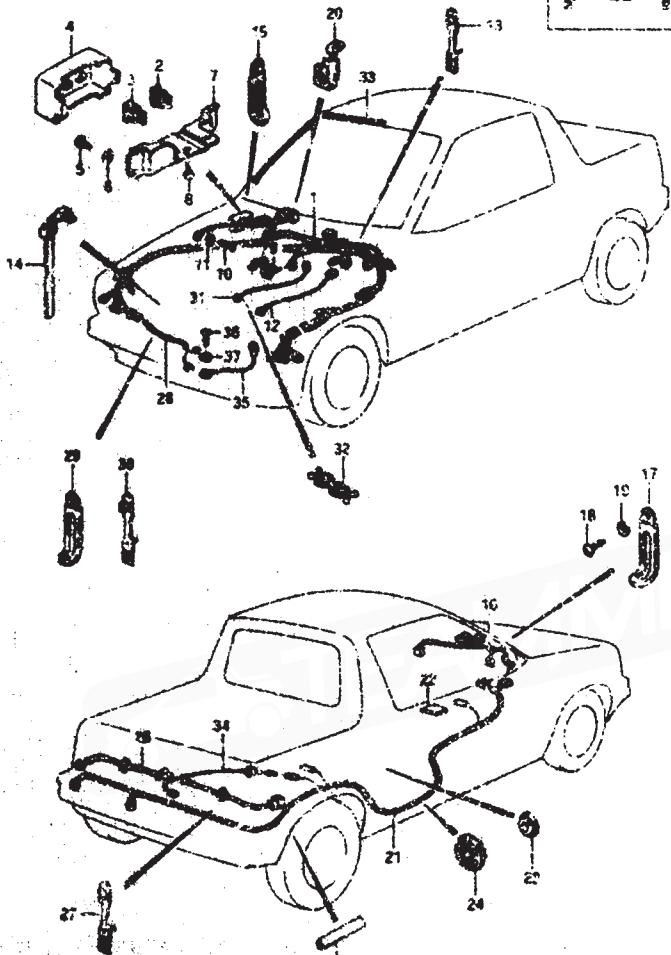

53


FIG. 47 (7-10) WIRING HARNESS

PART NO.	PART NO.	DESCRIPTION	Q'TY	SEARCH NO.
1-1	36610-02170	WIRING ASSY, WIRING NO.1	1	AT
1-2	36610-01180	WIRING ASSY, WIRING NO.2	1	AT
2	1P941L-103101	FUSE (10A)	4	
3	1P941L-131001	FUSE (15A)	6	
4	36717-070221	COPPER, FUSE BOX	1	
5	0J211-08120	SCREW	2	
6	08322-21000	WIRE	2	
7	36791-01000	BRACKET, FUSE BOX	1	
8	0J211-02120	SCREW	2	
9	0J115-26002	BOLT	4	
10	0J211-09120	SCREW	1	
11	08322-21056	WIRE	1	
12	A8919-54000	WIRE, noise suppressor ground	1	
13	L7407-LP405	CLAMP	1	
14	08117-LP4007	CLAMP	5	
15	08408-C6404	CLAMP	2	
16	36423-01071	WIRING ASSY, WIRING NO.3	1	
17	0P404-06400	CLAMP	3	
18	0J211-05120	SCREW	3	
19	0J322-21034	SCREW	4	
20	0P404-06602	CLAMP	2	
21-1	36430-01021	WIRING ASSY, wiring No.3	1	AT
21-2	36610-01071	WIRING ASSY, wiring No.3	2	AT
22	36930-2010	COVER	6	
23	09308-03703	ORIFICE, FUEL LINE	1	
24	09308-25101	ORIFICE, MILL GAS LINE	1	
25	09304-46002	PROTECTOR	4	
26	36641-01000	WIRING ASSY, wiring No.4	1	
27	0M407-03404	CLAMP	4	
28	36620-01120	WIRING ASSY, wiring No.5	1	
29	08408-06415	CLAMP	1	
30	0P407-05400	CLAMP	5	

58407 234

BODY	1-6	FRONT BODY PANEL	1-2	FRONT SEAT	1-12	LOCA SET AND RADIO	1-13	DOOR SUSPENSION	1-5	STEERING WHEEL	1-7
FRONT MASTER CYLINDER	1-2	FRONT DOOR	1-4	FRONT SUSPENSION	1-2	PARKING BRAKE	1-6	EAR WHEEL BRAKE	1-3	STRIKE TAPE AND RAD FLAT	1-3
SHOCK ABSORBER	1-3	FRONT DOOR GLASS	1-8	FRONT WHEEL BRAKE	1-4	PEDAL	1-10	FLAT WHEEL AND THIN	1-4	SWITCH	1-2
CAR HEATER	1-13	FRONT DOOR LOCK	1-9	FRONT WIPER	1-6	REAR AXLE	1-8	SWING SET	1-13	VENTILATOR	1-12
DRUM BRAH. PIPE	1-6	FRONT DOOR PANEL	1-7	FUEL TANK	1-10	REAR BODY PANEL	1-6	SWING SET	1-7	WHEEL	1-13
CHRYSTAL BULB	1-13	FRONT DOOR TRIM	1-2	GEN. GENERATOR	1-3	SWING ARM	1-6	SWING ARM	1-2	WIPER	1-6
EXHAUST BOTT.	1-13	FRONT HEAD PANEL	1-3	INSTRUMENT PANEL	1-11	SWING ARM	1-6	SWING ARM	1-2	WIRING HARNESS	1-10
FRONT DOOR	1-13	FRONT HEAD TRIM	1-3	INSTRUMENT PANEL	1-11	SWING ARM	1-6	SWING ARM	1-2	WIRING HARNESS	1-10
FRONT AXLE	1-6	FRONT LAMP	1-9	INTERIOR TRIM	1-3	SWING ARM	1-6	SWING ARM	1-2	WIRING HARNESS	1-10

Page 63

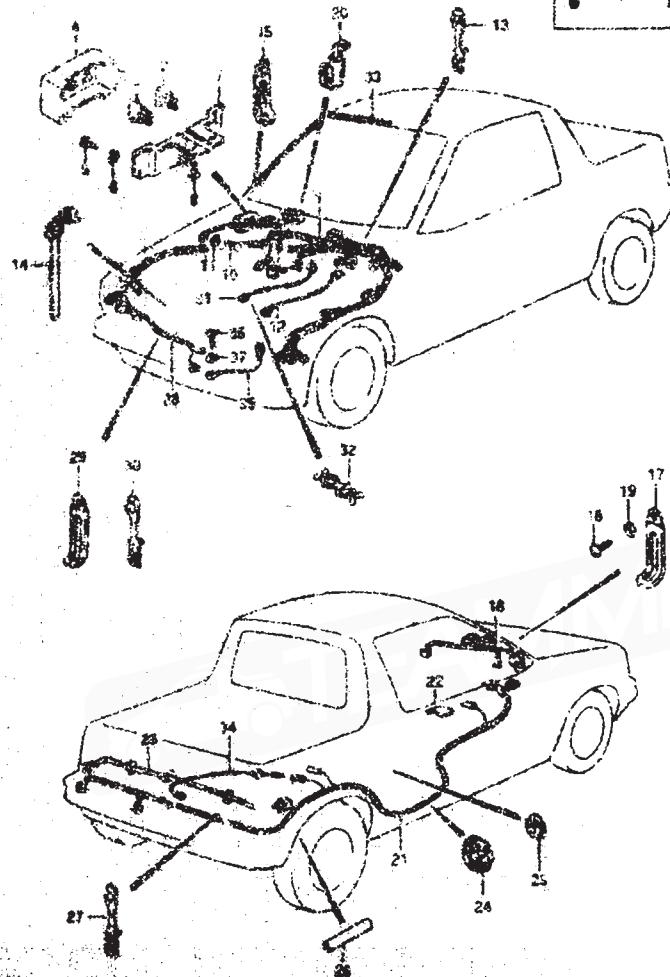

二二

卷之三十一


REF. NO.	PART NO.	DESCRIPTION	REMARKS
31	36840-70100	R.P.M. dial indicator	1
32	04940-00010	O.I.P.	1
33	36840-66300	R.P.M. comp. lamp	1
34	36840-62210	R.P.M. fuel gauge	1
35	39312-01100	V.D.E. radio noise suppressor	1
36	05011-02126	SUNRAY	1
37	04922-01040	INDICATOR	1

卷之三

卷之三

FIG. 48

F - 12

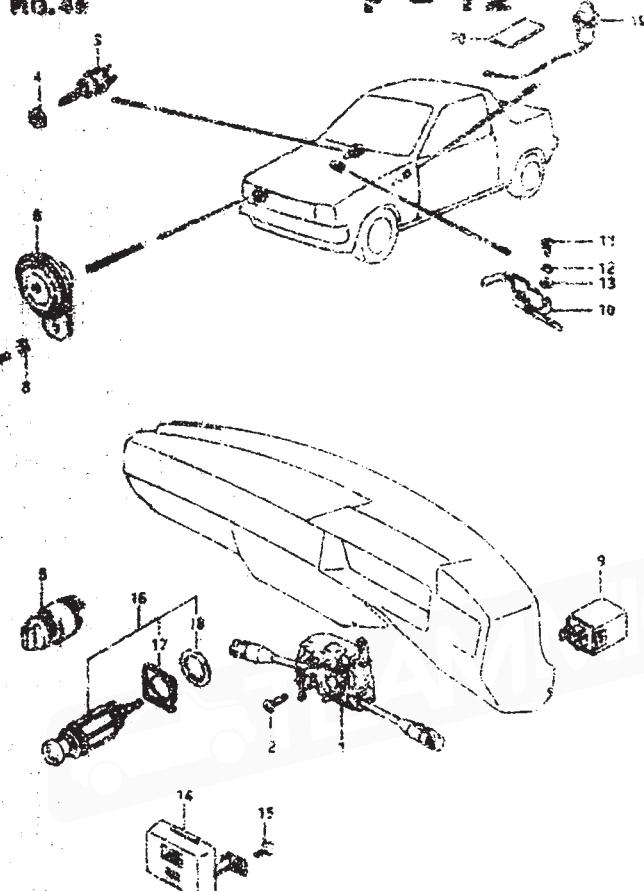

## FIG. 48 (F-12) SETTLING




REF. NO.	PART NO.	DESCRIPTION	QTY	NOTES
1	37400-04222	SWITCH ASSY, combination	1	
2	03541-00006	SWITCH	4	
3	37740-56017	SWITCH ASSY, rear lamp	2	
4	08310-22102	NUT	1	
5	27870-51000	SWITCH ASSY, heater fan	1	
6	37400-70010	HEAT ASSY	1	
7	01101-50126	BOLT	1	
8	09211-21086	LOCK WASHER	1	
9	35611-74314	RELAY, front signal/CC wsg	1	
10	37940-70120	SWITCH ASSY, SECURE	1	AT
11	02112-03158	SCREW	2	AT
12	08321-21075	LOCK WASHER	2	AT
13	08322-21076	WASHER	2	AT
14	39610-76129	COMPUTER ASSY, AT	1	AT
15	02112-06126	SCREW	2	AT
16	39400-03010	LIGHTER ASSY, cigarette	1	
17	16471-73001	SPM, cigarette lighter	1	
18	09160-23007	WASHER (2PC/PAIR)	1	
19	37940-79000	SWITCH ASSY, parking	1	
20	36670-00010	COVER, parking wsg	2	

SHEET 2/2

BATTERY	F-0	FRONT BODY PANEL	F-1	FRONT SEAT	F-12	LOCK SET AND RADIO	F-13	REAR SUSPENSION	G-3	STEERING WHEEL	G-7
BRACE, MASTER CYLINDER	H-2	FRONT RUBBER	H-3	FRONT SUSPENSION	G-2	PARKING BRAKE	H-4	REAR WHEEL BRAKE	H-5	STRIKE TAPE AND MUD FLAP	H-4
BRACE, PIPES	H-3	FRONT DOOR GLASS	H-2	FRONT WHEEL BEARING	H-4	PEDAL	H-6	REAR WHEEL AND TIRE	H-4	SWITCH	H-12
CAB RESTRAINT	I-1	FRONT DOOR LOCK	I-2	FRONT WHEEL	I-4	REAR AXLE	I-6	SEAT BELT	I-5	VENTILATOR	I-12
DECK PAINT, REAR	J-2	FRONT DOOR PANEL	J-7	FUEL TANK	J-10	REAR BODY PANEL	J-6	SIDE BODY PANEL	J-7	WASHER	J-13
DISPENSER	J-3	FRONT FENDER	J-5	GENERATOR	J-7	REAR BUMPER	J-8	SPEEDOMETER	J-7	WIPER	J-14
FLUID, OIL	K-1	FRONT HOOD PANEL	K-3	INSTRUMENT PANEL	L-1	FRONT DOOR LOCK	L-4	STARTING MOTOR	L-2	WIRING HARNESS	L-10
FRONT AXLE	M-3	FRONT LAMP	M-2	INTERIOR TRIM	N-3	NEAR LAMP	N-5	STEERING LINK	N-6		

FIG. 49 (F-13) LOCK SET AND RADIO

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	77404-7606L	LOCK SET	1	
2	37120-63000	SWITCH ASY, ignition	1	
3	77420-7081J	CYLINDER ASY, lock RH	1	
4	77400-7027J	CYLINDER ASY, lock LH	1	
5	63601-64030	FUEL TANK ASY, fuel under lid	1	
6	36100-64120	SOLO J ASY (AN)	1	
7	39290-78300	ANTENNA ASY	1	
8	33551-64000	CONDENSER, noise suppressor	1	
9	50191-81000	MIC, tuner search	1	
10	35553-81000	FILTER ASY, noise suppressor	1	
11	37244-70210	KEY, blank	1	KEY

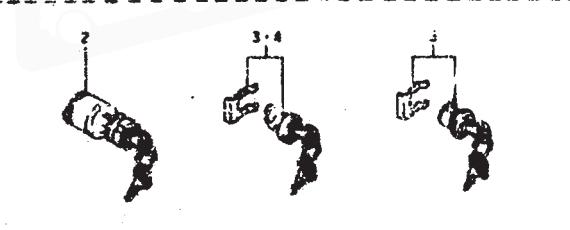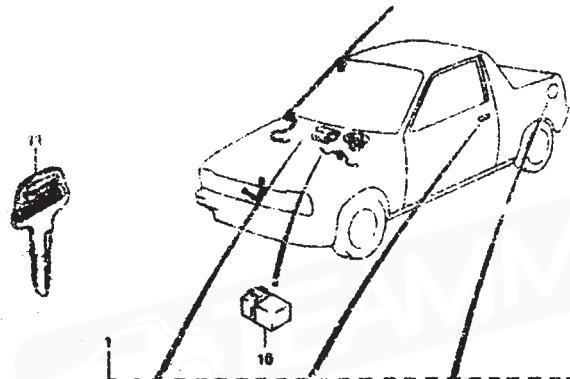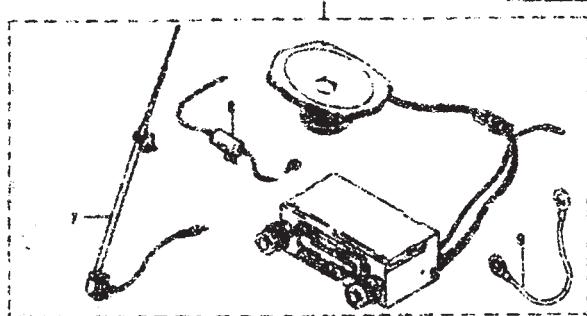


BATTERY.....	J-6	FRONT BODY PANEL.....	I-2	FRONT SEAT.....	J-12	LOCK SET AND RADIO.....	I-13	NEAR SUSPENSION.....	G-3	SLEEPING WHEEL.....	G-7
DRAG, MASTER CYLINDER.....	N-2	FRONT BUMPER.....	J-5	FRONT SUSPENSION.....	G-2	PARKING BRAKE.....	H-6	REAR WHEEL LIDKME.....	H-5	STRIPE TAPE AND MUD FLAP.....	J-4
DRIVE, STEER. ....	N-3	FRONT DOOR GLASS.....	J-6	FRONT WHEEL BEARING.....	H-4	PEDALS.....	G-16	ADJUST WHEEL AND TIRE.....	C-4	SWITCH.....	F-12
DOOR HINGE.....	J-13	FRONT DOOR LOCK.....	J-9	FRONT WINDSHIELD.....	J-4	SEAT BELT.....	G-6	VENT. LATOR.....	I-12		
DOOR SEAL, PDRG.....	J-15	FRONT DOOR PANEL.....	I-2	FUEL TANK.....	J-10	SIDE BODY PANEL.....	I-6	WASHER.....	I-15		
DRIVE MOTOR.....	J-3	FRONT FENDER.....	J-5	GENERATOR.....	F-3	SPEDOMETER.....	F-2	WHEEL.....	F-14		
FRONT BRAKE.....	J-2	FRONT HOOD PANEL.....	I-3	INSTRUMENT PANEL.....	I-11	STEERING MOTOR.....	F-2	WIRING HARNESS.....	F-10		
FRONT HEAD.....	J-6	FRONT LAMP.....	F-8	INTERIOR TRIM.....	J-5	STEERING LINK.....	O-8				

FIG. 50 (F-14) WIPER

Q'TY


REMARKS

REF. NO.	PART NO.	DESCRIPTION	Q'TY
1	36310-01010	ARM ASSY, wiper	2
2	36340-01010	BLADE ASSY, wiper	2
3	36317-73003	SCREW, CLEVIS	4
4	08320-12004	NUT	2
5	36102-31003	LINK ASSY, wiper	1
6	36274-01000	CAP	2
7	36101-01000	MOTOR ASSY, wiper	1
8	01107-06126	ROLT	2
9	08321-21066	LOCK WASHER	2
10	08322-21066	WASHER	2
11	08316-26016	NUT	2

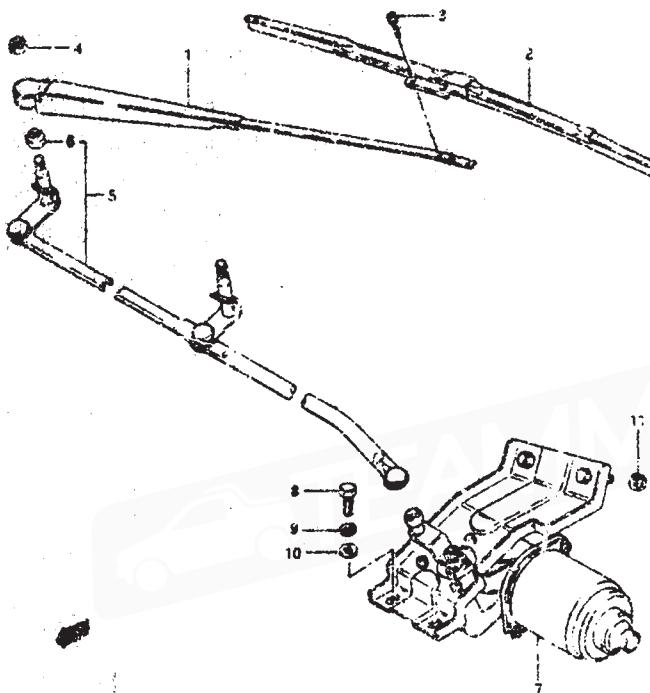

BATTERY.....	F-6	FRONT BODY PANEL.....	J-2	FRONT SEAT.....	J-12	LOCK SET AND RADIO.....	F-13	OVER STURRSIDE HORN.....	J-3	STEERING WHEEL.....	G-7
BRAKE master CYLINDER.....	H-2	FRONT BUMPER.....	J-8	FRONT SUSPENSION.....	J-2	PARKING BRAKE.....	J-16	HORN SWITCH BRKAGE.....	H-5	STRIPE TAPE AND MUD FLAP.....	J-1
BRAKE FLUID.....	J-3	FRONT DOOR GLASS.....	J-5	FRONT WHEEL BRAKE PEDAL.....	J-1	SPD WHEEL AND TIRE.....	J-4	SWITCH.....	J-12		
CAP HEATER.....	J-13	FRONT DOOR LOCK.....	J-9	FRONT WHEEL.....	J-3	SEAT BELT.....	J-13	VENTILATOR.....	J-12		
DRIVE BELT PULLEY.....	J-14	FRONT FLOOR PANEL.....	J-7	FUEL TANK.....	J-10	SEAT BOLT HORN.....	J-7	WHEEL.....	J-15		
DRIVE BELT.....	J-8	FRONT FENDER.....	J-5	GEARBOX.....	F-3	SUSPENSION.....	J-2	WIPER.....	F-14		
FLOOR MAT.....	J-3	FRONT FLOOR PANEL.....	J-3	INTERIOR PANEL.....	J-11	REAR BRAKE LOCK.....	J-15	WIRING HARNESS.....	F-2		
FRONT AXLE.....	J-3	FRONT LAMP.....	J-4	INTERIOR STRBNG.....	J-3	REAR LAMP.....	J-9	WIRING LINE.....	J-9		

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	30480-81000	NOZZLE ASSY	1	
2	32112-05086	SCREW	2	
3	30490-81000	HOSE ASSY	1	
4	30496-26110	JOINT, 3/4"	1	
5	30480-73001	TANK ASSY., WASHER	1	
6	30410-66112	PUMP ASSY	1	
7	30257-79500	CAP	1	
8	33421-82000	HOSE, WASHER	1	L:800+600

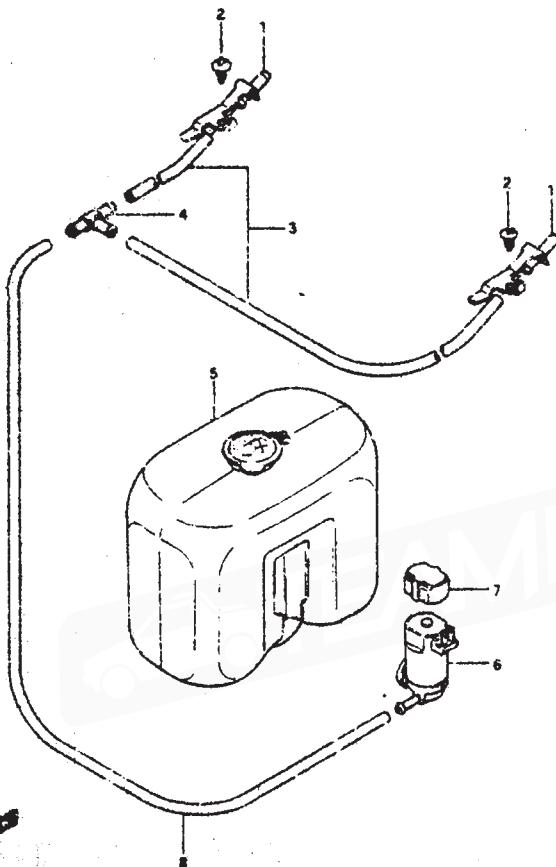

SS-01 E24

SS-01 E24

BATTERY.....	F-6	FRONT BODY PANEL.....I-2	FRONT SEAT.....I-12	LOCK SET AND RADIO.....F-13	REAR SUSPENSION.....G-3	STEERING WHEEL.....G-7
HYDRAULIC MASTER CYLINDER.....H-2		FRONT BUMPER.....I-8	FRONT SUSPENSION.....G-2	PARKING BRAKE.....H-6	REAR WHEEL BRAKE.....H-1	STRIPES TAPE AND MID FLAP.....J-7
DRUM PIPE.....H-3		FRONT DOOR GLASS.....I-8	FRONT WHEEL BRAKE.....H-4	PEDAL.....G-10	REAR WHEEL AND TIRE.....G-6	SWITCH.....F-12
CAR HEATER.....I-13		FRONT DOOR LOCK.....I-9	FRONT WINDSHIELD.....I-6	REAR AXLE.....G-16	SEAT BELT.....J-4	VENTILATOR.....I-12
GEAR, GEAR PIPE.....I-9		FRONT DOOR PANEL.....I-7	FUEL TANK.....I-10	REAR BODY PANEL.....I-8	SIDE BODY PANEL.....I-7	WIPER.....F-15
WATER TANK.....I-13		FRONT DOOR PULLER.....I-5	GENERATOR.....F-3	REAR BRAKE.....I-9	THERMOMETER.....I-7	WIPER BLADE.....F-14
FLOOR MAT.....I-12		FRONT HOOD PANEL.....I-3	INTERIOR TRIM.....I-11	HORN, GATE, LOCK.....I-10	STEERING MOTOR.....F-2	WINDING HARNESSES.....F-10
ENGINE AIRCLE.....I-5		FRONT LAMP.....I-9	INTERIOR TRIM.....I-5	REAR LAMP.....I-9	STEERING LINK.....I-9	

PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.
01537-06103	B-6 B-10 C-2 C-7 C-8	C2112-08124	H-2 G-10 G-11 I-4 J-8	03141-06166 03142-06129 03142-07169 03142-06209	C-12 J-13 I-12 F-7	04221-05109 04221-06129 04111-08036 06111-06003	B-10 B-3 D-12 D-13	08310-12106 08310-22046 "0110-22046 D-3	G-5 H-2 J-6 D-13 G-10	08321-21046 08310-22106 08310-22124 06113-11063	H-2 F-14 B-10 G-11
01537-06403	C-9 C-10 C-12 Z-3 C-6	02112-06163 02112-06166 02122-05128 02122-06128 C-7	H-2 J-5 J-6 B-9 C-6	03141-05109 03211-06105 03211-06128 03211-05108	I-7 I-10 J-12 I-13 I-13	06111-08003 06112-10004 E-5 06112-12004	D-13 D-6 D-7 D-6	08310-22083 08310-22106 08310-22124 06113-11063	E-4 D-13 F-12 J-5	I-1 J-6 J-5 J-8	
01537-06453	D-5	02122-06162	B-9 B-5	03211-05126 03211-05128	F-10 F-10	08113-62017 08113-62047	G-8 D-12	03133-11066 08314-41123	J-5	J-10	
01537-06463	C-11 C-12 B-3	02132-06166 02142-05065 02142-05107	J-9 B-5 J-11	03211-07166 03211-06128 03212-06109	G-7 B-8 F-8	08113-63020 08133-60007 06113-62047	D-11 B-8 D-3	08314-41123 08314-41166 08314-16063	G-9 G-6 C-2	J-12 J-8 B-7	
01537-08163	B-6 B-7 F-4	02142-05126 02142-06103 02142-06106	J-7 B-3 I-13	03212-05169 03241-04126 03241-05085	I-11 I-8 I-5	08133-63037 08143-62077 08211-08183	D-3 E-2 D-13	08313-11066 08314-16064 08314-16063	C-7 J-5 I-13	D-2 D-10 F-4	
01537-08503	B-5	02142-06108	I-3	03241-05106	I-7	08211-15261	E-2	08314-16063	E-3	08321-21063	E-6
01537-08713	B-3	02142-06108	J-8	03241-05108	F-8	05211-25351	E-2	08314-16063	E-4	08321-21063	F-12
01537-08903	B-3	02142-06123	F-5	03241-05123	I-11	08221-25356	E-2	08316-16703	D-6	08316-16703	G-3
01537-10403	B-4	02142-06123	J-12	03241-05123	I-5	08210-11056	F-3	08316-16703	B-6	08316-16703	G-7
01537-12256	B-10	02142-06126	F-12	03241-05126	I-8	08310-11058	I-13	08316-16703	B-7	08316-16703	I-10
01907-10403	B-7	02142-06207	I-11	03241-05125	J-12	08310-11063	E-3	08316-26053	C-8	08316-26053	J-6
02112-03168	F-12	03111-04155	F-9	03241-06126	J-9	08310-11066	B-4	C-9	J-9	08316-26066	J-10
02112-04368	H-5	03111-05126	F-8	03241-06255	J-7	08221-25356	B-10	F-14	B-6	08316-26066	J-12
02112-04106	B-12	03141-05126	F-9	03242-06109	I-12	08210-11056	D-14	J-9	B-6	08321-21088	F-5
02112-05066	B-14	03142-06126	F-10	03242-06169	I-9	08310-11058	F-3	05316-26066	B-13	08316-26066	I-6
02112-05066	B-5	03142-06207	F-11	03242-05129	I-3	08310-11063	J-6	B-15	B-15	08316-26053	J-7
02112-05086	F-15	03111-05165	J-2	03242-05165	I-11	08310-11083	C-4	C-9	C-10	08321-21103	J-10
02112-05086	J-10	03112-04259	F-8	03242-05169	I-3	08310-11083	D-2	08321-21103	B-6	08321-21103	B-6
02112-05106	B-13	03141-04085	J-9	04111-25158	H-5	08310-11123	G-2	08321-21038	F-12	08321-21038	B-7
02112-05126	B-12	03141-04086	F-12	04111-25106	H-2	08310-11123	G-2	08321-21046	B-12	08321-21046	Z-3
02112-05126	B-12	03141-05126	I-6	04111-25106	H-6	08310-11123	G-3	B-15	B-15	08321-21046	E-5
02112-05206	B-14	03141-05105	I-11	04111-25254	G-8	08310-12083	H-5	06321-21047	H-5	06321-21047	G-2
02112-05206	G-7	03147-05106	I-2	04111-30206	G-2	08310-12086	F-2	08321-21036	B-12	08321-21106	I-2
02112-05304	B-15	03141-05125	I-9	04111-30308	G-9	08310-12086	F-14	B-13	B-13	08321-21135	G-2
02112-05304	B-12	03141-05125	I-11	04111-30206	D-11	08310-12086	G-3	B-14	B-14	08321-21066	B-8
02112-05304	B-14	03141-05128	I-12	04111-40506	G-6	08310-11088	J-10	B-15	B-15	08321-31066	H-3
02112-05306	B-13	03141-05163	J-4	04211-09109	B-8	08310-12103	B-6	08321-21057	G-7	08321-31067	Z-10
02112-06096	J-8	03141-05165	I-11	04211-09109	C-6	"08310-12103	G-7	08321-21065	B-5	08321-21065	F-3
02112-06096	J-8	03141-06168	J-11	04211-09169	D-5	E-3	D-5	D-14	D-14	08321-31066	H-3
02112-06096	C-5	03141-06123	C-11	04221-04089	D-6	E-5	E-5	E-7	E-7	08321-31083	C-4


FRONT SUSPENSION	G-2 REAR SUSPENSION	G-3 FRONT WHEEL AND TIRE	G-4 FRONT AXLE	G-5 REAR AXLE	G-6 STEERING WHEEL	G-7
STEERING LINK	G-8 PEDAL AND PEDAL BRACKET (NT) G-10	PEDAL AND PEDAL BRACKET (AT) G-11				

AIR CLEANER	-G-2	DRIVE SHAFT	-B-8	GEAR SHIFT CONTROL	-E-3	GEAR PUMP AND GEAR PAN (AT)	-D-14	WATER HOSE-C-10
AT ASS'Y LAT.	-H-5	CYLINDER BLOCK	-B-4	GEAR SHIFT LEVER (WITH PLATE)	-E-4	GEARULATOR	-C-8	WATER PUMP-C-7
AT CLUTCH SET (AT)	-D-9	CYLINDER HEAD	-B-3	INTERM. MANIFOLD	-E-11	SELECTOR LEVER (AT)	-E-5	
AT PUSHING BEAM	-H-12	CH. FLOORBOARD CLEAR	-G-2	LADDER	-C-3	THIMING BELT	-D-10	
CAM SHIELD AND VALVE	-F-9	EMISSION CONTROL	-C-1	MUFFLER	-C-4	TRANSMISSION (AT)	-D-11	
CASE MOTOR	-G-1	ENGINE GASREL SET	-B-2	OIL PAN (AT)	-D-15	TRANSMISSION (MT)	-D-5	
CLUTCH MTR	-B-2	ENGINE BRAKING	-B-6	OIL PAN	-B-1	TRANSMISSION CASE (AT)	-D-10	
CONTROL CABLE	-C-3	FUEL PUMP	-C-5	OIL PAN	-C-6	TRANSMISSION CASE (MT)	-D-5	

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RADIATOR	G-13	STEERING WHEEL	G-7
Brake Master Cylinder	H-2	FRONT BRAKE PIPING	I-8	FRONT SUSPENSION	G-6	PARKING BRAKE	J-10	STRIKE TAPE AND MUD FLAP	J-5
Brake Piping	H-3	FRONT DOOR GLASS	J-8	FRONT WHEEL BRAKE	I-4	PEDESTAL	J-16	WHEEL WELDING	J-15
CAB HEATER	I-13	FRONT DOOR LATCH	J-9	FRONT WINDOW	G-7	REAR AXLE	J-16	WIND WHEEL AND TIRE	J-12
CHICKEY WIRE PIPE	I-45	FRONT DOOR PANEL	J-7	FUEL TANK	J-11	REAR BODY PANEL	I-16	SEAT BELT	J-11
DISTRIBUTOR	I-5	FRONT FENDER	I-3	GENERATOR	J-5	HEAD GUMPS	I-19	SUPERCHARGER	F-17
FLOOR MAT	I-2	FRONT HOOD PANEL	I-3	INTERIOR PANEL	I-1	HEAD PADE LOCK	J-10	SPEEDOMETER	F-7
FRONT AXLE	A-5	FRONT LIGHT	I-8	INTERIOR PANEL	I-3	HEADLIGHT	J-2	SHIFTER	F-15
		REAR LAMP	J-8	INTERIOR PANEL	I-3	REAR LAMP	J-2	STEERING MOTOR	F-12
		REAR LIGHT	J-8	INTERIOR PANEL	I-3	STEERING LINK	J-4	SWINGING WINDSHIELD	F-10

FIG. 52

FIG. 32 (G-2) FRONT SUSPENSION

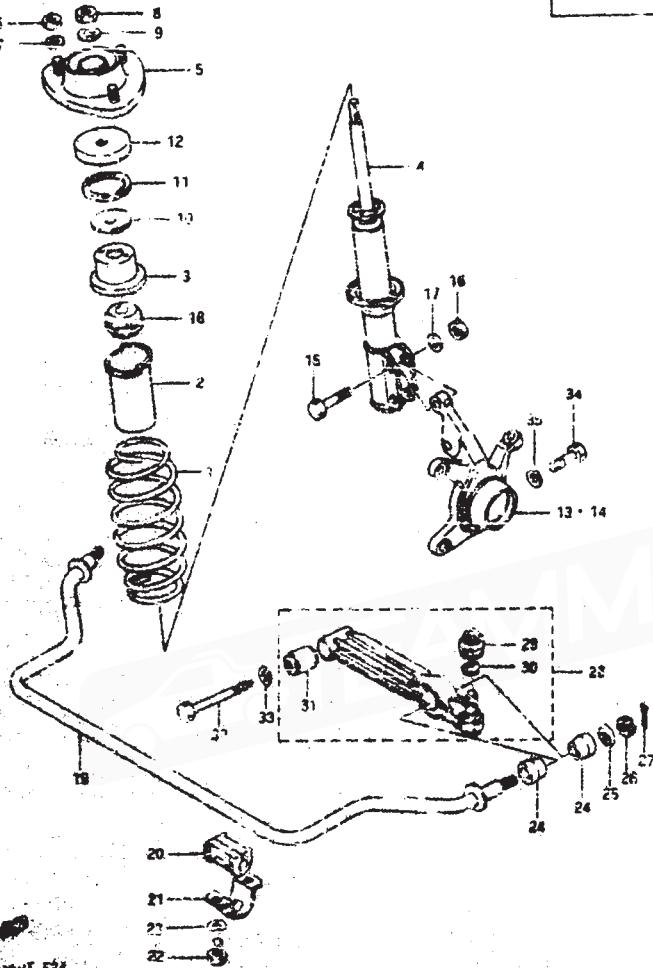


卷之三

BATTERY	F-6	FRONT BODY PANEL	J-2	FRONT SEAT	J-12	LOCK SET AND DOOR	F-13	REAR SWING DOOR	G-3	STEERING WHEEL	G-7
SPACE MASTER CYLINDER	H-2	FRONT BUMPER	J-3	FRONT SUSPENSION	J-1	PARKING BRAKE	H-6	REAR WHEEL BRAKE	H-5	STRIP TAPE AND	H-1
BRAKE P. RINGS	I-3	FRONT DOOR GLASS	J-8	FRONT	J-1	PEDAL	C-10	REAR WHEEL AND TIRE	H-4	SWITCH	J-1
CAR HEATER	J-3	FRONT DOOR LOCK	J-4	FRONT WINDSHIELD	J-6	REAR AMPL.	G-5	TIRES	J-13	VENTILATOR	J-12
DECK HAIL PIPE	K-7	FRONT FENDER	J-5	FUEL TANK	J-1A	REAR BODY PANEL	J-4	SEAT BODY PANEL	J-7	WHEEL	F-13
G. TO. MOTOR	L-6	FRONT FENDER	J-5	GENERAL	J-8	REAR BUMPER	I-6	SEAT COCKPIT	F-1	WIPER	F-14
FRONT BRAKE	M-2	FRONT FRONT	J-5	HOOTER	J-11	SIDE GATE LOCK	J-18	SEAT COCKPIT	F-1	WIRE	F-10
FRONT AXLE	N-3	FRONT FRONT	J-5	INTERIOR TRIM	J-3	REAR LAMP	F-9	SEAT COCKPIT	F-2	WIRING HARNESS	F-10

416, 33 (Pt. 3) HED. SECTION

57

ITEM NO.	PART NO.	DESCRIPTION	REMARKS
1	417-0-70022	SPRING ASSY, REAR	2
2	41421-70000	U BOLT	4
3	41430-70000	SEAT, REAR SPRING AM	2
4	41440-70000	SEAT, REAR SPRING LH	1
5	00300-12100	NUT	2
6	00221-51103	LOCK WASHER	8
7	41403-50001	ASSUMBER ASSY, REAR BRCK	2
8	41461-50000	BUSH, FRONT	4
9	41470-12021	BOLT, UPPER (12x112)	2
10	00310-11100	NUT	2
11	00321-31123	LOCK WASHER	2
12	00140-00073	CASHER, No.2	2
13	00160-12196	KNIFER, No.2	2
14	00310-22006	NUT	2
15	00124-21005	LOCK WASHER	2
16	42250-00261	STOPPER, REAR SPR	2
17	41441-70001	PLATE, SPRNG	2
18	41450-70000	PLATE, OUTER	2
19	41463-00000	SIL, STABILIS	4
20	41331-70020	BUCK, FRONT	2
21	00140-12023	SPACER (12x16x6.5)	2
22	00100-12274	BOLT (12x80)	2
23	00310-11123	NUT	2
24	00321-31123	LOCK WASHER	2
25	00300-13005	BUSH, FRONT	2
26	00310-12100	NUT	4
27	00321-31123	LOCK WASHER	2

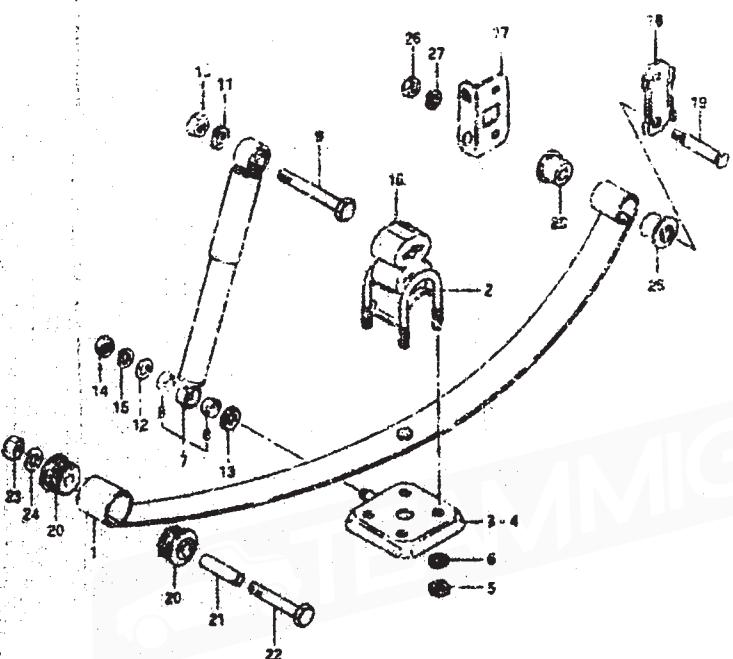

55A91 524


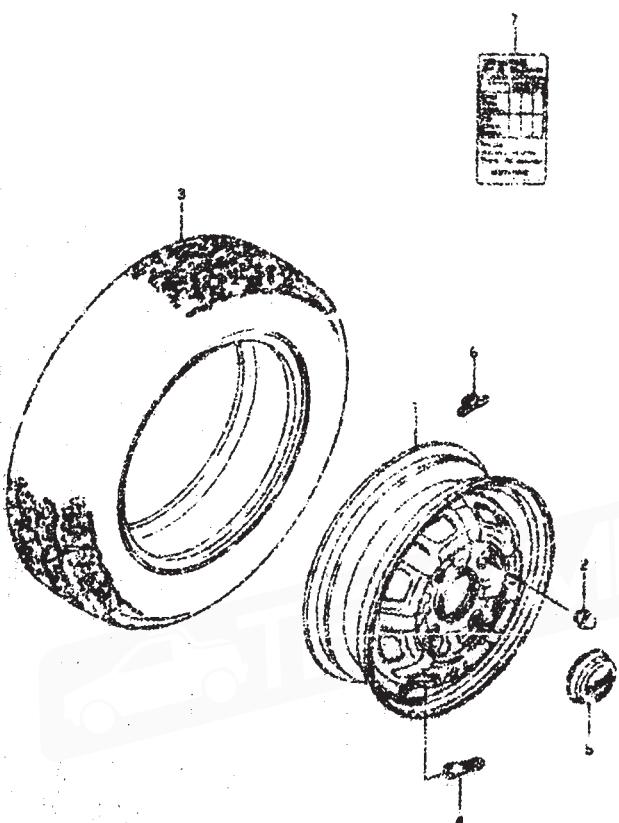


FIG. 56 (1-16) FRONT WHEEL AND TIRES

6-77

REF. NO.	PART NO.	DESCRIPTION	NUMBER
1	43211-54540-18J	ROPE, HOSE (2.0MM)	5
2	CB440-17022	NUT	10
3	43110-15150	TIRE, PNEUMATIC (145/70SR12)	3
4	43190-78150	VALVE, TIRE (TR413)	3
5	43200-78250	CAP, WHEEL CENTER	4
5-1	63221-78130	WEIGHT, WHEEL BALANCE (3g)	AN
6-2	43231-78130	WEIGHT, WHEEL BALANCE (10g)	AN
6-3	43232-78130	WEIGHT, WHEEL BALANCE (13g)	AN
6-4	43233-78130	WEIGHT, WHEEL BALANCE (20g)	AN
6-5	43235-78130	WEIGHT, WHEEL BALANCE (25g)	AN
6-6	43233-78130	WEIGHT, WHEEL BALANCE (30g)	AN
6-7	43234-78130	WEIGHT, WHEEL BALANCE (35g)	AN
6-8	43235-78130	WEIGHT, WHEEL BALANCE (40g)	AN
6-9	43235-78130	WEIGHT, WHEEL BALANCE (45g)	AN
6-10	43236-78130	WEIGHT, WHEEL BALANCE (50g)	AN
6-11	43237-78130	WEIGHT, WHEEL BALANCE (55g)	AN
6-12	43236-78130	WEIGHT, WHEEL BALANCE (60g)	AN
6-13	43236-78130	WEIGHT, WHEEL BALANCE (65g)	AN
6-14	43236-78130	WEIGHT, WHEEL BALANCE (70g)	AN
6-15	43239-78130	WEIGHT, WHEEL BALANCE (75g)	AN
6-16	43237-78130	WEIGHT, WHEEL BALANCE (80g)	AN
7	79161-51210	PLACARD, TIRE INFORMATION	1

BATTERY	1-6	FRONT BODY PANEL	1-7	FRONT SEAT	1-12	GLOVE BOX SET AND PAD	10	FRONT SUSPENSION	1-13	REAR SUSPENSION	1-14	STEERING WHEEL	1-15
DRIVE MASTERS CYLINDER	1-2	FRONT GLASS	1-8	FRONT SUSPENSION	1-12	WHEEL BRAKE	1-13	REAR WHEEL BRAKE	1-15	STRIKE TAPE AND MUD FLAP	1-16	SPIDER	1-17
DRIVE FITTING	1-3	FRONT DOOR GLASS	1-9	FRONT WHEEL	1-14	REAR BRAKE	1-16	RIDE WHEEL (O.T.E.)	1-17	VENTILATOR	1-18	SPIDER	1-19
CAN RECEPTOR	1-13	FRONT DOOR LOCK	1-10	FRONT WHEEL	1-17	SWAY BELT	1-18	SWAY BELT	1-19	VENTILATOR	1-20	SPIDER	1-21
CDN RECEPTOR	1-14	FRONT DOOR PANEL	1-11	FRONT WHEEL	1-20	SIDE BODY PANEL	1-21	SWAY BELT	1-22	WHEEL	1-23	SPIDER	1-24
DISP. MONITOR	1-15	FRONT FENDER	1-12	FRONT WHEEL	1-21	SWAY BELT	1-22	SWAY BELT	1-23	WHEEL	1-24	SPIDER	1-25
FLUID HOPPER	1-16	FRONT HEAD PANEL	1-13	FRONT WHEEL	1-22	SWAY BELT	1-23	SWAY BELT	1-24	WHEEL	1-25	SPIDER	1-26
FRONT BRAKE	1-17	FRONT SIDE PANEL	1-14	FRONT WHEEL	1-23	SWAY BELT	1-24	SWAY BELT	1-25	WHEEL	1-26	SPIDER	1-27
FRONT BRAKE	1-18	FRONT SIDE PANEL	1-15	FRONT WHEEL	1-24	SWAY BELT	1-25	SWAY BELT	1-26	WHEEL	1-27	SPIDER	1-28
FRONT BRAKE	1-19	FRONT SIDE PANEL	1-16	FRONT WHEEL	1-25	SWAY BELT	1-26	SWAY BELT	1-27	WHEEL	1-28	SPIDER	1-29
FRONT BRAKE	1-20	FRONT SIDE PANEL	1-17	FRONT WHEEL	1-26	SWAY BELT	1-27	SWAY BELT	1-28	WHEEL	1-29	SPIDER	1-30

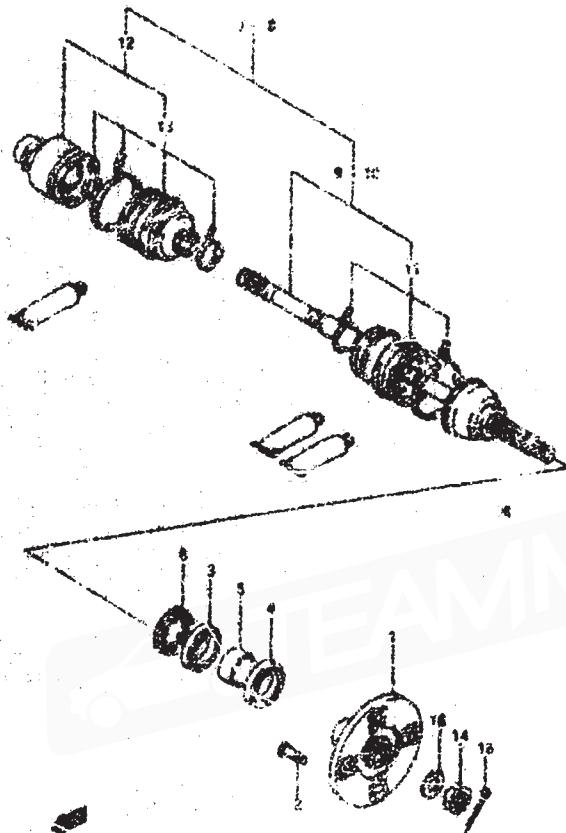

ITEM NO.	ITEM NAME	QUANTITY	REMARKS
1	HUB, FRONT, STEER	2	
2	BOLT, PLATE	8	
3	BUSHING, SPUR	2	
4	SPRING, SPRUT	2	
5	SPACER (X=1.7, Y=2.3)	2	
6	OL. SEAL	2	
7	DRIVESHAFT ASSY, RH	1	
8	DRIVESHAFT ASSY, LH	1	
9	JOINT ASSY, JAW, 42MM RH	1	
10	JOINT ASSY, JAW, 42MM LH	1	
11	JOINT ASSY, SPUR SIDE	2	
12	JOINT ASSY, SPUR SIDE	2	
13	JOINT ASSY, SPUR SIDE	2	
14	NUT	2	
15	COTTER PIN	2	
16	WASHER (18X30X4)	2	

## SHEET E24

FRONT BUMPER	1-2	FRONT BRAKE	1-12	LOCK SET AND PAD	1-13	FRONT BUMPER LIP	1-3	STEERING WHEEL	1-7
FRONT CYLINDER	1-2	FRONT SUSPENSION	1-12	PARFAIRING BODY	1-13	FRONT WHEEL BRACE	1-3	STEERING TUBE	1-4
FRONT DOOR GLASS	1-3	FRONT WHEEL, SPUR	1-4	PEDAL	1-14	FRONT WHEEL AND TIRE	1-5	STEERING TUBE AND HUB FLANGE	1-2
FRONT DOOR LOCK	1-3	FRONT WHEEL	1-5	SEAT	1-15	FRONT WHEEL	1-6	STEERING TUBE	1-12
FRONT DOOR PANEL	1-3	FRONT WHEEL	1-5	SEAT BELT	1-16	FRONT WHEEL	1-7	STEERING TUBE	1-12
FRONT FENDER	1-2	FUEL TANK	1-10	SEAT CUSHION	1-17	FRONT WHEEL	1-8	STEERING TUBE	1-12
FRONT HEADLIGHT	1-2	FRONT FENDER	1-7	SEAT CUSHION	1-18	FRONT WHEEL	1-9	STEERING TUBE	1-12
FRONT WHEEL	1-3	FRONT HEADLIGHT	1-5	SEAT CUSHION	1-19	FRONT WHEEL	1-10	STEERING TUBE	1-12
FRONT WHEEL	1-3	FRONT HEADLIGHT	1-5	SEAT CUSHION	1-20	FRONT WHEEL	1-11	STEERING TUBE	1-12
FRONT WHEEL	1-3	FRONT HEADLIGHT	1-5	SEAT CUSHION	1-21	FRONT WHEEL	1-12	STEERING TUBE	1-12


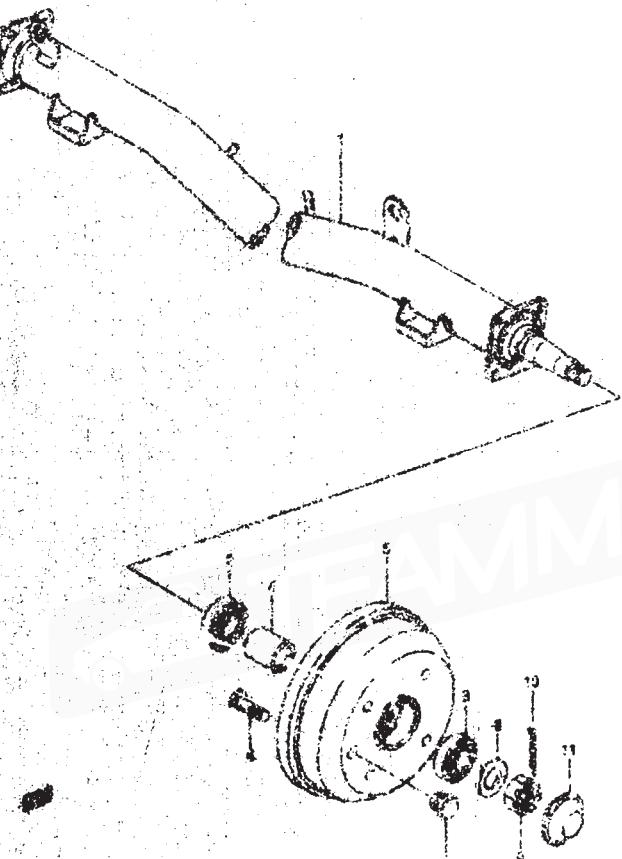


FIG. 56 (C-6) ASSEMBLY

REF. NO.	CART. NO.	DESCRIPTION	QUANTITY	REMARKS
1	AN120-78402	SHAFT, STEER	1	
2	US262-25671	SEATBELT, DRIVER	2	
3	00152-20076	SEATBELT, OUTBOARD	2	
4	00150-21001	SHIMMER, CHASSIS	2	
5	AN121-78012	SHAFT, DRIVE SHAFT	2	
6	09134-00011	BOLT, SHEAR PIN	6	
7	06250-12701	FLANGE	2	
8	05322-2...06	BRACKET	2	
9	06118-01166	KIT	2	
10	06118-02006	CHASSIS PIN	2	
11	47241-73000	CAP, BUSHING	2	

## SECTION C-C

STEERING PANEL	FRONT DOOR PANEL	FRONT SEAT	FRONT BODY PANEL	FRONT TIRE	FRONT WHEEL	PARKING BRAKE	REAR WHEEL	REAR SUSPENSION	REAR BODY PANEL	REAR DOOR PANEL	REAR TIRE	REAR WHEEL	STEERING WHEEL
STEERING WHEEL	FRONT DOOR PANEL	FRONT SEAT	FRONT BODY PANEL	FRONT TIRE	FRONT WHEEL	PARKING BRAKE	REAR WHEEL	REAR SUSPENSION	REAR BODY PANEL	REAR DOOR PANEL	REAR TIRE	REAR WHEEL	STEERING WHEEL
STEERING WHEEL	FRONT DOOR PANEL	FRONT SEAT	FRONT BODY PANEL	FRONT TIRE	FRONT WHEEL	PARKING BRAKE	REAR WHEEL	REAR SUSPENSION	REAR BODY PANEL	REAR DOOR PANEL	REAR TIRE	REAR WHEEL	STEERING WHEEL
STEERING WHEEL	FRONT DOOR PANEL	FRONT SEAT	FRONT BODY PANEL	FRONT TIRE	FRONT WHEEL	PARKING BRAKE	REAR WHEEL	REAR SUSPENSION	REAR BODY PANEL	REAR DOOR PANEL	REAR TIRE	REAR WHEEL	STEERING WHEEL
STEERING WHEEL	FRONT DOOR PANEL	FRONT SEAT	FRONT BODY PANEL	FRONT TIRE	FRONT WHEEL	PARKING BRAKE	REAR WHEEL	REAR SUSPENSION	REAR BODY PANEL	REAR DOOR PANEL	REAR TIRE	REAR WHEEL	STEERING WHEEL

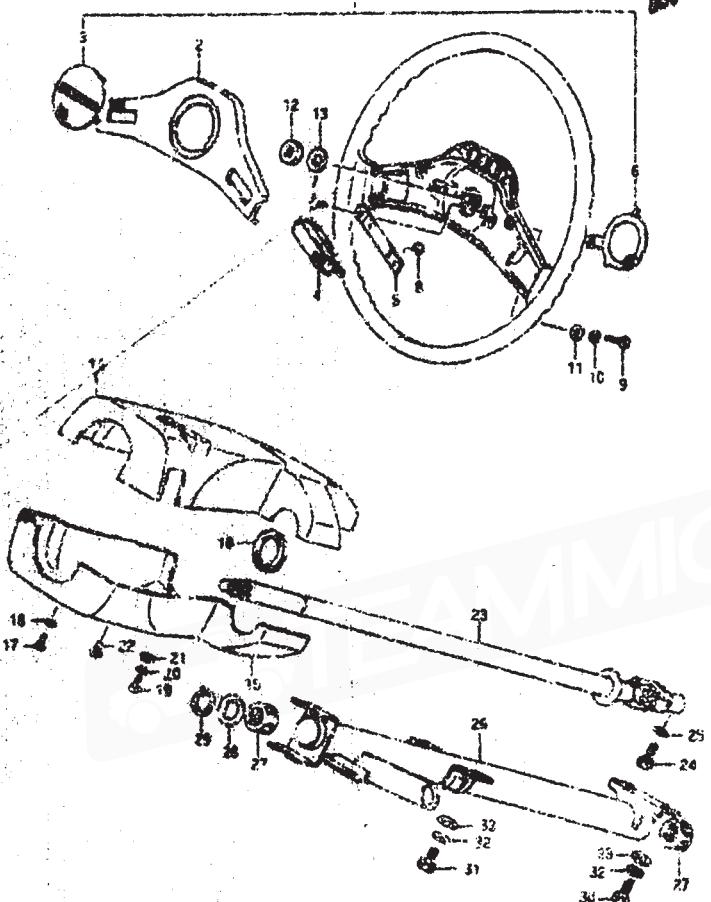

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	44120-75030-261	WHEEL ASSEMBLY, steering	1
2	48121-75204-061	COVER	1
3	48119-75206-061	ORNAMENT	1
4	44120-75074-261	BUTTON, REAR	2
5	16210-75202	SPRING, REAR BUTTON	2
6	48121-75050	SPLIT PLATE	1
7	48121-74000	SCREW	2
8	48126-74100	SCREW	2
9	16211-2-00000	SCREW	2
10	17323-21057	LOCK WASHER	2
11	04022-21050	NUT	2
12	16240-10007	NUT	1
13	04021-31126	LOCK WASHER	1
14	16211-81120-061	CAP, steering upper	1
15	48111-91000-261	CAP, steering lower	1
16	16410-75000	SEAL, steering cover	1
17	17112-09126	SCREW	2
18	03120-08054	WASHER	1
19	03221-03125	SCREW	1
20	03221-21026	LOCK WASHER	2
21	03221-21056	WASHER	1
22	03221-49145	SCREW	4
23	48113-81120	SHAFT, steering	1
24	08111-08070	BOLT	1
25	08021-31026	LOCK WASHER	1
26	48100-75360	COLUMN, steering	1
27	48381-31040	BUSH	2
28	08120-17024	WASHER	1
29	08332-31145	CIRCLIP	1
30	03161-00226	BOLT, lower	2
31	03161-00226	BOLT, upper	2
32	08121-31086	LOCK WASHER	4
33	08021-31086	WASHER	4

SEARCH DATA


E CRY.....	F-6 FRONT BODY PANEL	I-2 FRONT SEAT.....	I-12 LUGGAGE SET AND RADIO	P-13 REAR SUSPENSION	G-5 STEERING WHEEL.....	2-7
HIPPIE HAMMER CYLINDER	H-2 FRONT BUMPER.....	I-8 FRONT SUSPENSION	G-2 PARKING BRAKE	H-4 REAR SWEEP BRAKE.....	H-2 STEER. TAPE AND WIND PLATE	3-4
ENGINE PINTLE	H-3 FRONT DOOR CLASS	J-4 FRONT WHEEL BEARING	H-5 PEDAL	H-5 REAR WHEEL AND I-16 G-4 SHIFTER	J-12 SHIFTER	3-12
CAN HEATER	J-1-13 FRONT DOOR LOCK	J-9 FRONT WINDSHIELD	J-6 REAR ADGE	H-8 REAR BELT	J-13 VENTILATOR	3-12
REAR TAIL PIPE	J-1-13 REAR DOOR PANEL	J-7 FUEL TANK	J-10 REAR SHOCK ABSORBER	H-10 SIDE BODY PANEL	J-17 MIRROR	3-12
BASTER BOTTLE	J-5 FRONT FENDER	J-9 GENERATOR	J-13 REAR BUMPER	H-11 SIDE BODY PANEL	J-18 MIRROR	3-12
FLAME CAP	J-2 FRONT HEAD PANEL	J-3 INSTRUMENT PANEL	J-11 REAR GATE LOCK	H-14 HEATING WATER	J-2 BERTING HARNESS	3-12
FRONT WHEEL	J-3 FRONT LAMP	J-4 INTERIOR TRIM	J-15 GEAR UNIT	J-9 SWINGING LINE	J-8	3-12

FIG. 52

G - 8

FIG. 53 (G - 8) STEERING LINK

P.T.V.

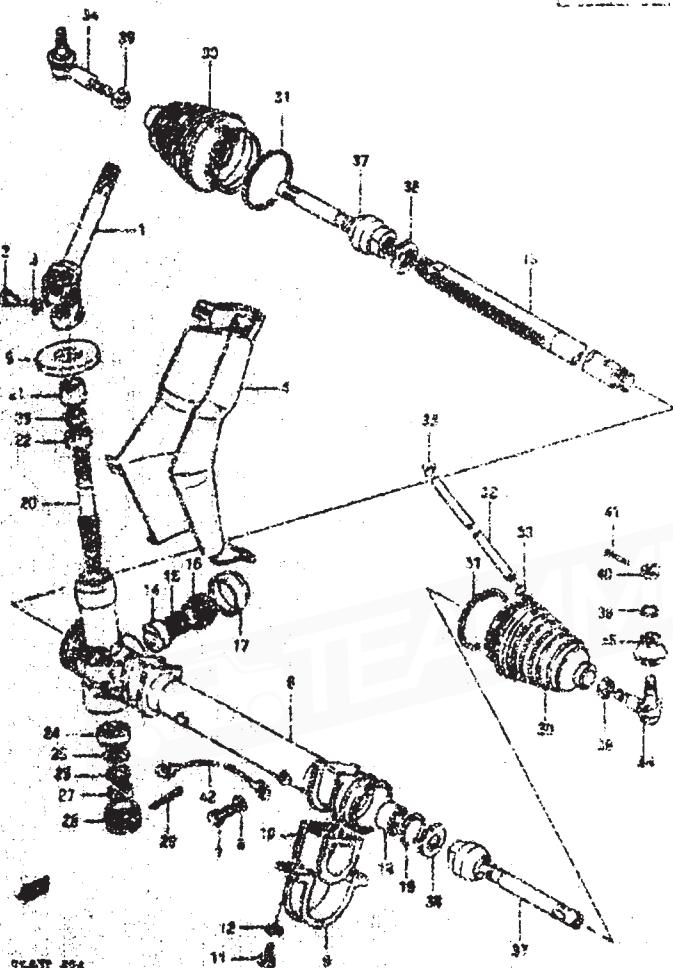


SHEET 224

SHEET 224

REF. NO.	PART NO.	DESCRIPTION	Q'TY
1	46210-01100	JOINT, steering shaft	1
2	02011-08002	BOLT	1
3	02021-30006	LOCK WASHER	1
4	46220-01000	BEARING, steering joint	1
5	46230-70000	PROBE, steering gear case	1
6	46211-78002	CASE, steering gear	1
7	01107-06002	BOLT	1
8	02022-11004	WASHER	1
9	46252-70001	SPACER, case	2
10	46220-70004	MOUNTING, case	2
11	01107-06203	BOLT	4
12	02020-31003	LOCK WASHER	4
13	46230-70002	LINK, steering	1
14	46230-70001	PLUNGER, steering case	1
15	26480-19001	SPRING, plunger	1
16	46230-30000	SPRING, link support	1
17	46334-30001	CLIP, spring	1
18	46240-70000	SUCH, steering case	1
19	02020-20002	C RING	1
20	46251-70002	PISTON, steering	1
21	46251-70000	BUSH, steering piston	1
22	02024-30003	SHIM	1
23	02020-10000	SPACER, piston (13x18x12.5)	1
24	01107-02017	WHEEL BEARING	1
25	02020-11102	WHEEL	1
26	02021-30100	LOCK WASHER	1
27	00011-22401	KIT	1
28	46262-70000	PLUG, piston cracking	1
29	02011-20026	COTTER PIN	1
30	46251-70001	BOOT ADJ., steering neck	2
31	02020-30009	PIPE, ADJ. BOOT	2
32	02043-00004	TUBE	1
33	02001-02402	CLIP	2

BATTERY	7-6	FREIGHT BODY PANEL	1-2	FRONT SEAT	1-17	LATCH SET AND RADIO	7-13	SPRING SUSPENSION	10-3	STEERING SWIVEL	6-7
HYDRAULIC MASTER CYLINDER	4-1	FRONT BUMPER	1-6	FRONT SUSPENSION	8-2	PARKING BRAKE	10-6	FRONT WHEEL BRAKE	10-5	STRAP TAPE AND HUB FLAP	7-4
HYDRAULIC PUMP	4-2	FRONT DOOR GLASS	4-6	FRONT WHEEL BRAKE	10-4	SWING	10-10	FRONT WHEEL AND TIRE	8-6	SUSPENSION	7-12
HYDRAULIC PUMP	4-3	FRONT DOOR LOCK	4-9	FRONT WINDSHIELD	10-9	SWING BELT	10-12	FRONT WHEEL	10-7	VENTILATOR	1-12
HYDRAULIC PUMP	4-4	FRONT DOOR PANEL	4-7	FUEL TANK	10-10	WATER ADJ. PANEL	1-7	WHEEL	1-7	WHEEL	7-15
HYDRAULIC PUMP	4-5	FRONT DOOR TRIM	4-8	FRONT DOOR	10-11	WATER ADJ. PANEL	1-8	WHEEL	1-7	WHEEL	7-13
HYDRAULIC PUMP	4-6	FRONT DOOR TRIM	4-9	FRONT DOOR	10-12	WATER ADJ. PANEL	1-9	WHEEL	1-7	WHEEL	7-11
HYDRAULIC PUMP	4-7	FRONT DOOR TRIM	4-10	FRONT DOOR	10-13	WATER ADJ. PANEL	1-10	WHEEL	1-7	WHEEL	7-10
HYDRAULIC PUMP	4-8	FRONT DOOR TRIM	4-11	FRONT DOOR	10-14	WATER ADJ. PANEL	1-11	WHEEL	1-7	WHEEL	7-8
HYDRAULIC PUMP	4-9	FRONT DOOR TRIM	4-12	FRONT DOOR	10-15	WATER ADJ. PANEL	1-12	WHEEL	1-7	WHEEL	7-6
HYDRAULIC PUMP	4-10	FRONT DOOR TRIM	4-13	FRONT DOOR	10-16	WATER ADJ. PANEL	1-13	WHEEL	1-7	WHEEL	7-4

FIG. 53

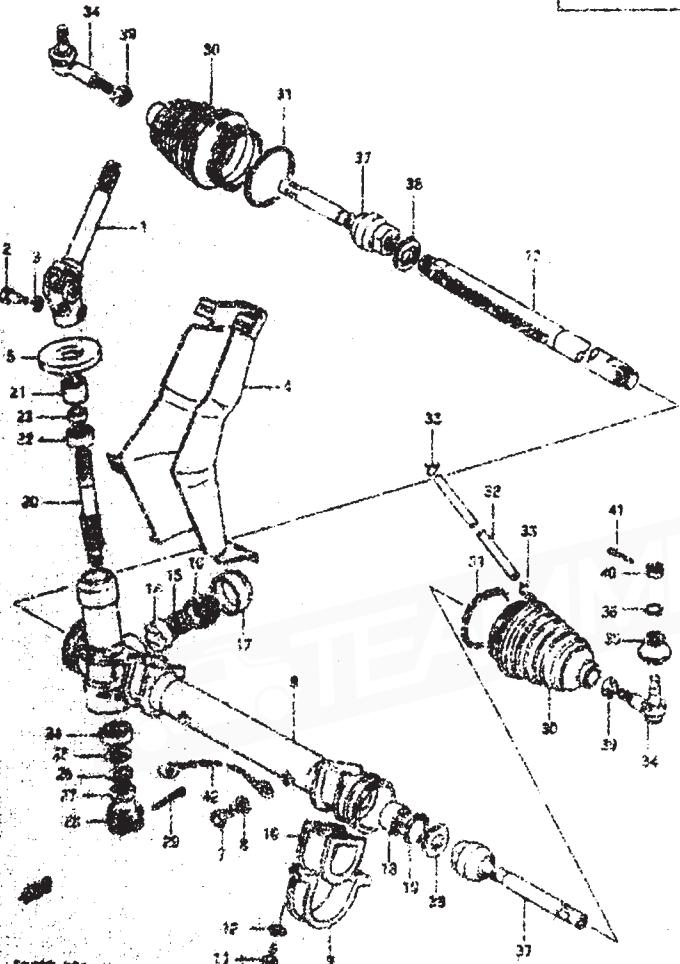

56

FIG. 50 (C-9) STEERING LINK.


QTY

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
34	46810-78020	END, STEERING TIE ROD	2	
35	46819-82092	ROD SET	2	
36	46816-23453	ROD	2	
37	46830-79001	TIE ROD, STEERING	2	
38	46841-78740	LOCK WASHER	2	
39	46846-12102	NUT	2	
40	46834-61120	HUB	2	
41	46111-30206	COTTER PIN	2	
42	46528-16273	LEAD WIRE, FRONT WHEEL	1	

SCHEM 52A

SCHEM 52A

FRONT BODY PANEL	1-2	FRONT SEAT	1-2	LOCK SET AND RADIO	F-12	DOOR SUPPORT	M-6	...-8-2	BREAKING WHEEL	...-8-7
FRONT BUMPER	1-6	FRONT CUSHION	1-6	PARKING BRAKE	...-8-3	REAR WHEEL BRAKE	...-8-5	STRAKE TIRE AND HUB FLAP	J-4	
FRONT DOOR CYLINDER	H-2	FRONT DOOR GLASS	1-8	REAR WHEEL AND TIRE	G-4	SWITCH	...-8-12			
FRONT DRIVING LIGHT	1-13	FRONT DOOR LOCK	1-8	FRONT WHEEL	...-8-4	SWITCH	...-8-12			
FRONT FENDER	1-14	FRONT FENDER	1-14	REAR AXLE	...-8-5	SEAT BELT	...-8-13			
FRONT HOOD	1-15	FRONT HOOD PANEL	1-7	REAR BODY PANEL	1-6	SIDE BODY PANEL	1-7	SWITCH	...-8-13	
FRONT PARKING LIGHT	1-16	FRONT PARKING LIGHT	1-16	REAR BUMPER	1-9	SWINGOUT STEER	...-8-2			
FRONT REAR WHEEL	1-17	FRONT REAR WHEEL	1-17	REAR CENTER LUG	1-10	SWINGOUT MOTOR	...-8-2	SWINGOUT	...-8-14	
FRONT SIDE MIRROR	1-18	FRONT SIDE MIRROR	1-18	REAR LAMP	F-9	STEERING LINK	...-8-3	SWINGOUT ARMREST	...-8-10	
FRONT SPARE TIRE	1-19	FRONT SPARE TIRE	1-19							
FRONT TIRE	1-20	FRONT TIRE	1-20							
FRONT WHEEL	1-21	FRONT WHEEL	1-21							

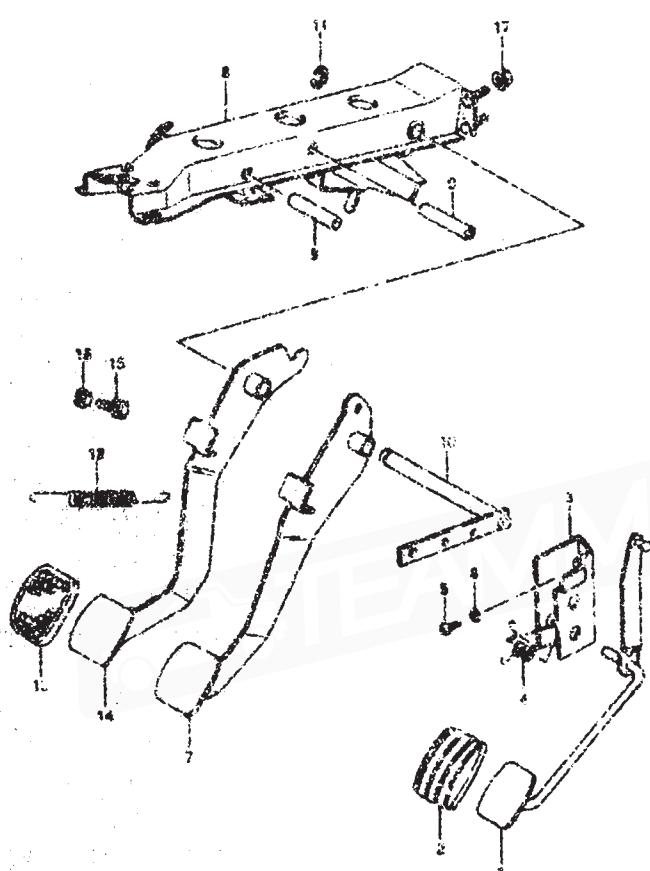


REF ID.	PART NO.	DESCRIPTION	REMARKS
1	49413-26001	PEDAL, accelerator	1
2	49411-03000	PEDAL, accelerator pedal	1
3	49311-73140	BRACKET, accelerator pedal	1
4	49443-21002	CABLE	1
5	02112-06126	BOLT	2
6	04321-22062	LOCK WASHER	2
7	49610-00070	WHEEL, REAR	1
8	49710-01000	BRACKET, F-TRAIL	1
9	00180-02700	SPACER (10.1x12.7)	2
10	49711-00070	SHIRT, pedal	1
11	08111-11105	E RING	1
12	09443-41006	SPRING	2
13	49731-70001	PRO, pedal	1
14	49410-70000	PEDAL, clutch	1
15	01177-06200	BOLT, pedal stop	1
16	00310-00006	NUT	1
17	00315-2-000	NUT	1

56407 E24

56407 E24

BATTERY	F-6	FRONT BODY PANEL	J-2	FRONT SEAT	J-12	WORK SET AXLE, RWD	F-16	REAR SUSPENSION	G-3	STEERING WHEEL	G-7
Brake master cylinder	H-2	FRONT BUMPER	J-8	FRONT SUSPENSION	G-2	PARKING BRAKE	H-6	REAR WHEEL BRAKE	H-5	STRIPE TAPE RWD MID FLAP	J-6
Brake piping	J-2-3	FRONT DOOR GLASS	J-3	FRONT WHEEL, BRAKE	H-4	PEDAL	G-10	REAR WHEEL AND TIRE	G-7	SWITCH	F-12
Car heater	J-1-3	FRONT DOOR LOCK	J-9	FRONT WHEEL	J-4	REAR AXLE	G-6	REAR WHEEL	J-5	VENTILATOR	J-12
Check rate pipe	J-3-5	FRONT DOOR PANEL	J-1	FUEL TANK	J-10	REAR BODY PANEL	J-6	SWING DOOR PANEL	J-7	WASHER	J-13
Dimmer motor	F-8	FRONT FENDER	J-5	GENERATOR	F-5	REAR BUMPER	J-9	SPEEDOMETER	F-7	MOTOR	F-14
Door lock	H-3	FRONT HOOD PANEL	J-3	INTERIOR MIRROR	J-11	REAR GATE LOCK	J-10	SWINGING MOTOR	F-2	WIRING HARNESS	F-10
Front angle	G-9	FRONT LAMP	J-7	INTERIOR TRIM	J-3	REAR LAMP	J-9	SWINGING LAMP	J-8		

REF. NO.	PART NO.	DESCRIPTION	RTV
1	49410-78020	PEDAL, accelerator	1
2	49410-78020	PEDAL, accelerator pedal	1
3	49910-78020	BRACKET, accelerator pedal	1
4	49920-78020	PLATE, accelerator pedal base	1
5	09040-24770	SPRING	1
6	02113-01226	Screw	2
7	08321-21066	LOCK WASHER	2
8	49920-78720	PIN, base	1
9	07443-12006	SPRING	4
10	49730-78020	PEDAL, brake pedal	1
11	49210-31100	SPRING, pedal	1
12	09140-22000	SPRING (10.1x13.5x.5)	2
13	04316-26006	NUT	3
14	49720-78221	SHIFT, pedal	1
15	08322-11106	E RING	1

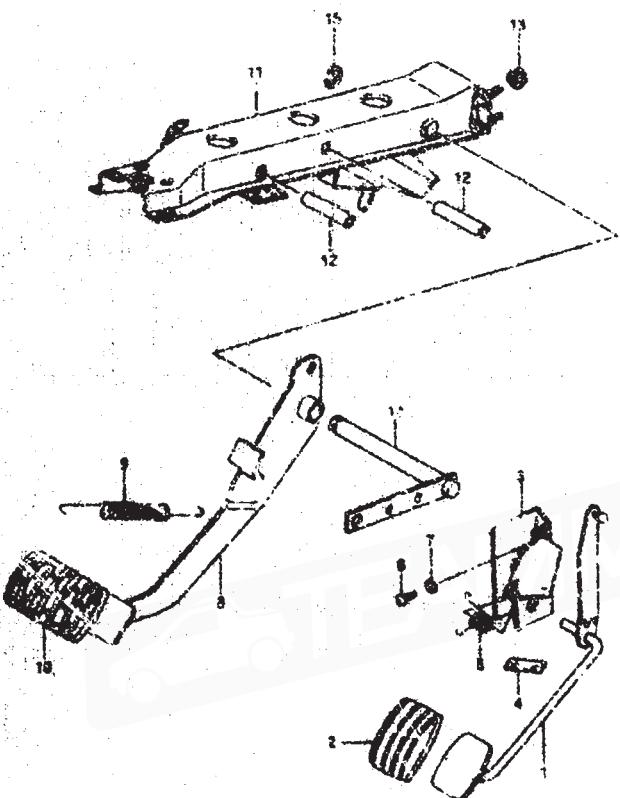

BATTERY	F-6	FRONT BODY ANGLE	1-2	FRONT SEAT	4-12	LOCK SET AND RADIO	F-13	FRONT SUSPENSION	H-8	STEERING WHEEL	G-5
BRAKE MASTER CYLINDER	H-1	ZINC PLATED	1-6	FRONT SUSPENSION	G-2	PARKING BRAKE	H-6	REAR WHEEL BRAKES	H-5	STRIP TIE AND HEAD PLATE	G-4
Brake Pedal	H-5	FRONT WHEEL BRAKE	H-8	FRONT WHEEL BRAKE	H-4	PEDAL	H-10	ROAD TAPE AND TYRE	G-4	SWITCH	G-12
COOLANT TANK	H-13	FRONT BODY LOCK	H-5	FRONT WHEEL	H-6	HORN ROD	H-14	VEH. BELT	J-3	TELEPHONE	J-12
COOLANT TUBE	H-13	FRONT BODY PANEL	H-7	FRONT LAMP	H-10	FRONT BODY PANEL	H-14	SHR. BODY PANEL	J-7	WHEEL	J-15
COOLANT TUBE	H-13	FRONT FENDER	H-2	FRONT MIRROR	H-13	FRONT BUMPER	H-15	SHR. BODY PANEL	J-7	WINDSHIELD	J-16
COOLANT TUBE	H-13	FRONT HEAD PANEL	H-3	FRONT MIRROR	H-13	FRONT BUMPER	H-15	SHR. BODY PANEL	J-7	WIPER	J-16
COOLANT TUBE	H-13	FRONT SIDE PANEL	H-3	FRONT SIDE PANEL	H-11	FRONT SIDE LOCK	H-13	SHR. BODY PANEL	J-2	WIPER & WINDSHIELD	J-10
COOLANT TUBE	H-13	FRONT SIDE PANEL	H-4	FRONT SIDE PANEL	H-13	FRONT SIDE PANEL	H-14	SHR. BODY PANEL	J-2	WINDSHIELD LIP	J-14

PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.			
08321-31083	G-2	08322-21064	J-5	B	09140-12002	D-8	09140-16007	I-3	B	09140-10001	I-2	B	09140-05016	E-2
	G-8	08322-21066	D-14	B	09140-06036	B-8	09141-18003	G-5	C	09140-10020	B-6	B	09202-03018	D-4
	H-3		F-14	B	09140-06040	C-2	09148-C4010	J-3	B	09140-10039	D-5	B	09203-04003	D-6
08321-31086	B-10		I-4	B	09140-06040	C-7	09148-C4019	F-8	B	09140-15061	D-13	B	09203-04009	D-6
	G-7		I-6	B	09140-06078	B-10	09148-C5003	I-5	B	09140-10078	E-7	B	09205-04005	D-7
	G-8		I-8	B	09140-06083	J-5		I-5	B	09140-12043	B-10	B	09205-04009	B-8
08321-31088	H-3		I-10	B	09140-08093	B-11		I-8	B	09140-12056	G-3	B	09204-13061	B-3
08321-31103	G-2		J-5	B	09140-08098	B-11		J-4	B	09140-12072	E-4	B	09204-13011	B-4
	G-3		I-3	B	09140-08042	C-4	09140-C5005	I-11	B	09140-17021	G-7	B	09209-05016	J-9
08321-31104	G-2	08322-21067	I-3	B	09111-06017	C-3		J-11	B	09140-18017	G-5	B	09209-13007	C-3
	H-2	08322-21084	J-6	B	09111-08015	D-2	09148-C4013	I-11	B	09140-23007	F-12	B	09241-120C1	D-3
	H-4	08323-31064	J-9	B	09111-08052	G-7	09148-C5015	I-5	B	09140-25026	E-2	B	09241-14001	D-3
08321-31123	I-2	08331-31176	G-7			G-8	09148-C5020	I-11	B	09141-06008	J-5	B	09241-24002	B-3
	G-2	08331-31159	I-6	B	09115-06001	F-6	09148-C6007	J-7	B	09141-06018-896	J-5	B	09241-30002	B-4
	G-3	08331-41476	O-12			F-10		I-9	B	09141-10009	H-7	B	09241-30002	B-6
	H-4	08332-11043	E-4	B	09119-06051	C-3	09150-06010	C-3	B	09142-06005	B-5	B	09241-470C2	D-3
08321-31126	G-7	08332-11063	E-4	B	09119-10051	G-6	09159-04040	F-9	B	09142-12017	G-2	B	09241-58007	D-3
	G-8	08332-11093	E-4	B	09119-10017	G-3	09159-07072	B-9	B	09145-03096	I-8	B	09241-54001	D-3
08322-11066	D-14	08332-11086	G-10	B	09125-05038	J-10	09159-06033	C-8	B	09141-14013	D-6	B	09245-190C2	D-4
08322-11083	O-2		G-11	B	09125-06066	I-9	09149-10014	B-6	B	09146-20008	D-3	B	09246-04012	B-11
	E-4	08341-31059	B-8	B	09127-03016	J-6		B-7	B	09146-25005	G-3	B	09241-06001	B-4
08322-11083	E-4	08341-15032	I-2	B	09128-06011	C-4	09159-10017	C-4	B	09147-24002	B-3	B	09246-06002	B-4
	G-7	09100-C6119	B-5			I-3	09159-16004	D-3	B	09147-26004	D-3	B	09246-16004	D-3
	G-8	09100-04127	R-10	B	09128-06042	J-5	09160-05002	I-5	B	09148-10007	D-6	B	09247-15004	B-13
	I-10	09100-08158	F-5	B	09128-06029	D-8	09160-03003	J-2			D-7	B	09247-16007	D-14
	J-12	09100-08167	J-7	B	09128-06032	D-4	09140-05006	I-13	B	09148-10021	D-13	B	09247-12101	B-5
08322-11088	J-7	09100-10028	H-4			O-12	09160-05034	G-7	B	09148-10028	D-15			J-10
08322-11103	H-6	09100-10094	G-2	B	09128-96038	I-10	09160-06012	I-13	B	09148-12005	J-10	B	09250-05001	J-3
08322-11124	E-3	09100-10157	H-2	B	09128-06041	J-5	09160-06020	I-9	B	09148-12007	B-5	B	09250-07001	J-3
	G-8	09100-10184	G-2	B	09128-10002	D-7		J-10	B	09148-12009	D-9	B	09250-13001	G-6
	G-6	09100-12014	G-3	B	09132-05015	J-2	09160-06027	B-10			D-14	B	09250-14003	J-3
08322-21056	F-12	09100-12020	G-2	B	09132-05017	I-11		I-11	B	09149-C4024	J-10	B	09250-14003	J-3
08322-21053	E-4	09100-12021	G-3	B	09132-05021	I-12	09160-06028	C-4	B	09149-04104	B-10	B	09250-20002	C-5
08322-21053	I-9	09100-12118	H-4	B	09132-05030	I-2	09160-06039	J-12	B	09148-04097	C-4	B	09250-20011	I-10
08322-21056	E-5	09103-08024	F-2	B	09132-06008	H-3	09160-06057	I-4	B	09148-08093	J-10	B	09250-23001	J-3
	F-8	09103-08036	D-5	B	09135-06017	I-10		I-10	B	09148-08111	B-10	B	09250-30002	J-3
	F-9	09103-08152	B-10	B	09136-05024	I-5	09160-08007	J-10	B	09148-10068	G-10	B	09250-30003	D-5
	F-10	07-103-08154	B-3	B	09136-05037	I-6	09160-08010	J-6			G-11			D-10
	F-11	09103-08153	B-3	B	09137-05004	J-9		J-10	B	09148-12035	G-3	B	09250-30008	I-4
	G-7	09103-10014	E-2	B	09139-C5035	I-8	09160-07070	I-4	B	09148-15048	G-2	B	09250-40002	J-3
	I-5	09103-10018	B-3	B	09139-06012	I-11		F-7	B	09148-21001	G-6	B	09261-02009	D-3
08322-21054	F-10	09103-10022	B-4	B	09140-06017	F-4	09160-08021	R-10	B	09148-35005	G-5	B	09261-03002	D-6
	G-7	09103-10047	B-4	B	09140-10029	G-4	09160-08075	B-10	B	09260-06046	E-4	B	09442-20076	G-6
08322-21062	C-3		B-7	B	09140-12022	G-7		B-3	B	09260-08030	H-2	B	09462-25074	G-6
	H-2	09103-10097	B-8	B	09140-12032	G-9	09160-C8092	E-4	B	09260-08039	H-6	B	09462-35029	G-5



GRAY'S MUS. TEP. CYT. THERAPY. M.



#### SPACE PIPING



FRONT WHEEL FRAME



4-4 REAR WHEEL BRAKE



5 | Page


AIR CLEANER	C-2	CRANKSHAFT	B-9	GEAR SHIFT CONTROL	E-3	HYD. PUMP AND OIL PAN (AT)	F-14	WATER HOSE	G-10
AT ASY (AT)	C-1	CYLINDER BLOCK	B-4	GEAR SHIFT FORK (AT)	D-6	HYD. PUMP (AT)	C-8	WATER PUMP	G-7
AT GASKET SET (AT)	C-5	CYLINDER HEAD	B-5	INTAKE MANIFOLD	B-11	SELECTOR LEVER (AT)	E-5		
AT PARKING BRAKE (AT)	C-11	DIFFERENTIAL	B-2	ABEL	C-15	HUB BELT	R-12		
CAN SHAFT AND VALVE	B-5	EMISSIONS CONTROL	C-11	MUFFLER	C-4	TRANSMISSION (AT)	D-11		
CARBURETOR	B-12	ENGINE GASKET SET	B-2	OIL HOSE	D-15	TRANSMISSION (MT)	D-3		
CLUTCH (AT)	D-1	ENGINE MOUNTING	B-6	OIL PAN	B-3	TRANSMISSION CASE (AT)	C-16		
CONTROL TABLE		FUEL PUMP	C-1	OIL PUMP	C-6	TRANSMISSION CASE (MT)	D-8		

CHASSIS	7-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND PADLOCK	J-13	REAR SUSPENSION	G-3	STEERING WHEEL	G-7
BRAKEMASTER CYLINDER	J-12	FRONT BUMPER	J-8	FRONT SUSPENSION	G-2	PARKING BRAKE	H-6	REAR MECHANICAL BRAKE	H-5	STRIPE TAPE AND RED FLAG	F-4
GRAB RAIL	H-3	FRONT DOOR CLASS	J-8	FRONT WHEEL BRAKE	H-4	PETAL	J-6	ROAD WHEEL AND TIRE	G-4	SWITCH	F-12
CAR HEATER	I-1	FRONT DOOR LOCK	J-9	FRONT WINDSHIELD	J-6	REAR AXLE	J-6	SIDE BELT	J-10	WHEEL	F-13
DECK RAIL PIPE	J-5	FRONT DOOR PANEL	J-7	MUD TANK	J-10	REAR BODY PANEL	J-6	SIDE BODY PANEL	J-7	WASHER	F-15
DISTRIBUTOR	J-9	FRONT FENDER	I-4	GENERATOR	J-3	NEAR BUMPER	J-9	SPEEDOMETER	F-7	WIPER	F-14
FLOOR MAT	I-2	FRONT FLOOR PAN	L-1	INSTRUMENT PANEL	J-11	NEAR GATE LOCK	J-10	STARTING MOTOR	F-2	WIRING HARNESS	F-10
FRONT AXLE	J-5	FRONT LAMP	F-8	INTERIOR TRIM	J-3	REAR GATE LOCK	J-10	STEERING LIP	G-8		

FIG.61 (A, B) BRAKE MASTER CYLINDER

CITY

REMARKS

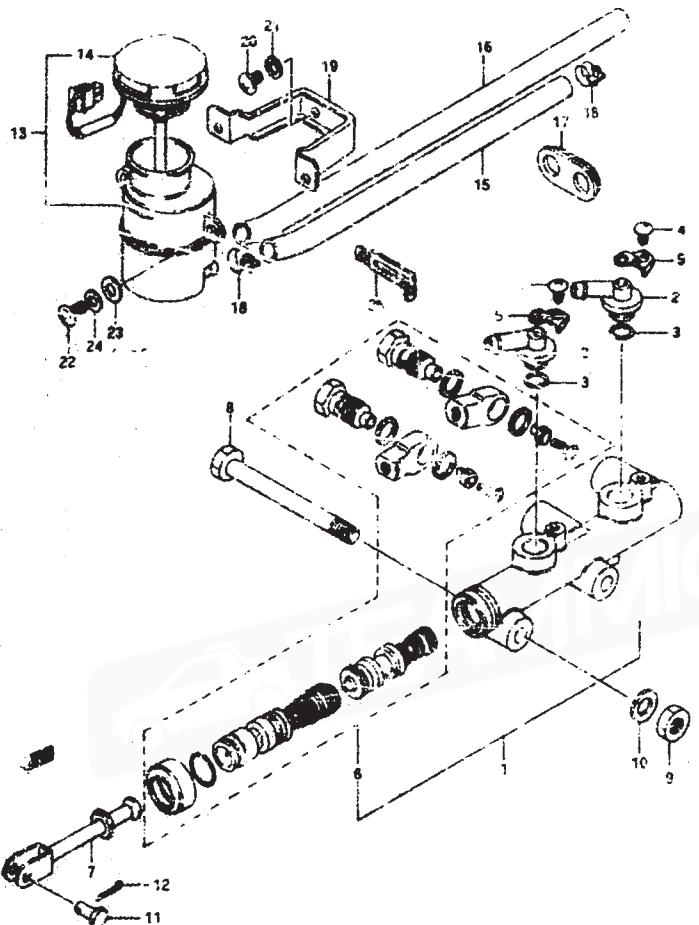

REF. NO.	PART NO.	DESCRIPTION	CITY
1	51100-73411	CYLINDER ASSY., BRAKE master	1
2	51191-78010	CONNECTOR	2
3	51192-78010	O RING	2
4	51194-78011	BOLT	2
5	51194-78011	SCUTTER	2
6	51160-78021	PISTON/CUP SET	1
7	51180-78010	ROD, PISTON	1
8	09100-101152	BOLT	2
9	08310-22106	NUT	2
10	08321-31106	HOSE WASHER	2
11	09200-08030	PIN	1
12	04111-25206	ROTATOR PIN	1
13	51200-61010	RESERVOIR ASSY	1
14	51220-81010	DRP, RESERVOIR	1
15	51241-67639	HOSE, BRAKE RESERVOIR	J L:1000-265
16	51241-67639	HOSE, BRAKE RESERVOIR	J L:1000-320
17	51250-78000	GRABMET, RESERVOIR HOSE	1
18	09100-101152	WAFER	4
19	51250-78000	BRACKET, BRAKE RESERVOIR	1
20	02-12-06103	SCREW	2
21	08321-21063	LOCK WASHER	2
22	02112-06163	SCREW	2
23	08322-22163	WASHER	2
24	08321-21063	LOCK WASHER	2
25	09104-06402	CLAMP	1

SS403 E24

SS407 E24

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RAD. O-F-13	REAR SUSPENSION	G-3	STEERING WHEEL	G-7	
BRAKE MASTER CYLINDER	H-2	FRONT BUMPER	I-8	FRONT SUSPENSION	G-6	SPARKING BRAKE	H-6	REAR WHEEL BRAKE	H-5	STRIPE TAPE AND MUD FLAP	J-4
PIPE	H-3	FRONT DOOR CLAS.	J-8	FRONT WHEEL BRAKE	H-4	PEDAL	G-10	REAR WHEEL AND TIRE	G-4	SWITCH	F-12
CAP HEATER	J-15	FRONT DOOR LOCK	J-9	FRONT WINDOW	J-6	REAR AXLE	G-8	SEAT BELT	J-13	VENTILATOR	I-12
DECK RAIL PIPE	J-5	FRONT DOOR PANEL	J-7	FUEL TANK	J-10	REAR BODY PANEL	J-6	SIDE BODY PANEL	J-7	WASHER	F-15
DISTRIBUTOR	F-5	FRONT FENDER	I-5	GENERATOR	F-3	REAR BUMPER	J-9	SPREADER	F-7	WIPER	F-14
FLOOR MAT	J-2	FRONT HOOD PANEL	I-5	INSTRUMENT PANEL	I-11	REAR GATE LOCK	J-10	STARTING MOTOR	J-2	WIRING HARNESS	F-10
FRONT AXLE	G-3	FRONT LAMP	E-2	INTERIOR TRIM	I-3	REAR LAMP	J-9	STEERING LINK	G-6		

FIG. 62

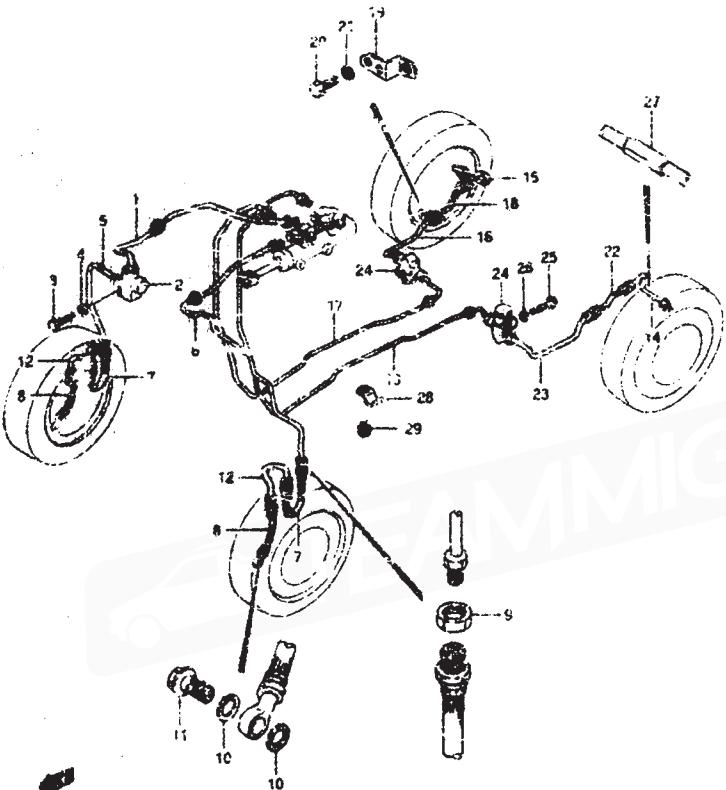



FIG. 62 (H - J) BRAKE PIPING

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	51410-48110	PIPE, BRAKE NO.1	1	
2	51410-48120	JOINT, 2 way	1	
3	01177-04256	CLIP	1	
4	08321-11066	LOCK WASHER	1	
5	51420-79424	PIPE, BRAKE NO.2	1	
6	51421-01102	PIPE, BRAKE NO.3	1	
7	51470-64100	HOSE, FRONT FLEXIBLE	2	
8	51450-18100	HOSE, FRONT SIDE FLEXIBLE	2	
9	09140-16017	NUT	10	
10	09160-16020	FLANGE	2	
11	09360-10104	BOLT, UNEVEN	2	
12	51460-78410	PIPE, BRAKE NO.4	1	
13	51460-41130	PIPE, BRAKE NO.5	1	
14	51470-76100	PIPE, BRAKE NO.7	1	
15	51480-76100	PIPE, BRAKE NO.9	1	
16	51500-78100	PIPE, BRAKE NO.10	1	
17	51341-81100	PIPE, BRAKE NO.14	1	
18	51440-79450	HOSE, BRAKE FLEXIBLE	1	
19	51343-78400	BRACKET, FLEXIBLE HOSE	1	
20	04107-06165	BOLT	2	
21	08321-31066	LOCK WASHER	2	
22	51540-78020	HOSE, REAR FLEXIBLE	1	
23	51410-78010	PIPE, BRAKE NO.12	1	
24	51910-74120	VALVE ASST., DISC/DRUM	2	
25	04107-06406	BOLT	2	
26	08321-31066	LOCK WASHER	2	
27	51733-67500	HISTER FOR BRAKE PIPE	3	
28	09403-05302	CLAMP	10	
29	19132-06000	SCREW	10	

55407 E24

55407 E34

BATTERY.....	F-6	FRONT BODY PANEL.....I-2	FRONT SEAT.....J-12	LOCK SET AND RADIO-F-15	REAR SUSPENSION.....G-3	STEERING WHEEL.....G-7
BRAKE MASTER CYLINDER-H-2		FRONT BUMPER.....I-8	FRONT SUSPENSION.....G-2	PARKING BRAKE.....H-8	REAR WHEEL BRAKE.....M-5	STRIP TAPE AND MUD FLAP-J-4
BRAKE PIPING.....	H-3	FRONT DOOR GLASS-J-8	FRONT WHEEL BRAKE.....F-4	PEDAL.....G-10	RADIAL WHEEL AND TIRE-G-4	SWITCH.....F-12
CAR HEATER.....	J-13	FRONT DOOR LOCK.....J-9	FRONT WINDSHIELD.....J-6	REAR AXLE.....G-6	SEAT BELT.....J-13	VENT FLAP-J-2
DOCK RAIL PIPE.....	J-5	FRONT DOOR PANEL.....J-7	FUEL TANK.....J-10	REAR BODY PANEL.....I-6	SIDE BODY PANEL.....I-7	WIPER.....F-15
DISTRIBUTOR.....	F-9	FRONT FENDER.....J-5	GENERATOR.....F-1	REAR BUMPER.....I-9	SPEEDOMETER.....F-9	WIPER.....F-14
FLUOR. PT. ....	J-2	FRONT HOOD PANEL.....I-3	INSTRUMENT PANEL.....I-1	REAR DATE LOCK.....J-10	STARTING MOTOR.....F-2	WIRING HARNESS.....F-10
FRONT AXLE.....	I-3	FRONT LAMP.....F-8	INTERIOR TRIM.....J-3	REAR LAMP.....F-9	STEERING LINK.....G-4	

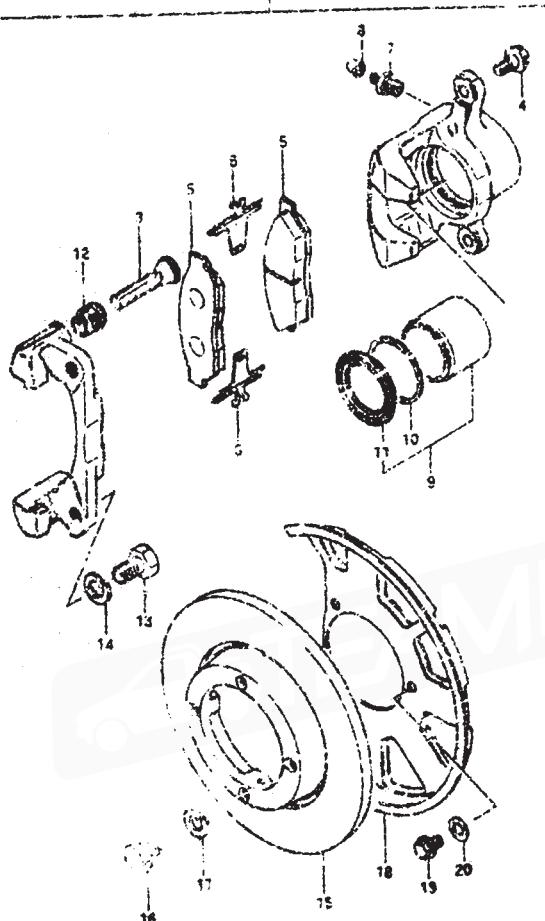


REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	55101-78451	CALIPER ASSY., DISC BRAKE RH	1
2	55102-73151	CLIPPER ASSY., DISC L. BRAKE LH	1
3	55191-78450	PIN	4
4	55125-78451	NUT, SHT.	4
5	55110-78450	RING	4
6	55124-78450	SPRING, PLD	4
7	55131-78450	PLUG, SPRING	4
8	57156-55110	RING, DISCHARGE PLUG	2
9	55100-78031	PISTON/CLIP SET	2
10	55136-78350	RING, PLD	2
11	55142-78450	RING, PLD	2
12	55201-78450	RING, PLD	4
13	09100-12210	BOLT	4
14	09301-31123	LOCK WASHER	4
15	55511-78401	DISC, FRONT BRAKE	2
16	09100-10028	BOLT (10x25)	8
17	08321-31006	LOCK WASHER	8
18	55321-78400	COVER, BRAKE DISC BRAKE	2
19	04517-46146	BOLT	6
20	09160-06037	WASHER (6.3MMx1.6)	6

55401 E24

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RADIO	F-13	FRONT SUSPENSION	G-4	STEERING WHEEL	G-7
Brake Master Cylinder	H-2	FRONT BUMPER	I-8	FRONT SUSPENSION	G-2	PARKING BRAKE	H-6	Rear Wheel Brake	H-5	STRUT TAPE AND HUB FLAP	J-4
Brake Piping	H-3	Front Door Glass	J-8	Front Wheel Brake	H-4	PEDAL	G-10	Road Wheel And Tire	G-4	SHUTTER	F-12
Car Heater	I-13	Front Door Lock	J-9	Front Window	J-6	REAR AXLE	G-6	SEAT BELT	J-13	VENTILATION	I-12
Deck Rail Pipe	J-5	Front Floor Panel	J-7	Fuel Tank	J-10	REAR BODY PANEL	J-6	DOOR BODY PANEL	I-7	WINDSCREEN	F-15
Distributor	F-5	Front Fender	I-3	Generator	J-3	REAR BUMPER	I-3	ODOMETER	F-7	WIPER	F-14
Floor Mat	J-2	Front Hood Panel	I-3	Instrument Panel	I-1	REAR GATE LOCK	I-10	STARTING MOTOR	F-2	WINDSHIELD	F-16
Front Axle	B-5	Front Lamp	F-8	Interior Trim	J-3	REAR LAMP	F-9	SWINGING LINK	J-9		

FIG. 22 (H-3) HEAD AND SHOULDER

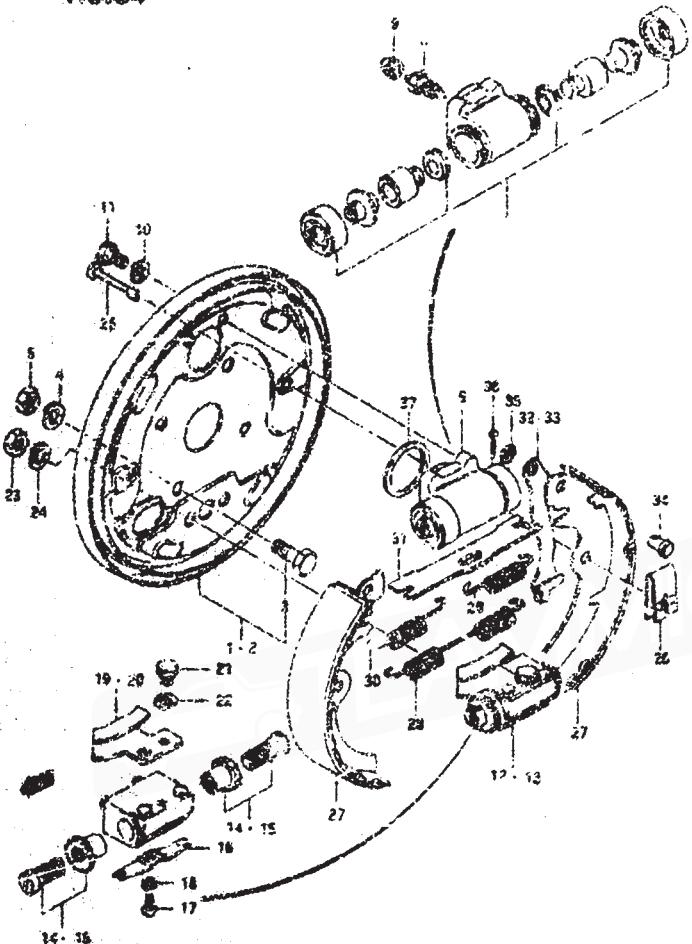

REF ID	PART NO.	DESCRIPTION	REMARKS
1	3340-01002	PLATE, SHOCKING RH	1
2	3340-01003	PLATE, SHOCKING LH	1
3	3341-03500	BOLT	2
4	02324-21153	LOCK WASHER	2
5	03100-A2003	NUT	2
6	03402-47010	CYLINDER ASST	2
7	02400-64921	PISTOL GRIP + FOOT SET	2
8	33473-62010	PLATE, ALUMINUM	2
9	33474-00010	LIP	2
10	03100-01157	LOCK WASHER	4
11	01107-00129	BOLT	6
12	33401-41010	ANCHOR ASSTY, DIADE RH	1
13	3340-01010	ANCHOR ASSTY, DIADE LH	1
14	3340-01023	SLEEVE ASSTY, DIADE	2
15	3350-01023	SLEEVE ASSTY, VARIOUS	2
16	33401-42011	SPRING	2
17	32112-01068	SPRING	2
18	03501-21047	LOCK WASHER	2
19	33401-01111	PLATE, wire guide RH	1
20	33402-01011	PLATE, wire guide LH	1
21	01107-00118	BOLT	2
22	03101-01067	LOCK WASHER	2
23	03310-42081	NUT	4
24	03101-01000	LOCK WASHER	8
25	72241-00010	PIN	8
26	33202-70021	SPRING, REAR FIELD GUN	4
27	33211-70010	SHOE, REAR	4
28	33401-70010	SPRING	2
29	33200-69210	SPRING, SHOE BETWEEN NO.1	2
30	33200-69220	SPRING, SHOE BETWEEN NO.2	2
31	33711-40010	SHOOT, REAR FIELD PISTOL	2
32	33721-00010	SHOOT, REAR FIELD GUN	1
33	33720-04010	LEAF, PISTOL SHOE LH	2
34	33731-02010	PIN	2
35	33742-53010	WASHER	2
36	04111-29136	OUTER PIN	2
37	33046-00011	SHOE, REAR CYLINDER	2

ssetr r21

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LATCH SET AND PADL	P-3	Rear Suspension	G-3	STEERING WHEEL	G-1
Brake Master Cylinder	H-2	FRONT BUMPER	I-8	FRONT SUSPENSION	G-2	PARKING BRAKE	H-4	GEAR WHEEL COAG	H-5	STRIPS TAPE AND MUD FLAP	G-2
Brake Pipe(s)	H-3	FRONT GLASS	J-6	FRONT WHEEL BRAKE	H-4	PEDAL	I-10	ROAD WHEEL AD TIRE	G-4	SWITCH	G-12
Cab Heater	I-13	FRONT DOOR LOCK	J-8	FRONT WINDSH	G-6	PEAR AXLE	G-6	REAR GEAR BOX	I-13	VENTILATOR	G-12
Clock Dial FUSE	I-23	FRONT DOOR PANEL	J-7	PILOT TUBE	I-10	REAR DOOR PANEL	I-6	SIDE SWEEP STYL	I-7	WINDSH	I-13
Cooler Radiator	H-8	FRONT FENDER	I-3	REULATOR	H-3	REAR BUMPER	I-3	SPARE TIRE	I-2	WIPER	I-14
Cloud Lamp	A-2	FRONT HEAD-PIECE	I-3	REULATOR FAN	I-11	REAR DOOR LOCK	I-2	SWINGING MOTOR	F-2	WIRING HARNESS	G-10
Front Axle	I-5	FRONT LAMP	F-4	REULATOR FAN	I-3	REAR LIGHT	I-4	STEERING ARM	G-4		


 



FIG. 4 (P-6) SECURE GRADE.

Q'TY

NOTES

REF. NO.	PART NO.	DESCRIPTION	Q'TY
1	54112-54010	LEVER ASY., PARKING BRAKE	1
2	54112-54010	LEVER	1
3	01107-04005	BOLT	4
4	35521-54004	CASHER	4
5	54462-54010	PULLEY, GUIDE	1
6	59200-54010	PIN	1
7	56111-25206	COTTER PIN	1
8	14403-74500	SHIMMERS, GUIDE	2
9	54410-84110	CABLE, PARKING BRAKE	1
10	54081-78030	RETRACT, STARTING CABLE	2
11	02142-04003	SCREW	4
12	04003-04003	CLAMP	2
13	01531-01123	BOLT	1
14	04021-04001	CLAMP	2
15	01517-04023	NUT	2
16	54081-78000	RETRACT, GUIDE (L.)	1
17	21X9-40213	SPRING	2

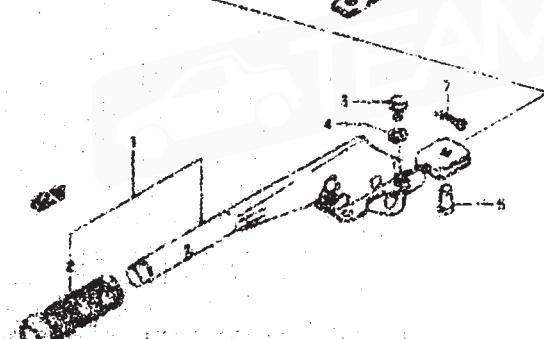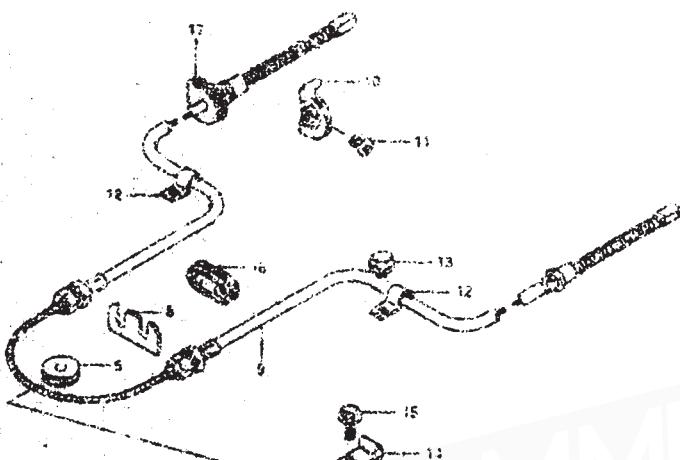


PARTS LIST

SHEET E24

FRONT...	F-2	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RATIO	F-13	REAR SUSPENS. OP.	J-4	STEERING WHEEL	G-7
SPARE TIRE CYLINDER	H-2	FRONT BRAKE	I-3	FRONT SUSPENSION	I-3	PARKING BRAKE	H-6	REAR WHEEL BEARING	I-5	STRIP TAPE AND RID FLAP	J-4
WHEEL PIPING	H-3	FRONT DOOR GLASS	I-8	FRONT WHEEL BRAKE	H-4	PEDAL	G-10	RAD WHEEL AND TIRE	G-4	SKIRT SET	J-12
DOOR HATCH	I-13	FRONT DOOR LOCK	I-9	FRONT WINDOW	I-4	REAR AXLE	G-8	SEAT BELT	J-13	VENTILATION	I-12
DOOR HULL PLATE	I-15	FRONT DOOR PANEL	I-7	FUEL TANK	I-10	SHL. REAR PANEL	I-7	SHL. REAR PANEL	I-7	WINDSH.	F-15
DRIVER'S SIDE	F-4	FRONT DOOR PANEL	I-3	GEN. MOTOR	I-3	SEAT CARRIER	F-7	SPIDERMEIER	F-7	WIPER	F-13
FLAME SHLD.	I-3	FRONT DOOR PANEL	I-3	INSTRUMENT PANEL	I-11	SEAT CARRIER	I-10	SWINGING MOTOR	F-7	WIRING ARRANG.	F-10
FRONT F. W.	I-6	FRONT DOOR	I-8	INTERIOR TILT	I-13	SEAT LAMP	F-8	SWINGING LAMP	I-8		


PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.	PART NO.	ADDRESS NO.
09262-35030	G-5 09308-25002	F-10 09343-07161	C-11 09403-14402	C-11 09448-12005	D-2 09448-12005	C-12 09448-18008	D-2 09448-18008	C-12 09448-21002	D-10 09448-21002	C-11 09448-21002	E-8 09448-21002
09263-18013	G-8 09309-08010	H-6 09347-11015	C-12 09404-06402	H-2 09448-12028	D-2 09448-12028	J-10 09404-06404	H-3 09448-12045	D-10 09448-12045	F-8 09448-12045	G-11 09448-12045	F-8 09448-12045
09263-25033	D-3 09319-10030	G-2 09347-11015	J-10 09404-06402	H-2 09448-12056	F-8 09448-12056	D-3 09319-07016	J-11 09404-06404	D-5 09448-12056	F-9 09448-12056	G-11 09448-12056	E-8 09448-12056
09263-25037	D-3 09319-24008	D-3 09319-07016	J-11 09404-06404	F-10 09460-01119	E-8 09460-01119	I-8 09344-08002	F-10 09460-01119	F-10 09460-01119	F-9 09460-01119	G-11 09460-01119	E-8 09460-01119
09263-30007	D-3 09320-05014	I-8 09344-08002	F-10 09460-01119	F-10 09460-01119	E-8 09460-01119						
09263-30010	D-3 09320-06013	C-2 09360-10022	I-2 09460-06413	C-3 09471-12006	E-5 09471-12006	D-11 09320-12025	D-15 09471-12028	C-11 09471-12028	F-7 09471-12028	C-12 09471-12045	F-8 09471-12045
09269-35003	D-2 09320-13013	C-5 09360-10026	H-3 09471-12045	C-12 09471-12056	F-8 09471-12056	E-3 09320-13014	C-5 09367-04003	F-10 09471-12056	F-9 09471-12056	F-10 09471-12057	F-9 09471-12057
09280-08009	E-3 09320-13014	C-5 09367-04003	C-12 09471-12056	F-10 09471-12057	F-9 09471-12057	D-3 09321-05005	J-11 09331-16001	H-8 09471-12057	F-9 09471-12057	F-10 09471-12057	F-9 09471-12057
09280-11002	D-3 09321-05005	J-11 09331-16001	H-8 09471-12057	H-8 09471-12057	F-9 09471-12057						
09280-14004	C-3 09321-05009	I-3 09381-24001	E-2 09407-05404	S-10 09471-12059	S-8 09471-12059	C-9 09321-05010	I-10 09381-23002	G-8 09407-05405	F-8 09471-12073	F-8 09471-12073	F-8 09471-12073
09280-16005	B-4 09321-05018	I-3 09381-23002	E-4 09407-10402	F-10 09471-12076	F-8 09471-12076	D-5 09329-01003	J-11 09388-00007	D-4 09407-14403	D-5 09481-10101	F-9 09481-10101	F-10 09481-10101
09280-18005	D-5 09329-01003	J-11 09388-00007	D-4 09407-14403	D-10 09481-10101	F-10 09481-10101	D-4 09329-03001	I-11 09388-00018	D-4 09408-00033	C-12 09481-10101	F-10 09481-10101	F-10 09481-10101
09280-19001	D-4 09329-03001	I-11 09388-00018	D-15 09408-00033	C-12 09481-10101	F-10 09481-10101						
09281-08001	D-9 09341-C6002	D-5 09390-47006	D-3 09407-22403	J-10 09481-15101	F-10 09481-15101	D-12 09390-50002	D-3 09408-00010	F-11 09482-00123	B-3 09482-00123	C-11 09482-00131	B-3 09482-00131
09280-43002	D-5 09343-03038	G-8 09390-52003	D-3 09408-00021	C-12 09482-00131	B-3 09482-00131	D-7 09343-03079	C-11 09390-72007	E-2 09491-28016	B-12 09491-28016	C-12 09491-28016	B-12 09491-28016
09282-08001	D-4 09343-03079	C-12 09390-72007	D-15 09408-00033	C-12 09491-28016	B-12 09491-28016						
09283-20024	D-12 09343-03084	C-11 09400-16301	H-2 09408-00043	D-15 09491-62004	B-12 09491-62004	D-5 09400-22312	C-10 09408-00044	C-11 09492-42014	B-11 09492-42014	C-12 09492-42014	B-11 09492-42014
09283-22072	B-9 09343-03087	C-12 09400-34311	L-10 09409-06301	J-3 09492-55210	B-13 09492-55210	B-8 09343-03090	C-12 09400-52711	J-10 09409-06301	I-9 09492-65005	B-13 09492-65005	B-13 09492-65005
09283-32026	B-8 09343-03090	C-12 09400-52711	J-10 09409-06301	J-3 09492-65005	B-13 09492-65005	E-2 09343-03065	C-12 09400-58301	J-10 09409-06304	J-2 09492-5C012	B-12 09492-5C012	B-12 09492-5C012
09283-35019	E-2 09343-03065	C-12 09400-58301	J-10 09409-06304	J-2 09492-5C012							
09283-35022	E-2 09343-03096	C-11 09401-05402	G-8 09409-08303-281	J-3 09492-55210	B-11 09492-55210	C-12 09401-07401	C-5 09409-08307	J-7 09492-55210	B-13 09492-55210	C-12 09492-55210	B-13 09492-55210
09283-44008	G-5 09343-04008	C-12 09401-07401	C-5 09409-08307	I-9 09492-65005	B-13 09492-65005	B-8 09343-03098	C-12 09401-10301	D-5 09410-00067	J-2 09492-65005	J-2 09492-65005	B-13 09492-65005
09283-60005	B-8 09343-03098	C-12 09401-10301	D-10 09410-00067	J-2 09492-65005	J-6 09492-65005	B-9 09343-03100	C-11 09401-10404	L-5 09410-00072	J-2 09492-60016	J-6 09492-60016	J-6 09492-60016
09289-07005	B-9 09343-03100	C-11 09401-10404	L-5 09410-00072	J-2 09492-60016		D-7 09401-11402	J-11 09422-05011	D-4 09422-05011	J-6 09422-05011		
09289-14001	D-7 09401-11402	J-11 09422-05011	J-8 09440-06021	D-13 09440-06021							
09300-12011	D-2 09401-11402	C-5 09401-11404	J-8 09440-06021	C-9 09440-07017	E-5 09440-07017	C-5 09401-11404	C-9 09440-07017	C-5 09440-07017	E-5 09440-07017	C-5 09440-07017	E-5 09440-07017
09300-20024	D-3 09401-11402	C-5 09401-11404	C-9 09440-07017	C-9 09440-07017	E-5 09440-07017						
09305-05002	E-4 09401-05171	C-3 09401-07017	C-9 09440-07017	C-9 09440-07017	E-6 09440-07017	C-5 09401-11405	C-10 09440-07017	C-5 09440-07017	E-6 09440-07017	C-5 09440-07017	E-6 09440-07017
09305-08012	E-4 09401-05177	C-5 09401-11405	C-10 09440-07017	C-5 09440-07025	C-3 09440-07025	C-5 09401-11405	C-10 09440-07025	C-5 09440-07025	E-6 09440-07025	C-5 09440-07025	E-6 09440-07025
09305-08015	E-3 09401-05278	C-11 09401-11405	C-5 09440-07025	C-5 09440-07025	E-5 09440-07025						
09305-14005	G-3 09401-07025	C-12 09401-15301	J-10 09440-07025	E-5 09440-07025							
09306-13003	E-5 09401-05290	C-11 09401-18301	B-3 09440-07051	E-5 09440-07051							
09306-04005	I-12 09401-07051	C-12 09401-20402	I-15 09440-07051	E-5 09440-07051							
09308-03005	F-10 09401-07051	C-5 09401-23201	G-9 09440-07051	C-3 09440-07051							
09308-06009	F-9 09401-07051	C-8 09401-27401	G-2 09440-10101	E-6 09440-10101							
09308-07012	I-3 09401-07051	C-9 09403-05302	H-3 09440-17201	E-6 09440-17201							
09308-09014	F-3 09401-07051	C-10 09403-07311	I-3 09440-19011	E-6 09440-19011							
09308-10004	B-10 09403-07311	C-5 09403-08401	H-6 09440-48C01	D-3 09440-48C01							
09308-13004	I-13 09403-07311	D-10 09403-02312	H-6 09440-12006	G-10 09440-12006							
09308-14005	J-4 09403-07096	J-11 09403-12403	F-7 09440-12403	E-11 09440-12403							

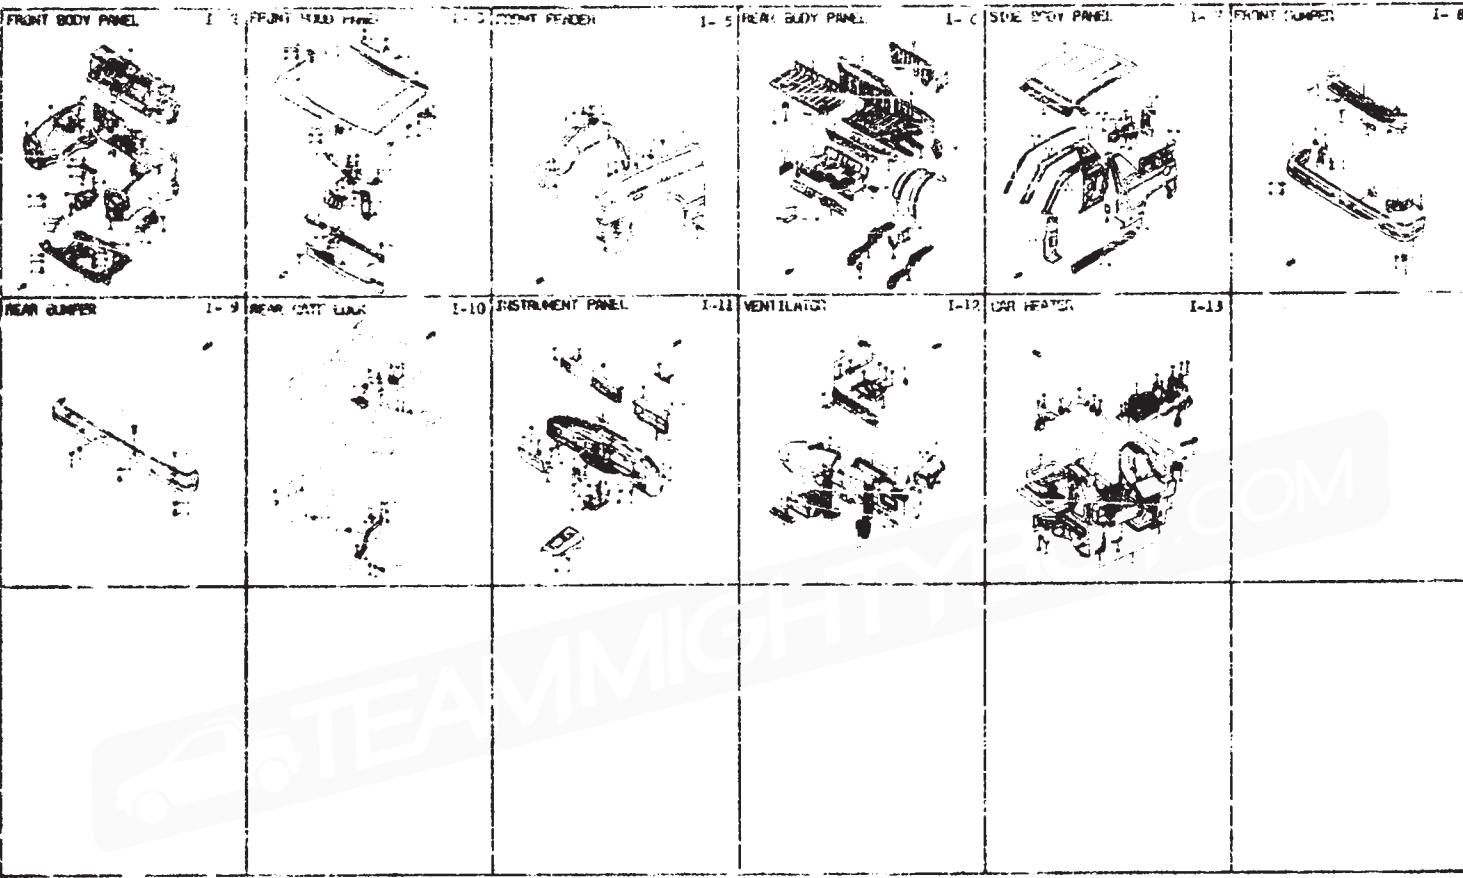

AIR CLEANER.....	C-2	CRANKSHAFT.....	B-8	GEAR SHIFT CONTROL.....	F-3	OIL PUMP AND OIL PAN (AT).....	D-14	WATER HOSE-C-10
AT ASSY (AT).....	D-8	CYLINDER BLOCK.....	H-6	STEER. FORK (MT).....	D-6	PADLIATOR.....	C-8	WATER PUMP-C-7
AT GASKET SET (AT).....	D-9	CYLINDER HEAD.....	B-7	INTAKE MANIFOLD.....	B-11	SECTOR LEVER (AT).....	E-8	
AT PARKING BRAKE (AT).....	D-13	DIFFERENTIAL GEAR-E-7	LABEL.....		C-15	TIMING BOLT.....	D-10	
CAN SHIFT AND VALVE.....	H-9	DRIVESTORE CONTROL.....	C-11	MUFFLER.....	C-4	TRANSMISSION (AT).....	D-11	
CALIBRATOR.....	B-11	CLUTCH KASSET SLT-B-2	CYL. HEAD (AT).....	D-15	TRANSMISSION (MT).....	D-3		
CYLINDER (MT).....	D-2	ENGINE MOUNTING.....	B-6	OIL PAN (AT).....	B-5	TRANSMISSION CASE (AT).....	D-10	
ELCTRICAL CABLE.....	C-3	FUEL PUMP.....	C-5	OIL PUMP.....	C-5	TRANSMISSION CASE (MT).....	D-5	

BATTERY.....	F-6	FRONT BODY PANEL.....	I-2	FRONT SEAT.....	J-12	LUCK SET AND RADIATOR.....	F-13	TEAR SUSPENSION.....	G-3	STEERING WHEEL.....	G-7
BRK. MASTER CYLINDER.....	I-7	FRONT BUMPER.....	I-8	FRONT SUSPENSION.....	G-2	PARKING BRAKE.....	H-6	RDP. WHEEL BRAKE.....	H-5	STRIP. TAPE AND MUD FLAP.....	J-4
CRACK PIPING.....	H-3	FRONT COOL GLASS.....	I-2	FRONT WHEEL BRAKE-H-4	F-4	PEAL.....	C-1	SWING. WHEEL AND TIRE.....	C-9	SWITCH.....	F-12
CAR HEATER.....	I-1	FRONT DOOR LOCK.....	I-2	FRONT WINDSH.	A-6	SEAT.....	G-6	SWITCH.....	J-13	VENTILATOR.....	I-12
DECOR RAIL PIPE.....	J-3	FRONT DOOR PANEL.....	I-2	FUEL TANK.....	J-10	REAR BODY PANEL.....	I-5	SIDE BODY PANEL.....	I-7	WASHER.....	F-13
DRILL BIT.....	F-5	FRONT FENDER.....	I-5	GENERATOR.....	J-5	REAR BUMPER.....	I-6	SPEEDOMETER.....	I-7	WIPER.....	J-11
DRUP. KIT.....		FRONT HOOD PANEL.....	I-3	INSTRUMENT PANEL.....	I-11	REAR GATE LUG.....	I-10	TAPPING MOTOR.....	I-7	WIRING HARNESS.....	F-2
DRVR. SEAT.....	G-5	FRONT LAMP.....	F-8	INTERIOR TRIM.....	J-5	REAR LAMP.....	G-9	STEERING TUBE.....	G-8		

FIG. 5 (1-2) FRONT BODY SECTION

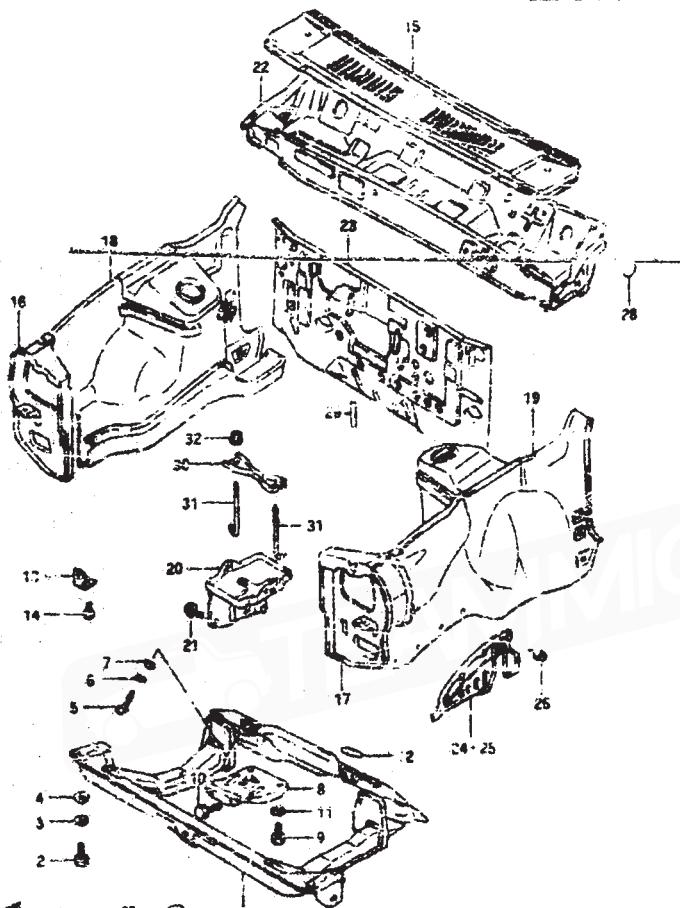

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	56300-78131	FRAME, engine suspension	1	AT
1-2	56300-78140	FRAME, engine suspension	1	AT
2	01107-10706	BOLT	8	
3	00321-21106	LOCK WASHER	8	
4	02140-10001	WASHER (10.3x24x2.3)	8	
5	01107-10706	BOLT	2	
6	00321-21106	LOCK WASHER	2	
7	02140-10001	WASHER (10.3x24x2.3)	2	
8	00321-20200	SUSPEN., front end lower RH	1	
9	01107-10166	BOLT	2	
10	01107-10706	BOLT	1	
11	00321-21106	LOCK WASHER	3	
12	56371-76010	FILM	1	
13	71121-61000	BRACKET, front balance panel	1	
14	03141-05106	SCREW	1	
15	99710-81001	PANEL, coil top	1	
16	58114-21100	PANEL, front end RH	1	
17	58160-81000	PANEL, front end LH	1	
18	58300-81840	PANEL ASSY, fender upper RH	1	
19	58400-81312	PANEL ASSY, fender upper LH	1	
20	58440-81001	BRACKET, battery	1	
21	01317-04106	BOLT	9	
22	59300-81004	PANEL ASSY, coil upper	1	
23-1	99110-81250	PANEL, dash	1	AT
23-2	58110-81240	PANEL, dash	1	AT
24	63551-78000	SPLASH BOARD, upper side RH	1	
25	63556-78000	SPLASH BOARD, upper side LH	1	
26	02140-05000	SCREW	8	
27	69511-70100	FILM, upper fender	2	
28	69511-70100	FILM, PR upper crossmember	2	
29	09734-08000	TUBE, clamp	1	L170>35
30	72511-78000	RETAINER, battery	1	
31	72729-64000	BOLT, battery	2	
32	00321-10003	NUT	2	


SCANNED BY

BATTERY  
MAKES  
BREAK  
CAR WASH  
CHECK  
DISINFECTION  
FLOOR  
PAINT

卷之二

D RADIATOR	-1-3	REAR SUSPENSION	-1-7	STEERING WHEEL	-1-7
K E	-1-8	REAR WHEEL BRAKE	-1-9	STRIKE TAPE AND MUD FLAP	-1-4
G-10		REAR WHEEL AND TIRE	-1-4	SWITCH	-1-12
C-6		SEAT BELT	-1-13	VENTILATOR	-1-12
A NEL	-1-6	SIDE AIR JET PANEL	-1-7	WHEEL	-1-15
	-1-9	SPEEDOMETER	-1-7	WIPER	-1-14
	-1-10	WEIGHTING NO. G	-1-7	WIRING HARNESS	-1-19
	-1-12	WHEEL	-1-6		

FIG. 67

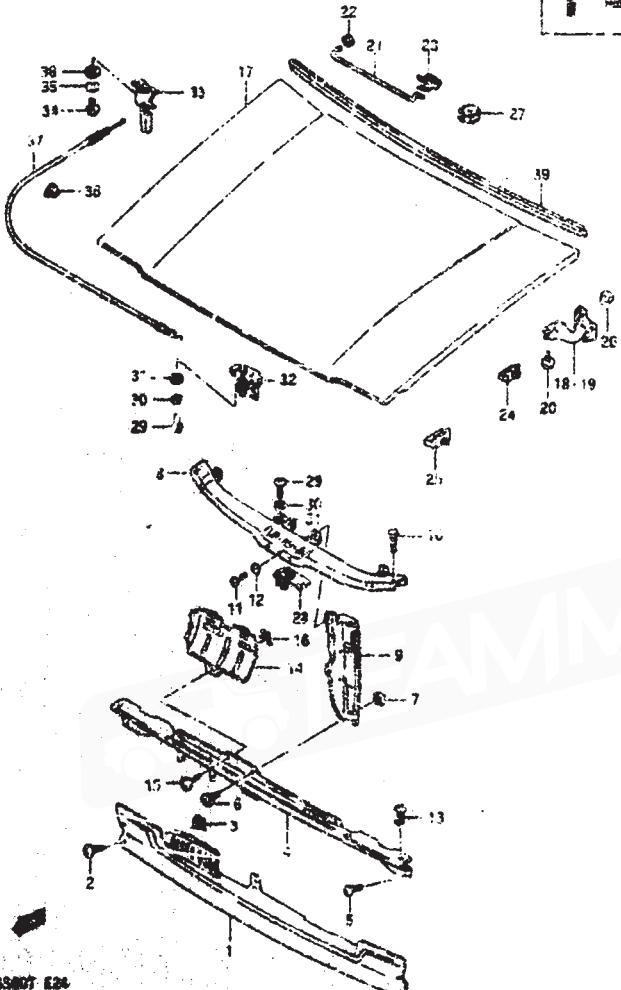

13007 E26


FIG. 67 (1-3) FRONT HOOD PANEL.

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARK'S
1	57111-81001	PANEL, front balance	1	
2	03212-05169	SCREW	6	
3	06142-04003	NUT	6	
4	57121-81001	PANEL, grille lower	1	
5	02112-06108	SCREW	2	
6	02242-05129	SCREW	2	
7	03140-05003	NUT	2	
8-1	57210-81004	MEMBER, front upper	1	PT
8-2	57210-81021	MEMBER, front lower	1	PT
9	57221-81031	MEMBER, front center	1	
10	01317-06106	HOLT	4	
11	09123-04021	SCREW (6x12)	1	
12	05322-21067	WASHER	1	
13	02142-04108	SCREW	2	
14	72611-81000	WATER PROOF, PLATE	1	
15	18842-05129	SCREW	3	
16	03145-05203	NUT	3	
17	57101-81001	HOOD ASSY, front	1	
18	57410-81001	PIPE, front right RH	1	
19	57420-81000	PIPE, front hood LH	1	
20	01117-06106	NOLT	8	
21	72311-61001	STAY, front hood	1	
22	09709-01022	BRACKET	1	
23	02401-01211	CLAMP	1	
24	09311-05007	CUSHION, hood base	2	
25	09521-05111	CUSHION, hood frame	2	

SHEET 7/7

BATTERY	E-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND HINGE	G-7	FRONT SUSPENSION	H-3	STEERING WHEEL	F-7
BRAKEMASTER CYLINDER	H-2	FRONT BUMPER	I-6	FRONT SUSPENSION	C-2	PARKING BRAKE	H-5	REAR WHEEL ASSEMBLY	H-5	STRUT TUBE AND MUD FLAP	H-4
BRIDGE PLATE	H-4	FRONT DUCK GLASS	I-5	FRONT WHEEL BRAKE	H-4	PEDAL	I-10	REAR WHEEL AND TIRE	H-4	SHUTTER	F-12
CAR SEATBELT	I-13	FRONT DOOR LOCK	J-9	FRONT WINDSHIELD	I-6	PEAR AXLE	I-6	SHUTTER BELT	I-13	VENTILATOR	I-12
DOOR SEAL PIPE	I-45	FRONT DOOR PANEL	J-7	FUEL TANK	J-10	REAR BODY PANEL	I-6	SHUTTER FRAME	I-7	WHEEL	F-13
DRIVERSIDE	I-5	FRONT FENDER	K-1	GENERATOR	F-3	REAR BUMPER	I-9	WHEEL CARRIER	I-7	WIPER	F-14
FLAME ARREST	I-2	FRONT HOOD PANEL	I-3	INSTRUMENT PANEL	I-11	REAR GATE LOCK	I-10	SHUTTER MOTOR	F-2	WIPER MASTERS	F-10
FRONT AXLE	I-5	FRONT LAMP	F-7	INTERIOR TRIM	J-3	REAR LAMP	F-8	SHUTTER LINK	I-8		

FIG. 67

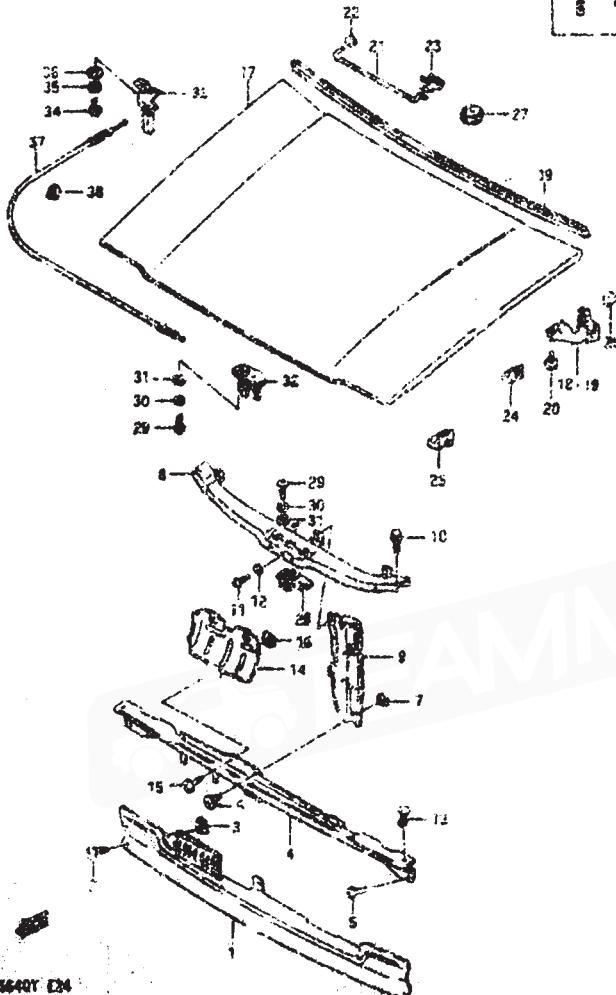

76

FIG. 67 (1-2) FRONT END PANEL

87V


REF. NO.	PART NO.	DESCRIPTION	REMARKS
26	72951-34010	DUST SEAL, INNER SIDE	2
27	06290-36040	CAP	2
28	02110-93040	LATCH, head	1
29	02112-06126	SCREW	4
30	08321-21065	LOCK WASHER	4
31	08322-21066	WASHER	6
32	02110-61010	SLIDER, head lock	1
33	02110-61010	LEVER, head lock	1
34	02112-06125	SCREW	1
35	08321-11046	LOCK WASHER	1
36	08322-21046	WASHER	1
37	42110-01000	TRAIL, head tank release	1
38	02112-02000	GRIPPER, latch release	1
39	79012-70000	DUST SEAL, engine room partition	1

56407 E24

56407 E24

BATTERY	F-6	FR. END. BODY PANEL	I-2 FRONT SEAT	J-12	LOCK SET	P-2	FR. 10-10-F-18	FRONT SUSPENSION	J-3	STEERING WHEEL	J-7
Brake Master Cylinder	H-2	FRONT BRAKE	I-8 FRONT SUSPENSION	J-2	ANTI-THREE BRAKE	J-6	REAR WHEEL BRAKE	I-5	STRIPPING TAPE AND MUD FLAP	J-4	
Brake PIPING	H-5	FRONT DOOR GLASS	J-1 FRONT WHEEL BRAKE	J-4	PEELER	J-7	REAR WHEEL AND TIRE	G-4	SHUTTER	J-12	
COOLANT	H-13	FRONT DRUM BRAKE	J-9 FRONT WINDOW	J-6	REAR AXLE	J-10	SEAT BELT	J-13	VENTILATOR	J-14	
DOOR BAIL PIPE	I-5	FRONT DOOR PANEL	J-7 FUEL TANK	J-10	SIDE BODY PANEL	J-6	SIDE BODY PANEL	J-7	WIPER	J-15	
DRIVE MOTOR	J-15	FRONT FENDER	J-5 GENERATOR	J-5	REAR BODY PANEL	J-9	SWINGMETER	J-7	WIPER	J-14	
FLAME ARRESTOR		FRONT HEAD PANEL	J-5 INSTRUMENT PANEL	J-11	REAR BODY LOCK	J-10	SWINGING MOTOR	J-2	WIRING HARNESS	J-10	
FRONT AXLE	J-5	FRONT LAMP	J-5 INTERIOR TRIM	J-5	REAR BODY	J-9	SWINGING LAMP	J-8			

### FIGURE 14-21. CHOLESTERIC

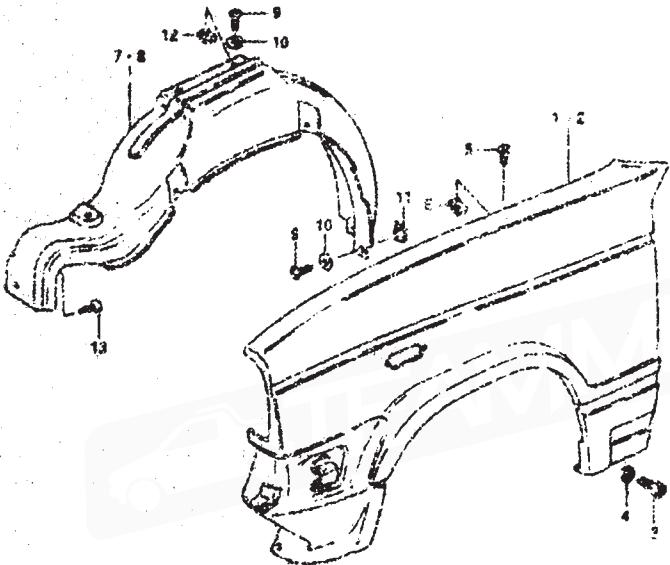


REF ID	PART NO.	DESCRIPTION	QTY
1	37420-01012	PIRELL, FLANGE FENDER BM	1
2	37720-01012	PIRELL, FLANGE FENDER LM	1
3	08142-00001	SCREW	2
4	08310-22257	WASHER	2
5	02241-00008	FLANGE	2
6	00140-00003	NUT	0
7	72221-01000	LINING, "DOME" FENDER BM	1
8	72201-01000	LINING, "DOME" FENDER LM	1
9	09130-00004	SCREW	16
10	09100-00002	WASHER	16
11	08140-00003	NUT	6
12	08140-00013	NUT	2
13	02241-00121	SCREW	2

卷之三

Digitized by srujanika@gmail.com

FRONT BODY PANEL	I-2	FRONT BUMPER	J-12	LOCK SET AND RATIO	P-1	FRONT SUSPENSION	G-3	STEERING WHEEL	F-7
FRONT DOOR GLASS	J-8	FRONT FENDER	H-6	PARKING BRAKE	H-0	FRONT WHEEL BRAKE	H-3	SHADE TAPE AND MUD FLAP	F-6
FRONT DOOR LATCH	J-8	FRONT FENDER BRAKE	K-2	PETROL	P-2	FRONT WHEEL AND TIRE	C-1	SHIFTER	F-12
FRONT DOOR HANDLE	J-8	FRONT FENDER BRAKE	K-2	PLATE	G-0	FRONT WHEEL BEARING	C-1	VESTITATOR	I-12
FRONT FENDER	J-3	FRONT FENDER BRAKE	K-2	SEAT BELT	G-1	FRONT WHEEL BEARING	C-1	WHEEL	F-5
FRONT FENDER BRAKE	J-3	FRONT FENDER BRAKE	K-2	SEAT BELT	G-1	FRONT WHEEL BEARING	C-1	WINDSHIELD	F-14
FRONT FENDER BRAKE	J-3	FRONT FENDER BRAKE	K-2	SEAT BELT	G-1	FRONT WHEEL BEARING	C-1	WIRING	F-16
FRONT FENDER BRAKE	J-3	FRONT FENDER BRAKE	K-2	SEAT BELT	G-1	FRONT WHEEL BEARING	C-1	WIRING PURPOSE	F-16

FIG. 69 (I-61) Scale: 100' D.P.L.

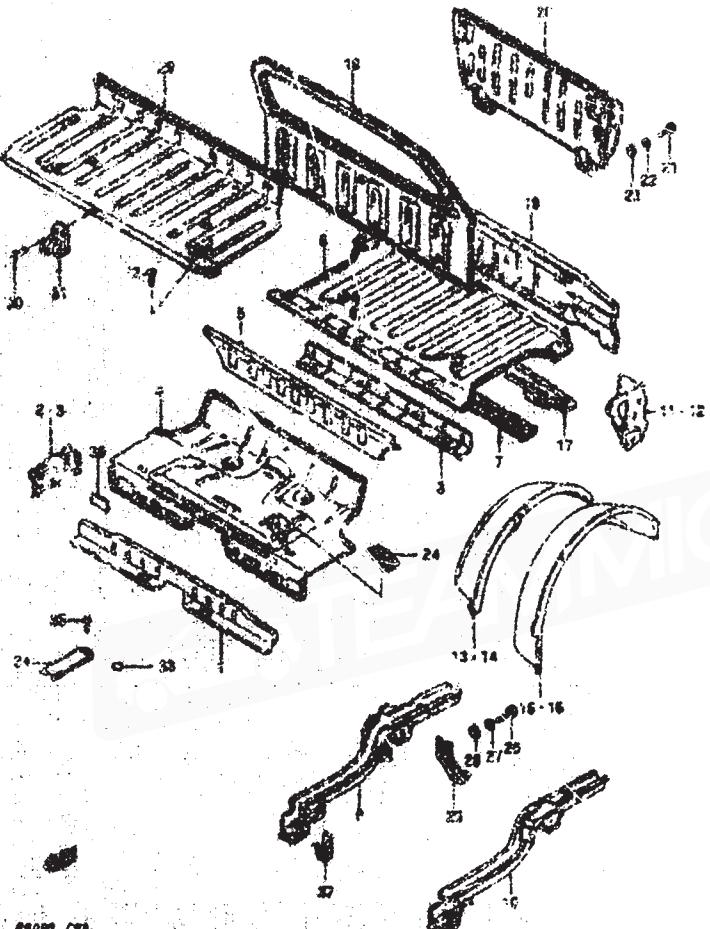

PC NO.	PART NO.	DESCRIPTION	REV/ED
1	63342-70010	CLUTCH MEMBER, INDEX PLATES PLATE	1
2	67-241-01000	LEAF SPR., REAR FRONT FORK	1
3	61542-01500	LOCKER, REAR FRONT DR.	1
4	67211-70430	PAD, FLOOR BOARD 115001	1
5	61321-01000	PANEL, REAR TRUNK PLATE	1
6	61321-01120	PANEL, REAR TRUNK	1
7	65211-70210	CLUTCH MEMBER, CLUTCH NO. 2	1
8	65143-70210	CLUTCH MEMBER, CLUTCH NO. 1	1
9	65310-70430	MEMBER, REAR FLOOR BOARD RH	1
10	65120-70310	MEMBER, REAR FLOOR BOARD LH	1
11	61330-01100	CLUTCH, REAR CLUTCH PLATE RH	1
12	61330-01110	CLUTCH, REAR CLUTCH PLATE LH	1
13	65111-70210	PANEL, REAR ROOF TRUNK RH	1
14	65111-70210	PANEL, REAR ROOF TRUNK LH	1
15	63721-01100	PANEL, REAR ROOF PLATE RH	1
16	63721-01110	PANEL, REAR ROOF PLATE LH	1
17	65770A-01101	THIN MEMBER, LOWER	1
18	65110-01100	PANEL, REAR DOOR	1
19	62710-01100	MEMBER, REAR UPPER	1
20	67702-01112	PANEL ASSY, REAR GATE	1
21	01127-00116	BOLT	1
22	08311-21086	LOCK WASHER	4
23	08321-21086	MACHET	4
24	65423-70030	L/H Fuel pipe assembly	1
25	63364-73201	BRACKET, FUEL TANK SUPPORT	1
26	01107-01206	BOLT	1
27	08321-21086	LOCK WASHER	1
28	09140-00010	WASHER (8.0x20x1.6)	1
29	70411-01110	PANEL, DISCHARGE FLoor	1
30	70412-01110	FRAMING, DISCHARGE FLoor	1
31	01264-01206	SCREW	2
32	00141-01106	SCREW	2
33	63401-70030	JUSt SEAL, passing BRAKE LINE	1
34	66411-70030	L/H, passing BRAKE LINE	1
35	09141-01006	SCREW	1
36	W312-70200	CLUTCH, REAR REAR RISER	2
37	63384-70210	CLUTCH, REAR REAR RH	1


- 63 -

FIG. 70

79  
1 2 3

FIG. 70 (1-7) SIDE BODY PANEL

8/77

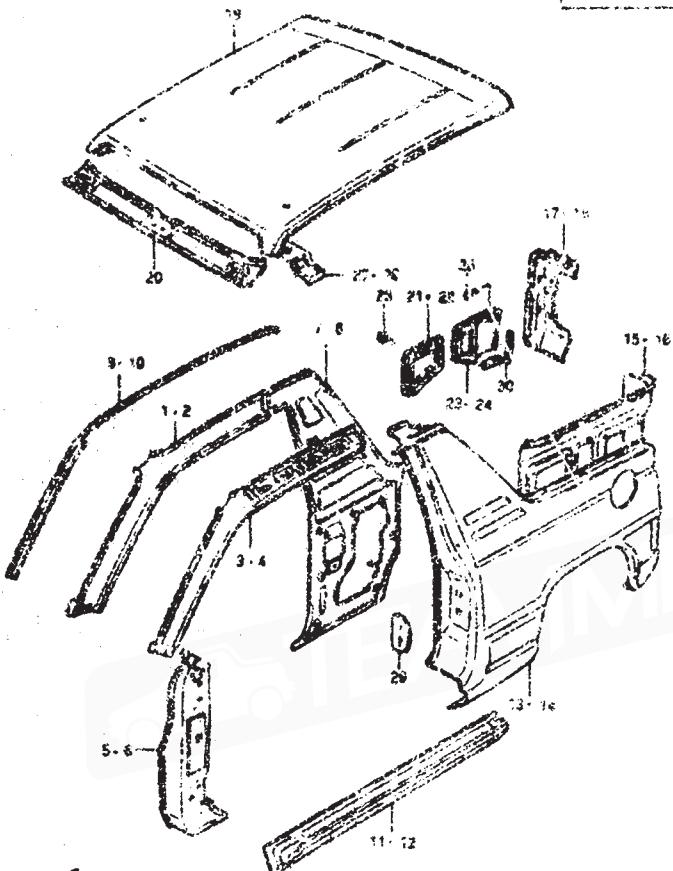

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	62111-01000	PILLAR, FRONT INNER UPPER LH	1
2	62111-01020	PILLAR, FRONT INNER LOWER LH	1
3	62111-01030	PILLAR, FRONT OUTER UPPER RH	2
4	62112-01000	PILLAR, FRONT OUTER LOWER LH	1
5	62112-01020	PILLAR, FRONT OUTER LOWER RH	1
6	62120-01000	PILLAR, FRONT OUTER LOWER RH	1
7	62120-01120	PANEL, WINDSHIELD MIRROR RH	1
8	62130-01130	PANEL, CENTER PILLAR FRONT RH	1
9	62171-01000	RAIL, ROOF DECK RH	1
10	62172-01000	RAIL, ROOF DECK LH	1
11	62181-01000	SIL, SIDE MIRROR FRONT RH	1
12	62181-01100	SIL, SIDE MIRROR FRONT LH	1
13	62190-01020	PANEL ASY, QUARTER OUTER RH	1
14	62190-01030	PANEL ASY, QUARTER OUTSIDE LH	1
15	62210-01130	PANEL, DOOR SIDE LOWER RH	1
16	62210-01130	PANEL, DOOR SIDE LOWER LH	1
17	62310-01130	PILLAR, REARSTAR END RH	1
18	62722-01000	PILLAR, CENTER END LH	1
19	63111-01110	PWRL, ROOF	1
20	65121-01000	PWRL, ROOF INNER FRONT	1
21	76431-01130	LHS, DOOR SIDE FRONT RH	1
22	76431-01130	LHS, DOOR SIDE FRONT LH	1
23	76432-01130	LHS, DOOR SIDE REAR RH	1
24	76432-01130	LHS, DOOR SIDE REAR LH	1
25	93242-05109	SCREW	16
26	93241-05105	SCREW	2
27	64113-01100	RFDC, DOOR PR SIDE RH	1
28	64511-01100	RFDC, DOOR PR SIDE LH	1
29	68190-70-00	REDF, PR DOOR ARMREST	2
30	70114-01110	TRIM, DOOR SIDE LOWER LH	1

SCANT 524

SCANT 525

BATTERY	7-6	FRONT BODY PANEL	1-1	FRONT SEAT	1-12	LOCK SET AND RADIO	F-13	REAR SUSPENSION	...-3	STEERING WHEEL	...-7
SPARE WHEEL CYLINDER	H-2	FRONT BUMPER	1-6	FRONT SUSPENSION	G-2	FORKING LIDANE	H-6	REAR WHEEL BRAKE	H-5	STRIP TAPE AND TWO PLATE	J-4
BRAKE PIPE	H-3	FRONT SIDE GLASS	J-8	FRONT WHEEL BRAKE	H-4	REAR WHEEL	H-10	REAR WHEEL	H-9	SWITCH	F-12
CAN HEATER	H-13	FRONT DOOR LOCK	J-15	FRONT WINDOW	J-16	REAR AXLE	H-14	REAR BRAKE	H-13	VENTILATOR	J-12
EXHAUST PIPE	J-2	FRONT FENDER	J-7	FUEL TANK	J-10	REAR BODY PANEL	I-8	SIDE BODY PANEL	J-1	WHEEL	J-19
DISTRIBUTOR	J-3	FRONT FENDER	J-8	INSTRUMENT PANEL	J-11	REAR GATE LOCK	J-15	SPERMETER	J-7	WHEEL	J-14
DOOR BELT	J-12	FRONT FENDER	J-9	INSTRUMENT PANEL	J-11	REAR GATE	J-16	SWINGING MOTOR	J-2	WHEEL HAMMER	J-10
FRONT AXLE	K-2	FRONT FENDER	J-10	INSTRUMENT TRIM	J-13	REAR LAMP	J-18	SWINGING LINK	J-3		

FIG.71

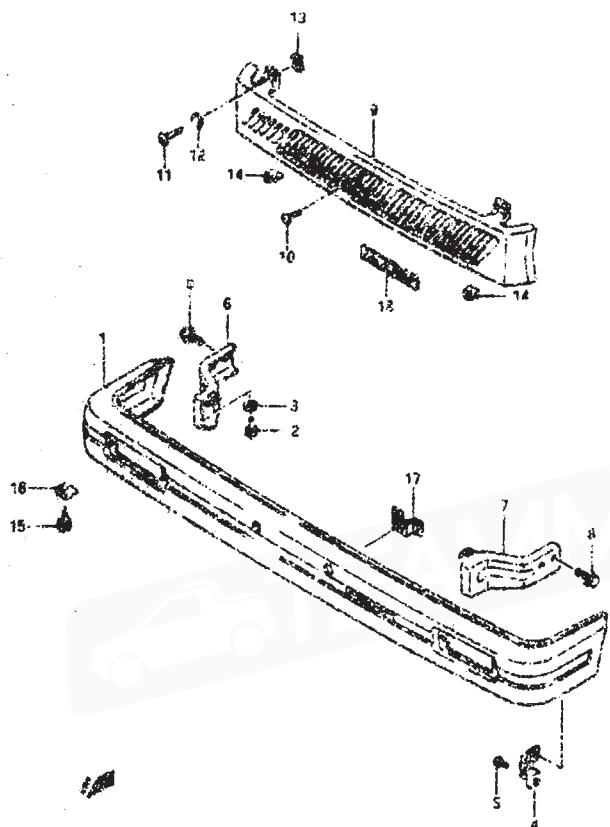


FIG.71 (1-8) FRONT BUMPER

REF.NO.	PART NO.	DESCRIPTION	NOTES
1	72711-3000X-200	FRONT BUMPER, front	1
2	72137-06286	PART	6
3	02024-20176	BARRIER	9
4	17211-81000	STAY, front bumper side	2
5	03241-04126	SCREW	4
6	72741-81020	STAY, front bumper RH	1
7	71751-81020	STAY, front bumper LH	1
8	01211-08126	SCREW	4
9-1	72111-81021-RT	GRILLE, radiator	1
9-2	72111-81021-RG	GRILLE, radiator	1
9-3	72111-81021-RK	GRILLE, radiator	1
9-4	72111-81021-750	GRILLE, radiator	1
9-5	72111-81021-RP	GRILLE, radiator	1
9-6	72111-81021-RV	GRILLE, radiator	1
9-7	72111-81021-RT	GRILLE, radiator	1
9-8	72111-81021-RY	GRILLE, radiator	1
9-9	72111-81002-750	GRILLE, radiator	1
9-10	72111-81021-RV	GRILLE, radiator	1
10	05241-02125	SCREW	1
11	05191-02035	SCREW	2
12	04141-05006	SCREW	2
13	09148-02000	NUT	1
14	07330-02014	GROMMET	2
15	09136-02037	SCREW	2
16	08143-02000	NUT	2
17	57315-73001	RETRIMMER, license plate	2
18	77021-81161	RADIATOR, radiator grille	1

S-77

S-80T 624

S-80T 624

BATTERY	F-6	FRONT FLOOR PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RADIO	F-13	HEAD SUSPENSION	J-13	CEILING MOUNT	J-14	G-
BRAKE MASTER CYLINDER	H-2	FRONT BUMPER	J-18	FRONT SUSPENSION	G-2	PARKING BRAKE	H-4	REAR WHEEL BRAKE	H-5	STRIPPE TAPE AND END FLAP	J-4	-
BRAKE PIPING	H-2	FRONT DOOR BEASS	J-4	FRONT WHEEL BRAKE	H-4	PEDAL	G-10	FLAT WHEEL AND TIRE	H-4	SHUTTON	J-12	-
CAR HEATER	J-13	FRONT DOOR LOCK	J-9	FRONT WINDSHIELD	J-1	REAR AXLE	G-11	WHEEL	J-12	VENTILATION	J-12	-
DECK RAIL PIPE	J-5	FRONT DOOR PANEL	J-2	FUEL TANK	J-10	REAR BODY PANEL	J-4	SIDE BODY PANEL	J-7	WINDSHIELD	J-15	-
DISTRIBUTOR	F-5	FRONT FENDER	J-3	GENERATOR	J-7	REAR BUMPER	J-4	SPARE TIRE	J-7	WIPER	J-13	-
FLOOR MAT	J-2	FRONT HEAD PANEL	J-3	INSTRUMENT PANEL	J-11	REAR FACTORY LOOK	J-10	STARTING MOTOR	J-2	WHEEL TIRES	J-13	-
FRONT AXLE	E-2	FRONT LAMP	J-4	INTERIOR TRIM	J-2	CAR LAMP	J-9	STEERING LAMP	J-2	-	-	-

6 - 57

F-12 FRONT REAR SUSPNS

QTY

ITEM NO.

PART NO.

DESCRIPTION

UNIT

1	71814-01000	CLIP, HORN, RADI	1
2	62137-05106	SWL	3
3	60160-06300	WASHER (6.30MM)	3
4	62137-02260	SCREW	2
5	60407-41500-200	SWL	2
6	62137-06120	SWL	2
7	62014-21005	SWL	2



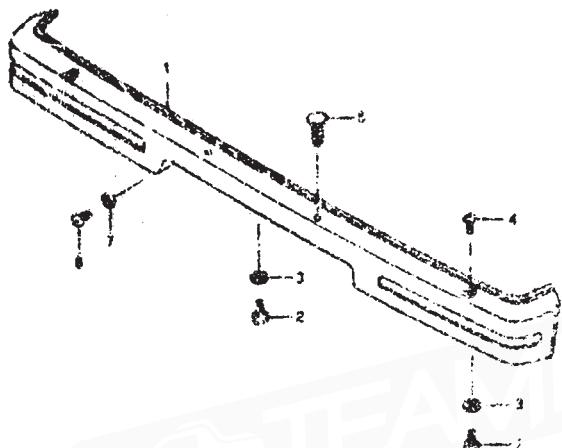


FIG. 73

BATTERY.....	F-5	FRONT BODY PANEL.....	I-2	FRONT SEAT.....	I-12	LOCK SET AND RATIO.....	F-13	REAR SUSPNSCH.....	I-10	STEERING WHEEL.....	G-7
SHOCK ABSORBER.....	H-2	FRONT BUMPER.....	I-1	FRONT SUSPNSCH.....	I-2	MARKING BRAKE.....	I-14	REAR WHEEL BRAKE.....	I-9	STOP TAPE AND MUD FLAP.....	J-4
SHOCK PIPING.....	H-3	FRONT DOOR GLASS.....	I-3	FRONT WHEEL BRAKE.....	I-4	PEDAL.....	I-15	REAR WHEEL AND TIRE.....	I-4	SWITCH.....	F-12
CAB HEATER.....	I-13	FRONT DOOR LOCK.....	I-8	FRONT WHEELS.....	I-5	SEAT BELT.....	I-13	VENTILATOR.....	I-12	SWITCH.....	F-12
DUCT KAIL PIPE.....	I-5	FRONT END PANEL.....	J-2	FRONT TIRE.....	I-1	SWINGOUT.....	I-7	WASHER.....	I-15	SWITCH.....	F-12
DISTRIBUTOR.....	F-3	FRONT FENDER.....	F-3	FRONT WHEEL.....	I-5	SWINGOUT.....	I-7	WIPER.....	I-14	SWITCH.....	F-12
FLLOOR MAT.....	I-2	FRONT WIND PANEL.....	I-3	INSTRUMENT PANEL.....	I-1	SWINGOUT.....	I-10	WHEEL MOTOR.....	F-2	WIPER WHEELS.....	F-10
FRONT DOOR.....	O-2	FRONT LAMP.....	I-6	INSTRUMENT TRIM.....	I-3	SWINGOUT LINK.....	I-8	WHEEL MOTOR.....	F-2	WIPER WHEELS.....	F-10

FIG. 23

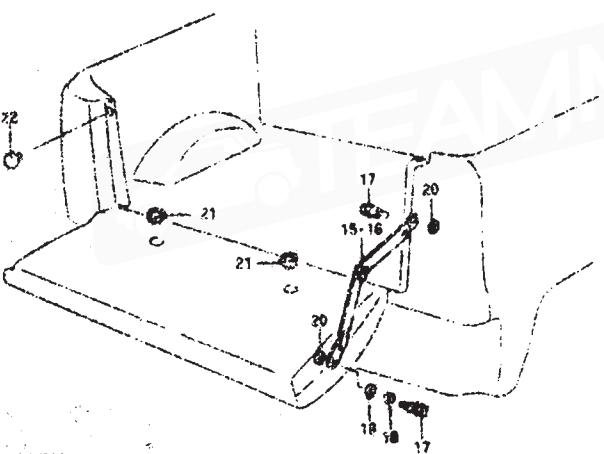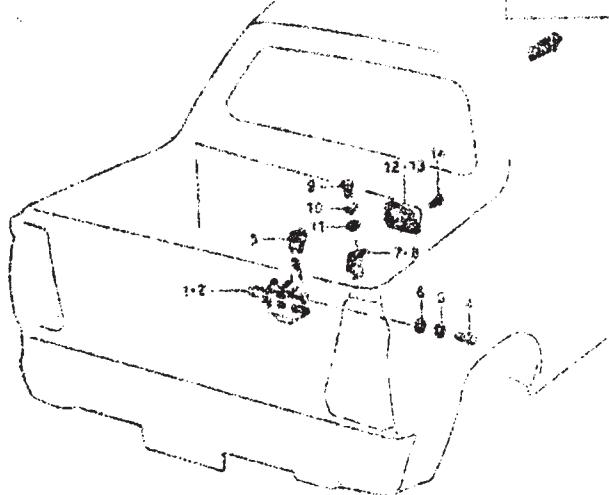

- 10 -


1967B (1-13) 24-3200 42

6 7

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	72610-83170	LOCK, REAR GATE RH	1
2	72630-83160	LOCK, REAR GATE LH	1
3	72655-83170	HANDLE, LOCK LEVER	2
4	01177-05126	BOLT	4
5	00026-21146	LOCK WASHER	4
6	00122-21064	WASHER	4
7	72624-83130	STRIKER, REAR GATE L/H/NM	2
8	72636-83170	STRIKER, REAR GATE L/H/NM	1
9	00120-04604	SCREW	4
10	00021-21064	LOCK WASHER	4
11	00124-21066	WASHER	4
12	72621-83130	LTD, REAR GATE HIGH NM	1
13	72630-83120	LTD, REAR GATE LOCK LH	1
14	00142-04610	SCREW	4
15	72630-83120	LTD, REAR GATE RH	1
16	72630-83100	LTD, REAR GATE LH	1
17	00135-06012	BOLT	4
18	00321-21066	LOCK WASHER	2
19	00322-21066	WASHER	2
20	00200-06057	WASHER (S.00200.6)	4
21	00200-20001	CAP, REAR GATE L/H/NM	2
22	00071-05110	SCREWS, GATE SHUT	2

卷八

BATTERY	F-2	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RADIO	F-3	WHEEL SUSPENSION	G-3	STEERING WHEEL	H-7
Brake Master Cylinder	H-3	FRONT BUMPER	J-1	FRONT SUSPENSION	G-2	PARKING BRAKE	H-4	WHEEL BRAKE	G-4	STRAP TAPE AND HUG FLAP	I-4
Brake Master Pump	N-3	FRONT DOOR GLASS	J-6	FRONT WHEEL ASSEMBLY	G-4	PEDALS	G-6	WHEEL AND TIRE	G-4	STRAP	F-12
CAB HEATER	I-13	FRONT DOOR LOCK	J-9	FRONT WINDOW	J-6	REAR AXLE	H-6	SEAT BELT	J-13	VENTILATION	I-12
DEICE TAUL PIPE	J-9	FRONT DOOR PANEL	J-1	FUEL TANK	J-10	REAR DOOR PANEL	I-7	SIDE BODY PANEL	J-7	WHEELS	F-13
DISTRIBUTOR	F-5	FRONT FENDER	I-2	GENERATOR	F-3	REAR DOOR BUMPER	I-7	SPRING	F-7	WIPER	F-4
CLUTCH MAST	I-2	FRONT HEAD PANEL	I-3	INTERMENT PANEL	I-11	REAR FRNT. DOOR	J-10	FRONT DOOR MOTOR	F-12	WIRING HARNESS	F-10
FRONT AXLE	A-5	FRONT LAMP	F-9	INTERIOR DASH	I-3	REAR LAMP	G-3	FRONT DOOR MOTOR	F-12	WIRING HARNESS	F-10

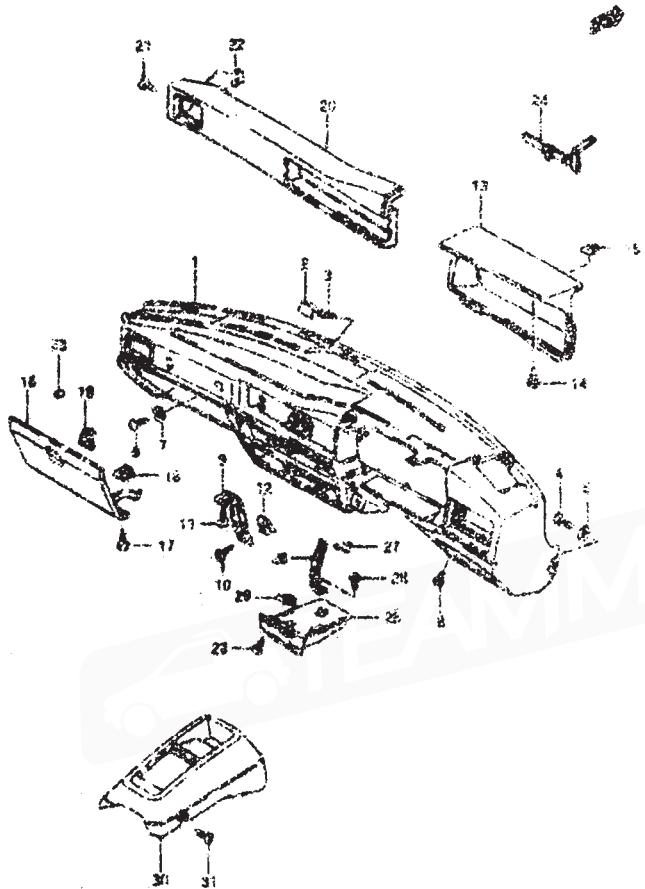


REF. NO.	PART NO.	DESCRIPTION	PAGES
1	73411-81000-100	HORN, AMMUNITION CASE	1
2	73112-81000-100	CAP, AMMUNITION CASE	3
3	08130-00012	SCREW	3
4	02167-00010	SOFT	2
5	73400-00021	WRENCH (A, B, C, D, E)	2
6	02111-00129	SCREW	1
7	08160-00021	WASHER (E, F, G, H, I)	3
8	02142-00027	SCREW	1
9	73421-81001	STAY, LOWERING DOOR	1
10	02141-00163	SCREW	1
11	73211-00163	SCREW	1
12	08140-00020	NUT	1
13	73311-81000-100	PANEL, REAR BODY	1
14	08140-00163	SCREW	4
15	08140-00025	NUT	6
16	73401-81000-100	L.D. GLASS ONE	1
17	08110-00017	SCREW	3
18	08140-00022	NUT	3
19	02134-71021	LOCK, 210	1
20	73310-81000-100	PAD, INSTRUMENT	1
21	08141-00123	SCREW	2
22	08140-00023	NUT	2
23	09120-00001	COUCHION	2
24	73120-81000	RETROFITMENT, WATER LOWER	1
25	09100-81001-100	ASPHALT, PADS	1
26	80101-81000	STAY, FRONT CENTER	1
27	02132-00017	SCREW	1
28	08142-00209	SCREW	3
29	08140-00013	NUT	2
30	52741-78200-100	SDX, console	1
31	03141-00105	SCREW	47
			3

BATTERY.....	F-6	FRONT BODY PANEL.....	I-2	FRONT SEAT.....	J-14	LOCK SET AND RADIO.....	F-17	REAR SUSPENSION.....	G-3	STEERING WHEEL.....	C-7
BRAKE master CYLINDER.....	H-2	FRONT BUMPER.....	I-6	FRONT SUSPENSION.....	J-2	PARKING BRAKE PEDAL.....	H-4	REAR WHEEL BRAKE.....	H-5	STRIKE TAPE AND BLU FLAP.....	A-4
Brake PIPING.....	H-3	FRONT DOOR GLASS.....	J-3	FRONT WHEEL BRAKE.....	H-4	REAR WHEEL AND TIRE.....	G-6	SWITCH.....	F-12		
CAR BATTERY.....	I-3	FRONT DOOR LOCK.....	I-9	FRONT WINDSHIELD.....	J-6	SEAT BELT.....	J-13	SWITCH.....	F-12		
DECK HAIL PIPE.....	I-5	FRONT DOOR PANEL.....	J-7	FUEL TANK.....	J-10	SIDE BODY PANEL.....	J-7	VENTILATOR.....	F-15		
DISTRIBUTOR.....	F-5	FRONT FENDER.....	I-5	GENERATOR.....	I-5	WIPER MOTOR.....	F-7	WIPER.....	F-14		
FENDER MET.....	J-2	FRONT WINDO PANEL.....	I-3	INSTRUMENT PANEL.....	G-1	QUANTITY MOTOR.....	F-2	WIRING HARNESS.....	F-10		
FRONT AXLE.....	G-5	FRONT LAMP.....	F-8	INTERIOR TRIM.....	J-5	STEERING LINK.....	G-8				

FIG. 73 (I-42) WPT MAPS

ב' תז

PN NO.	PART NO.	DESCRIPTION	REMARKS
1	63310-70000-251	VALVE, center ventilator	2
2	63221-81100	VALVE, center ventilator lower	2
3	03243-84129	SCREW	2
4	73681-81101	SUCTION, center ventilator	2
5	73620-81000-210	LEAF B, side ventilator	2
6	73623-81100	PELLET, ventilator upper	4
7	73626-21000	VELVET, ventilator f air	4
8	73664-81002	PIPE, side ventilator	2
9	73640-81000	SUCTION, side ventilator RH	1
10	73620-81000	SUCTION, side ventilator LH	1
11	03142-81429	SCREW	6
12	73624-81101-251	VENTILATOR, ventilator RH	2
13	73643-81000-251	VENTILATOR, ventilator LH	1
14	73661-81000	NOZZLE, connected RH	1
15	73670-81000	NOZZLE, 2nd port RH	1
16	03142-81109	SCREW	4
17	06642-70000	NOZZLE, deflector	2
18	73610-81000-251	PIPE, side ex control	1
19	73615-81000	PIPE	1
20	73616-81000	PIPE (27, L. 78)	1
21	74802-A-81000	LEVER ASSY, side nozzle control	1
22	03141-81124	SCREW	2
23	74311-81100	VALVE, water valve	1
24	03435-80000	UNIVERSITY	1
25	74531-81100	TABLE, freon side control	1
26	74521-81100	TABLE, oil control	1
27	03431-70000-251	VALVE, central intake	1

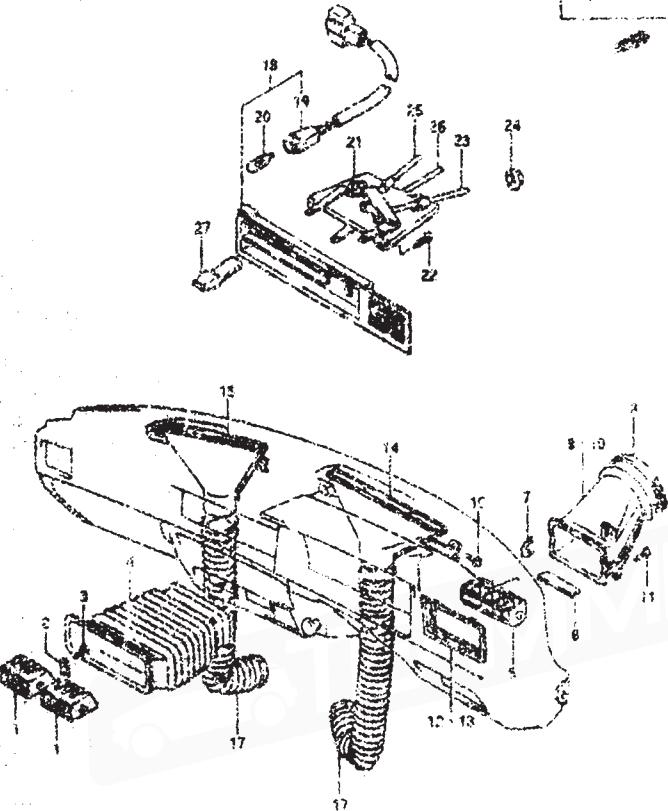


BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT BRAKE	J-12	LOCK SET AND PAD	G-13	RIGHT SUSPENSION	G-3	STEERING WHEEL	G-7
DRIVEMASTER CYLINDER	H-2	FRONT SUSPENSION	I-3	FRONT SUSPENSION	G-2	PARKING BRAKE	H-6	RIGHT WHEEL BRAKE	H-3	STRIKE TAPE AND WIND FLAP	J-4
DRUM PIPING	H-3	FRONT WHEEL	H-4	FRONT WHEEL BRAKE	H-4	PEDALS	C-15	WING WHEEL AND TIRE	G-4	SWITCH	F-12
CAR HEATER	I-13	FRONT WINDSHIELD	I-9	FRONT WINDSHIELD	I-9	REAR AXLE	C-16	SOFT BELT	J-13	VENTILATOR	I-12
DECK RAIL PIPE	I-13	FRONT DOOR PANEL	I-12	FUEL TANK	J-10	REAR BODY PANEL	I-16	SIDE BODY PANEL	I-7	WASHING	F-19
DJ BALMUTON	K-5	FRONT FENDER	I-5	OIL CIRCULATOR	F-3	REAR FENDER	I-14	ODIMETER	F-7	NIPER	F-14
FLAME PATH	J-2	FRONT FENDER	I-5	REAR TIRE	I-13	REAR SIDE BODY	L-10	STARTING MOTOR	F-2	ZIPPER HARNESS	F-10
FRONT AXLE	J-2	FRONT HEADLIGHT	I-5	REAR TIRE	I-13	REAR SIDE BODY	L-10	STEERING LINKS	G-8		
FRONT BRAKE	J-3	FRONT LAMP	F-8	RIGHT BRAKE	J-3	REAR LAMPS	E-8				

FIG. 56 (I-17) CAR HEATER


87

REF. NO.	PART NO.	DESCRIPTION	REMARKS
1	86-30-78000	CAR HEATER ASSY	1
2	86111-78000	CASE, heater RH	1
3	86112-78000	CASE, heater LH	1
4	86130-78000	UNIT	1
5	86140-78000	BLOWER ASSY	1
6	86193-78000	WASHER	1
7	86194-78000	WASHER	1
8	86195-78000	WASHER	1
9	86310-11063	NUT	1
10	86130-78001	MOTOR ASSY	1
11	86193-78002	PACKING, motor	1
12	03212-05169	SCREW	3
13	09160-09006	WASHER (5.3x18x1.6)	3
14	86170-78000	CASE, air cleaner	1
15	03211-05108	SCREW	3
16	86150-78001	REFLECTOR	1
17	03211-04128	SCREW	1
18	86119-78000	SPRING	7
19	01517-06808	BOLT	1
20	06314-14066	NUT	1
21	01107-06208	BOLT	2
22	09160-06012	WASHER (6.3x20x1.6)	2
23	09309-13004	GROMMET, water valve base	2
24	86200-78000	VALVE ASSY, water	1
25	86111-78002	CASE, water valve	1
26	C401-20402	O.R.P. water valve base	2
27	02242-06114	SCREW	4

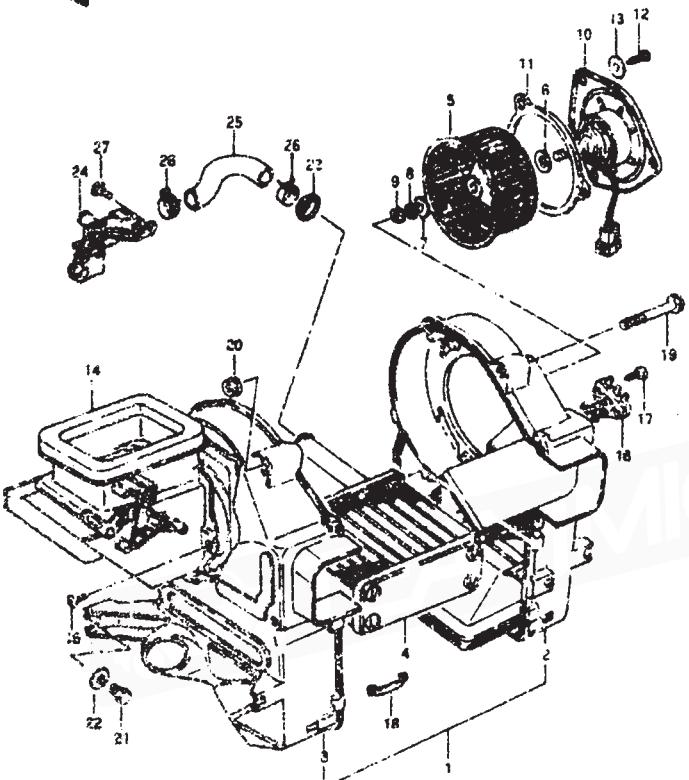

ASSALT 200


BATTERY	F-6	FRONT BODY PANEL	J-1-2	FRONT DENT	J-12	LOCK SET AND RADIO	F-13	REAR SUSPENSION	G-7	STEERING WHEEL	G-7
DRIVEMASTER CYLINDER	H-2	FRONT BUMPER	J-1	FRONT SUSPENSION	G-2	PARKING BRAKE	H-4	REAR WHEEL SHAFT	H-3	STRIKE TAPE AND HUG FLAP	J-4
BRAKE DIPPER	H-3	FRONT DOOR GLASS	J-1	FRONT WHEEL BRAKE	H-4	PEDAL	G-16	FRONT WHEEL AND TIRE	G-4	SUB. T.O.	F-12
CAR HEATER	I-13	FRONT DOOR LOCK	J-9	FRONT WINDSHIELD	J-6	REAR AXLE	H-6	SEAT BELT	J-13	VENTILATOR	I-12
COOL PAUL PIPE	J-9	FRONT DOOR PANEL	J-7	FRONT TANK	J-10	REAR BODY PANEL	J-6	SIDE DOOR PANEL	J-1	WASHER	F-15
DISTRIBUTOR	F-3	FRONT FENDER	J-3	GENERATOR	F-3	REAR BUMPER	J-4	SPEEDOMETER	F-7	WIPER	F-1
FLOOR MAT	J-12	FRONT HOOD PANEL	J-1-3	INSTRUMENT PANEL	J-11	REAR DOOR LOC.	J-10	STARTING MOTOR	F-2	WIRING HARNESS	F-10
FRONT AXLE	J-15	FRONT LAMP	F-8	FRONT SIDE TANK	J-3	REAR LAND	J-10	STEERING COLUMN	J-8		

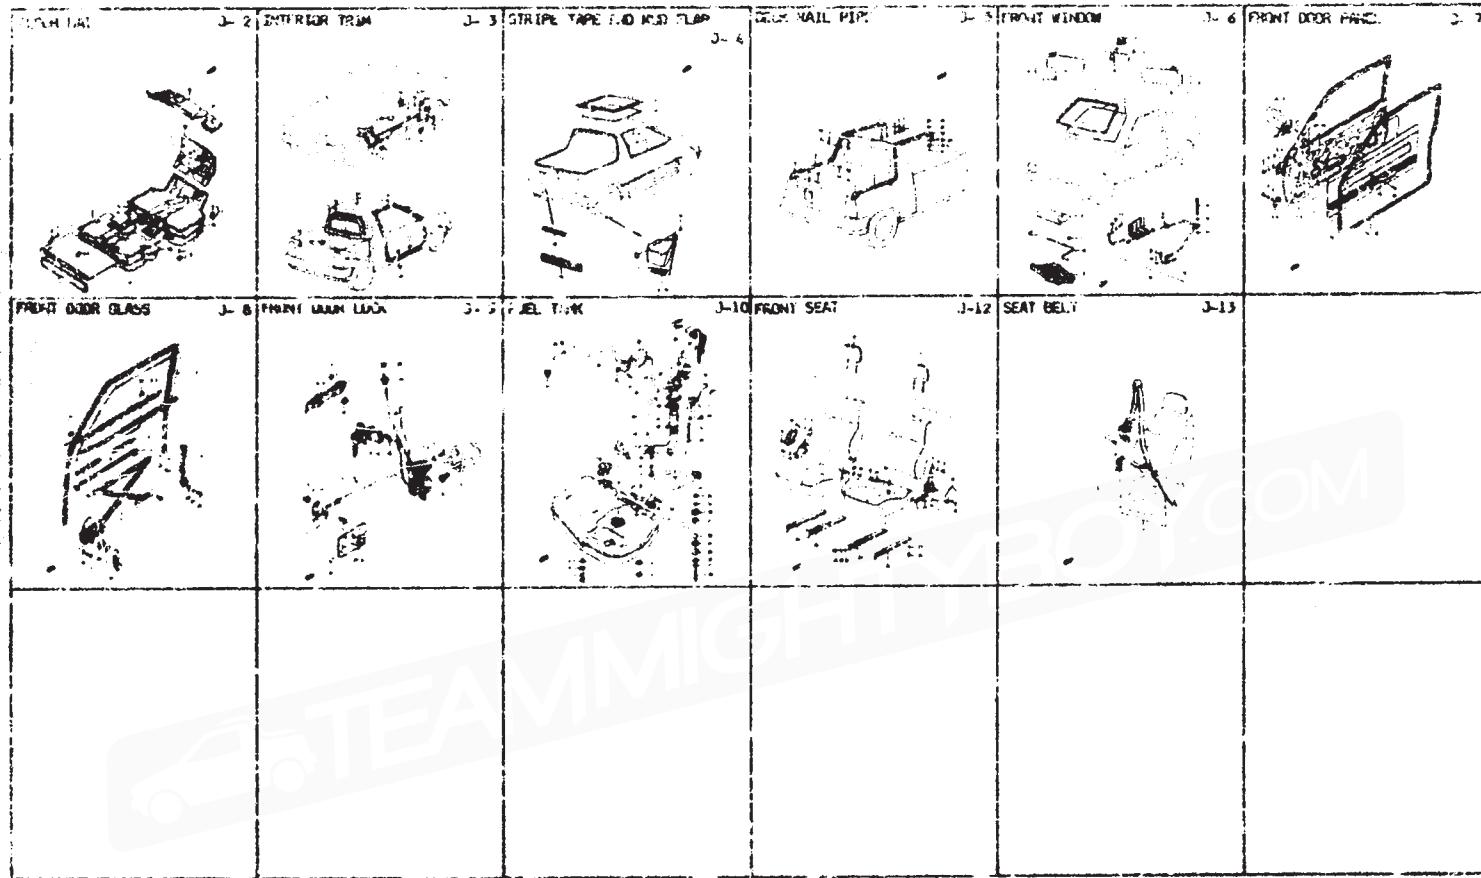

AIR CLEANER	J-2	RAIL SWIFTER	J-6	GEAR SHIFT CONTROL	J-9	OIL PUMP AND OIL PAN	(AT)	D-14	WATER HOSE-C-10
AT ASSY (AT)	D-5	CYLINDER BLOCK	B-6	GEAR SHIFT FORK (AT)	D-4	RADIATOR		C-3	WATER PUMP-C-7
AT GASKET SET (AT)	D-9	CYLINDER HEAD	B-3	INTAKE MANIFOLD	C-2	SELECTOR LEVER (AT)		E-5	
AT PARKING BRAKE (AT)	D-15	DIFFERENTIAL FEED	E-2	LABEL	C-13	TIMING BELT		B-10	
CAN SHAFT AND VALVE	D-9	EMISSION CONTROL	C-11	MUFFLER	C-4	TRANSMISSION (AT)		D-11	
CAN VIBRATOR	D-12	ENGINE GASKET SET	B-2	GAL HOSE (AT)	D-15	TRANSMISSION (MT)		D-3	
CLUTCH ASSY	D-2	FENDER MOUNT	C-3	OIL PAN	B-5	TRANSMISSION CASE (AT)		D-10	
CONTROL CABLE	D-3	FUEL PUMP	C-9	THE PUMP	C-6	TRANSMISSION CASE (MT)		D-9	

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12	LOCK SET AND RADIO	J-13	REAR SIDE CUSHION	J-3	STEERING WHEEL	J-7
Brake Master Cylinder	H-2	FRONT BODY PANEL	J-8	FRONT SUSPENSION	G-2	PARKING BRAKE	J-4	REAR WHEEL BRAKE	H-5	STRIPE TAPE AND HOOD FLAP	J-4
Brake Piping	H-3	FRONT BODY MASS	J-8	FRONT WHEEL BRAKE	H-4	TELE	J-10	RUNG WHEEL AND TIRE	G-3	STEERING LINK	J-12
CAB HEATER	I-13	FRONT DOOR LOCK	J-9	FRONT WINDSHIELD	J-5	FRONT AXLE	J-6	SEAT BELT	J-13	STEERING WHEEL	J-12
DRIVE AXLE PIPE	J-5	FRONT DOOR PANEL	J-7	FUEL TANK	J-10	REAR BODY PANEL	J-6	SIDE BODY PANEL	J-7	WASHER	J-10
DISTRIBUTOR	F-3	FRONT FENDER	J-1	GENERATOR	F-3	REAR SUMPER	J-9	SPRING	J-7	WIPER	F-16
FLOOR MAT	J-2	FRONT HOOD PANEL	I-3	INTERMENT PANEL	J-1	REAR GATE LOCK	J-7	SWING MOTOR	F-2	WIRING HARNESS	J-10
FRONT AXLE	G-3	FRONT LAMP	F-8	INTERIOR TRIM	J-3	REAR LAMP	F-9	STEERING LINK	G-8		

REF ID.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	66110-78001-029	CARPET, front floor	1	MT
1-2	66110-78002-029	CARPET, right floor	1	AT
2	75120-51110-009	CARPET, rear floor	1	
3	75151-51110-006	CARPET, luggage floor	1	
4	08400-00604	CLIP	4	
5	05111-00165	SCREW	2	
6	08100-02000	HAMMER (5.500kgf)	2	
7	75421-61110-261	THIN, luggage floor front/side	8	
8-1	08110-00067	MAIL, rear	14	MT
8-2	08110-00057	MAIL, front	13	AT
9	08110-00072	MAIL, tank	-	AT
10	75214-611002	SILENCER, dash panel	1	
11	08120-05011	SCREW	2	
12	75240-611001	SILENCER, dash upper RH	1	
13	75250-611000	SILENCER, dash upper LH	1	
14	99000-73371	SILICASER, front (470x900)	AR	
15	99000-73411	PRO (1000x150)	AR	
16	75291-61110	PPG, rear luggage floor	1	

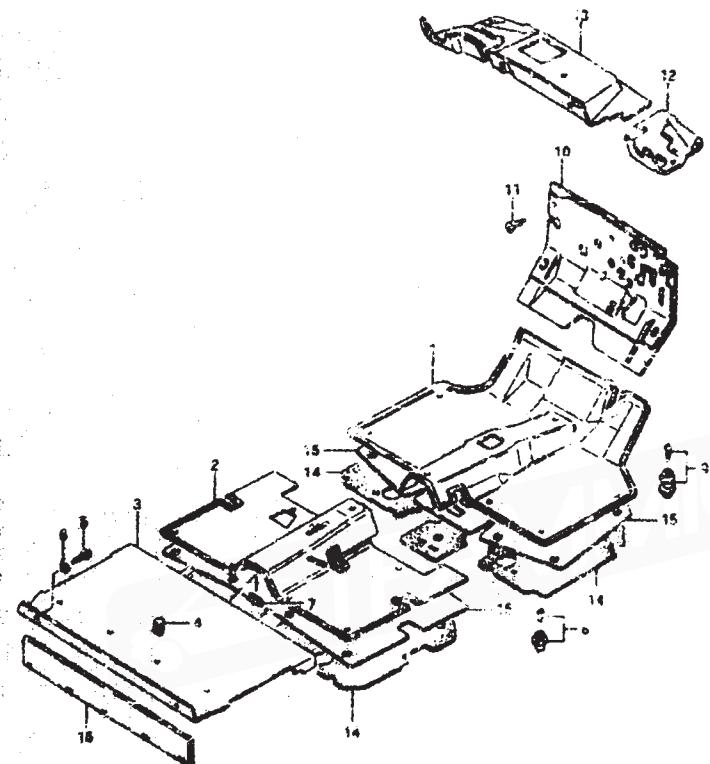

SS407 E24

RATCHET.....	F-6	FRONT BODY PANEL 1-2 FRONT SEAT.....	J-12	LOCK SET (NO RADIO) F-19	REAR SUSPENSION.....	G-3	STEERING WHEEL.....	G-7	
Brake Master Cylinder.....	H-2	FRONT BUMPER.....	J-8	PARKING BRAKE.....	H-6	REAR WHEEL BRAKE.....	H-9	STRIPPE TAPE AND MUD FLAP.....	J-4
Brake Pipe.....	H-3	FRONT DOOR GLASS.....	J-8	FRONT LEFT PLATE J-4	G-10	FRONT WHEEL AND TIRE.....	G-4	SWITCH.....	J-12
CAR HEATER.....	J-13	FRONT DOOR LOCK.....	J-9	FEARLY.....	G-10	FRONT WHEEL BRAKE.....	H-9	VENTILATS.....	J-12
DECK PAIR PIPE.....	J-5	FRONT FENDER.....	J-5	GEAR AXLE.....	G-3	HEAT BELT.....	J-15	WHEEL.....	J-15
DISTRIBUTOR.....	J-2	FRONT HEADLIGHT.....	J-6	REAR AXLE.....	G-3	SHOE BELT PLATE.....	J-7	WIPER.....	J-15
FLOOR MAT.....	J-2	FRONT WHEEL.....	J-5	REAR BRAKE PANEL.....	J-8	SPERMOMETER.....	J-7	WIRE.....	F-14
FRONT AXLE.....	G-5	FRONT WHEEL PANEL.....	J-3	INSTRUMENT PANEL.....	J-11	REAR BRAKE LOCK.....	J-10	WIRING HARNESS.....	F-10
FRONT LAMP.....	J-4	FRONT WINDSHIELD.....	J-3	NEUTRAL CAMP.....	J-9	STEERING MOTOR.....	J-2	STEERING LINK.....	G-8



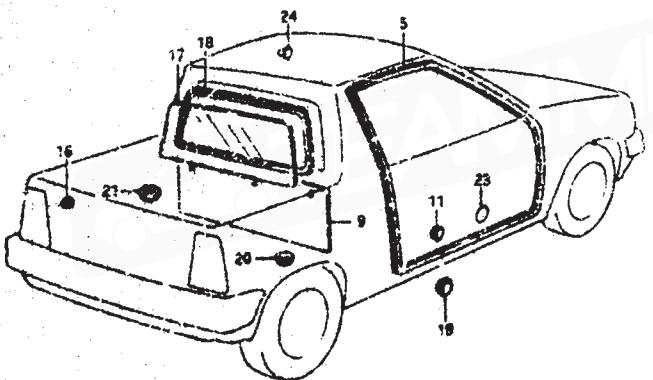


FIG. 7B (3) 3) ANTERIOR TRIM

9'14

REF.NO.	PART NO.	DESCRIPTION	REMARKS
1	76121-41Q12-081	TRIM, floor side RH	1
2	76121-41Q14-201	TRIM, floor side LH	1
3	76121-41Q11-201	TRIM, front side RS	1
4	76121-41Q11-201	TRIM, dash side LH	1
5	76221-41Q00-201	TRIM, front door opening	2
6	76220-41Q10-020	TRIM, center pillar RH	1
7	76220-41L13-020	TRIM, center pillar LH	1
8	09402-00003-201	CLIP	12
9	76220-01111-020	TRIM, car back inner	1
10	09409-06701-201	CLIP, dash side trim	2
11	06220-3A103	CAP, door switch hole	1
12	75051-01Q00	VALVE, air outlet	2
13	76411-01Q00	COVER, ventilation	2
14	76413-01Q00	VALVE, ventilation	2
15	09140-0X000	NUT	6
16	09230-07001	CAP, deck side inner	4
17	04371-01110	GLASS, car back window	1
18	04623-01100	SEAMISTERSTRIP, head: window	1
19	09790-1A000	PLUG, floor side	2
20	09790-2B013	CAP, floor drain	2
21	09350-3E000	CAP, floor drain	4
22	09220-40002	CAP, floor drain	4
23	69321-00000	TRIM, PR pillar outer lower	2
24	09220-20003	PLUG, anchor grip	2

BATTERY	1-6	FRONT BODY PANEL	1-2	FRONT SEAT	1-12	LOCK SET AND PAD	0-6	FRONT SUSPENSION	0-3	STEERING WHEEL	0-7
BREAKMASTER CYLINDER	H-2	FRONT DOOR BARRIER	J-16	FRONT SUSPENSION	I-13	TANKING BRAKE	H-6	REAR WHEEL BRAKE	H-5	STRIKE TAPE AND MUD FLAP	J-4
BRK. PUMP	H-3	FRONT DOOR GLASS	J-8	FRONT WHEEL BEARING	H-4	PEDAL	G-16	FRONT WHEEL AND TIRE	G-4	SWITCH	F-12
CHEM. HEATER	H-13	FRONT DOOR LOCK	J-9	FRONT WINDON	J-6	REAR AXLE	I-6	FRONT BELT	I-13	VOLT. MATOR	I-12
DOOR REL. PUMP	H-8	FRONT DOOR PANEL	J-1	FUEL TANK	J-10	REAR BODY PANEL	I-8	REAR BELT	I-7	WASHER	I-15
DUST EXTRACTOR	J-2	FRONT HORN	J-5	GENERATOR	J-3	REAR SUSPENSION	I-3	SPEEDOMETER	F-7	WIPER	H-14
FRONT BRAKE	H-2	FRONT CHASSIS PANEL	H-3	INSTRUMENTATION PANEL	I-11	REAR BRAKE LATCH	I-9	STEER. HO. MOTOR	F-2	WIRING HARNESS	H-10
FRONT DOOR	J-3	FRONT LIGHT	J-1	INSTRUMENTATION TRIM	J-3	REAR BRAKE	I-3	STEER. LINE	G-8		

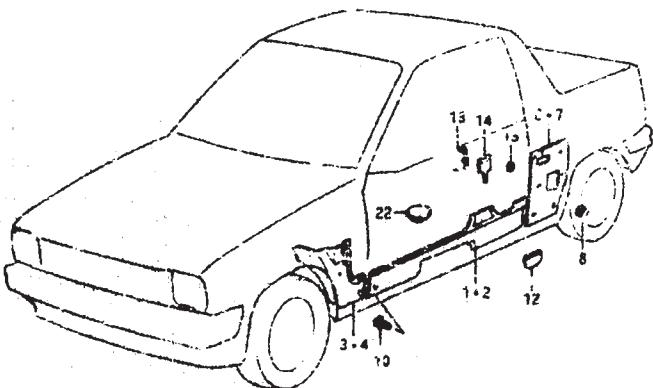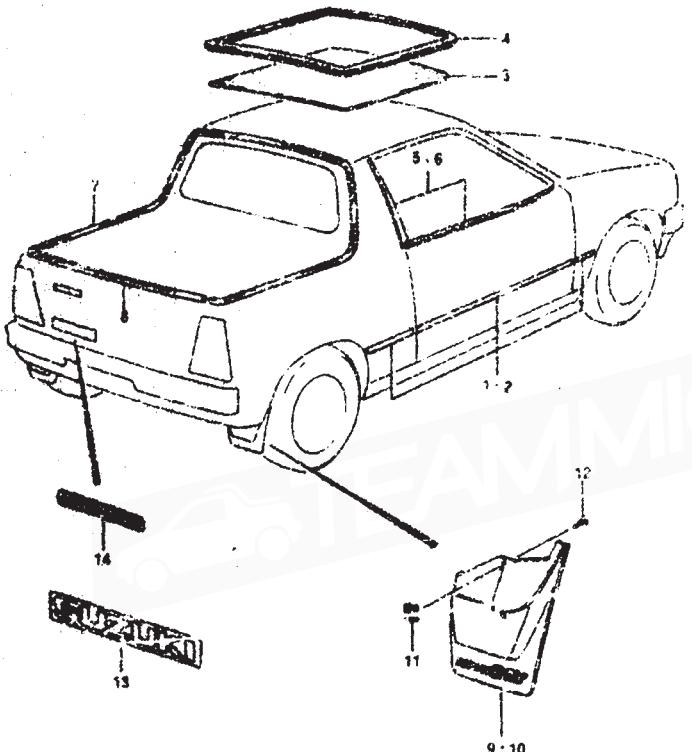

## FIG.79 (J-4) STRIPE TAPE AND MUD FLAP

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	77610-0BLACK-291	TAPE H-SY, SIDE RM	1	
1-2	77610-016010-148	TAPE ASSY, SIDE LH	1	
2-1	77620-016010-231	TAPE ASSY, SIDE RM	1	
2-2	77620-016000-148	TAPE ASSY, SIDE LH	1	
3	70111-01100-073	HEAD LINER, ROOF	1	
4	70112-01100-076	ROOF AWB	1	
5-1	77630-01110-64X	STRIPES TAPE, SIDE WINDOW RH	1	RUB WHITE/BLACK
5-2	77630-01110-75C	STRIPES TAPE, SIDE WINDOW LH	1	RUB WHITE/BLACK SILVER
6-1	77661-01110-60X	STRIPES TAPE, SIDE WINDOW LH	1	RUB WHITE/BLACK
6-2	77660-01110-75C	STRIPES TAPE, SIDE WINDOW LH	1	RUB WHITE/BLACK SILVER
7	70190-01101	MOLDING, DOOR SIDE	1	
8	70160-01110	MOLDING, DOOR GATE	1	
9	72210-01110	FLAP, REAR LH RH	1	
10	72220-01110	FLAP, REAR RH LH	1	
11	0P140-0-003	PAT	6	
12	40141-09163	SUREX	6	
13-1	77813-00111-230	EMBLEM, SUZUKI (Dark Gray)	1	
13-2	77813-00010-236	EMBLEM, SUZUKI (Dark Gray)	1	
14	77851-04003	EMBLEM, AUTOMATIC	2	AT


53407 E24

53407 E26

BATTERY	F-6	FRONT BODY PANEL	J-2	FRONT SEAT	J-12	LOCK SET AND RADIO	F-13	HORN SUSPENSION	J-14	STEERING WHEEL	J-7
BRAKE MASTER CYLINDER	H-2	FRONT BUMPER	J-6	FRONT SUSPENSION	G-2	PARKING BRAKE	H-6	FRONT WHEEL SPARE	H-5	STRIPES TAPE AND MUD FLAP	J-4
BRAKE PIPING	H-3	FRONT DOOR GLASS	J-8	FRONT WHEEL BRAKE	H-4	PEDAL	G-10	FRONT WHEEL AND TIRE	G-4	SWITCH	J-12
CAR WINTER	J-13	FRONT DOOR LOCK	J-9	FRONT WINDSHIELD	J-4	REAR AXLE	G-6	REAR WHEEL	J-13	VENTILATOR	J-12
CHASSIS RAIL PIPE	J-14	FRONT DOOR PANEL	J-7	FUEL TANK	J-10	REAR BODY PANEL	J-7	WHEEL	J-15	WHEEL	J-14
CLUTCHULATOR	J-2	FRONT FENDER	J-5	GENERATOR	J-9	SPEEDOMETER	J-7	WHEEL	J-16	WHEEL	J-15
FLUID OIL	J-3	FRONT FENDER	J-3	GENERATOR	J-3	REAR BUMPER	J-9	SWEEPING MOTOR	J-2	WHEEL	J-10
FRONT AXLE	H-5	FRONT FENDER	J-3	INSTRUMENT PANEL	J-17	REAR GATE LOCK	J-10	SWEEPING MOTOR	J-2	WHEEL	J-10
FRONT AMP	H-5	FRONT FENDER	J-8	INTERIOR TRIM	J-5	REAR LAMP	F-9	SWEEPING LISK	J-6	WHEEL	J-10

## FIG. 60 (J-2) REAR RAIL FRAME

877

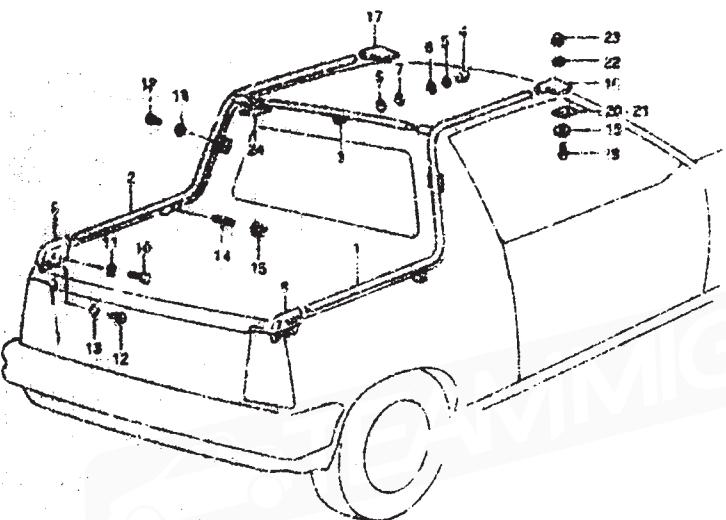

REF. NO.	PART NO.	DESCR. & MATERIAL	REMARKS
1	78610-61270	PIPE, DARK SIDE REAR RM	1
2	78610-61100	PIPE, DARK SIDE REAR LN	1
3	78610-61240	PIPE, DARK SIDE LOWER	1
4	08313-11056	NUT	1
5	08321-21066	LOCK WASHER	1
6	08322-21064	WASHER	2
7	08161-48001	WASHER	1
8	78611-61212	SUPPORT, DARK SIDE PIPE RH RM	2
9	78612-61210	SUPPORT, DARK SIDE PIPE RL LN	1
10	08129-08062	BOLT	2
11	08227-21065	WASHER	2
12	08179-08041	BOLT	6
13	08322-21064	WASHER	2
14	08140-08080	STL. BOLT	2
15	08205-61064	NUT	2
16	78611-61100	SUPPORT, DARK SIDE PIPE RM LN	1
17	78612-61102	SUPPORT, DARK SIDE PIPE RL LN	1
18	08112-08164	SCREW	2
19	08161-48014-BKG	WASHER	2
20	78635-61100	PACKING, DARK SIDE PIPE SUPPORT, RD	1
21	78634-61101	PACKING, DARK SIDE PIPE SUPPORT, LN	1
22	78633-61100	WASHER	2
23	08312-41063	NUT	2
24	78671-61102	FLRM, VAPR	2

SAFETY 62A

SAFETY E24

BATTERY	F-6	FRONT BODY PANEL	J-1	FRONT SEAT	J-12	LOCK SET AND PLATE	F-13	REAR SUSPENSION	J-3	STEERING WHEEL	J-7
BRAKE MASTER CYLINDER	J-2	FRONT BRAKES	J-6	FRONT SUSPENSION	J-2	PARKING BRAKE	J-8	REAR WHEEL BRAKE	J-5	STRIPES TYPE AND MUD FLAP	J-6
BRAKE PIPING	J-4-3	FRONT DOOR GLASS	J-8	FRONT WHEEL BRAKE	J-4	PEDAL	J-10	REAR WHEEL AND TIRE	J-6	SWITCH	J-12
CAB HEATER	J-13	FRONT DOOR LATCH	J-9	FRONT DOOR	J-6	REAR AXLE	J-11	VENTILATOR	J-13	VENTILATOR	J-17
DATA MUL. TYPE	J-4-9	FRONT DOOR PANEL	J-7	FUEL TANK	J-10	REAR BODY PANEL	J-8	TRUNK TRIM PANEL	J-7	WINDSHIELD	J-19
DRIVER'S SEAT	J-7	FRONT DOOR	J-5	INSTRUMENT	J-11	REAR DOOR	J-9	SPARE TIRE	J-7	WIPER	J-14
FLAME ARD.	J-2	FRONT HOOD PANEL	J-3	INSTRUMENT PANEL	J-11	REAR GATE LOCK	J-10	SWINGING MOTOR	J-2	WIRING KIT	J-10
PHONE JACK	J-3	FRONT LAMP	J-8	INSTRUMENT TRIM	J-3	HEAD LAMP	J-9	SWINGING LINK	J-8		

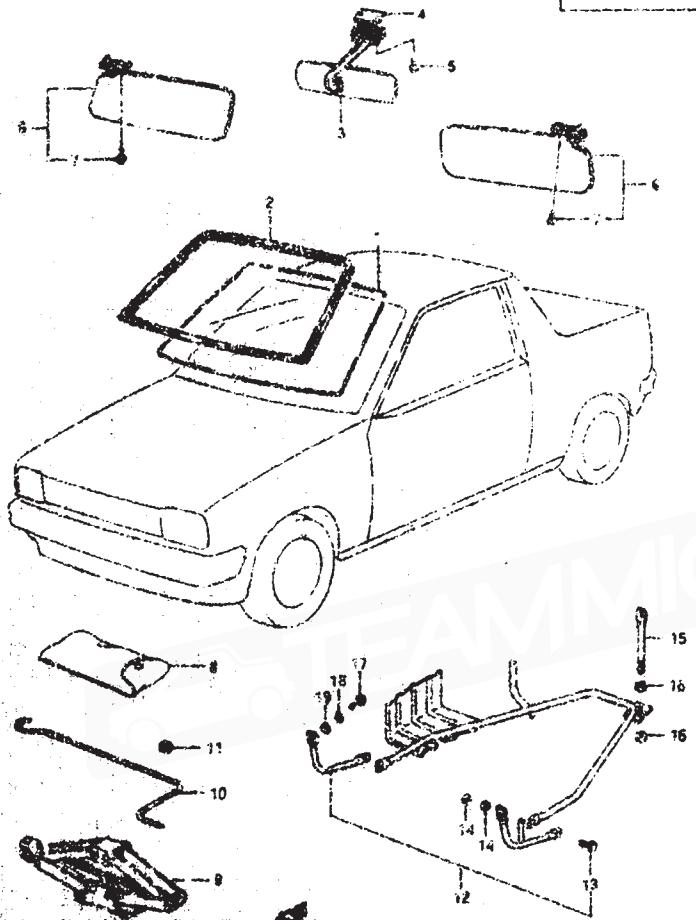


FIG. 61. — *Leptostomella* sp. nov.

REF ID	CART NO.	DESCRIPTION	REMARKS
1	14511-04120	GLOVE, window frame	1
2	04611-01000	WEATHERSTRIP	1
3	04700-01007	MIRROR ASSY, inside rear view	1
4	04611-09000	LOCKSM, master	1
5	02122-05006	SHEAR	2
6	04670-01570-099	SURVYOR ASSY	2
7	09127-01016	SCREW	4
8	08400-04800	FOOT ASSY	1
9	08804-00016	JACK ASSY	1
10	09346-00017	HANDLE, JACK	1
11	09113-14009	SPRINGER	1
12	71511-L01107	CARRIER, spare tire	1
13	01107-06206	BOLT	2
14	08310-12066	MUT	4
15	71521-01100	BOLT, spare tire carrier	1
16	03710-02106	NUT	2
17	01467-04156	BOLT	2
18	09321-21086	LOCK WASHER	2
19	08322-21036	WASHER	2

360IT E' M

BATTERY	F-6	FRONT BODY PANEL	I-1-2	FRONT SEAT	J-12	LOCK SET AND PADDED	F-13	DOOR SUSPENSION	G-3	STEERING WHEEL	G-7
BEAR. WALTER CYLINDER	H-2	FRONT BUMPER	J-1	FRONT SUSPENSION	G-2	PARKING BRAKE	H-4	REAR WHEEL BRAKE	H-5	STRIPE TAPE AND NOD FLAP	J-4
BRAKE PEDAL	H-3	FRONT BRAKE DRUMS	J-8	FRONT WHEEL BRAKE	H-6	PEDESTAL	G-10	ROAD CYCLE AND TIRE	G-3	SWITCH	J-12
CAL. HEATER	I-13	FRONT COWL DRAIN	J-9	FRONT WINDOW	J-6	REAR WHEEL	G-11	SEAT BELT	J-13	WITTLATOR	J-12
CLOTH TOP	I-14	FRONT DOOR PANEL	J-7	FRONT TANK	J-10	REAR BODY PANEL	I-14	SIDE BODY PANEL	I-7	WHEEL	F-19
DR. & P. METER	K-5	FRONT FENDER	J-3	GENERATOR	F-3	REAR BUMPER	I-9	SPEEDOMETER	F-2	WIPER	F-14
FLAT RATE	J-2	FRONT HEAD PANEL	J-4	INSTRUMENT PANEL	I-1	RIGHT SIDE DOOR	J-10	SHIRT MOTOR	F-2	WIRING HARNESS	F-16
FRONT AXLE	K-3	FRONT LAMP	K-6	INTERIOR TRIM	J-2	REAR LIGHT	F-9	STEERING LINK	G-8		


 


FIGURE 82-1, FRONT DOOR PANEL

8-17

REF. NO.	PART NO.	DESCRIPTION	REAR
1	48322-81121	SWING ASSY, FRONT DOOR RH	1
2	48602-81111	SWING ASSY, FRONT DOOR LH	2
3	18110-78020	HINGE, DOOR UPPER RH	2
4	16160-78030	HINGE, DOOR UPPER LH	1
5	78120-81200	HINGE, DOOR LOWER RH	3
6	78170-81100	HINGE, DOOR LOWER LH	1
7	09170-02167	SWL (1x2)	10
8	01107-08204	BOLT	6
9	08321-21084	LOCK WASHER	10
10	08321-21094	WASHER	16
11	65710-81091-420	TRIM, FRONT DOOR RH	1
12	65720-81091-421	TRIM, FRONT DOOR LH	1
13	09409-02167	CLIP	26
14	03411-01240	FILM, SIDE DOOR	2
15	26311-01300-201	ARMREST	2
16	10242-41273	SCREEN	4
17	08146-02077	NUT	4
18	08141-81100	MEATHERSTRIP, SPANNING RH	1
19	64642-81100	MEATHERSTRIP, SPANNING LH	1
20	94751-81080-281	MIRROR, DOOR RH	1
21	64702-81080-281	MIRROR, DOOR LH	1
22	02146-02135	SCREW	3
23	64732-81000-281	SPANNER, BREAKER RH	1
24	64757-81000-281	SPANNER, BREAKER LH	1

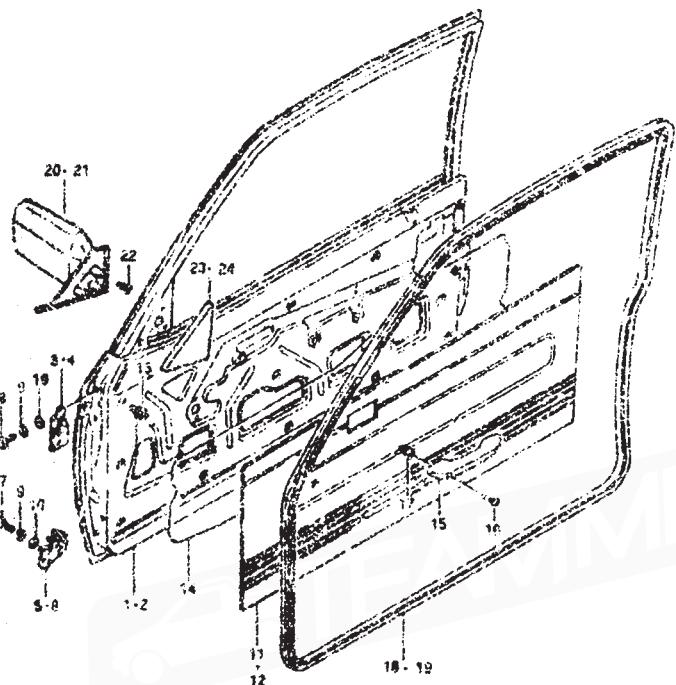


BATTERY.....	F-6	FRONT DOOR PANEL.....	I-1-2	FRONT SEAT.....	J-1-2	LUCK SET AND RADIO.....	F-13	SEAP SUSPENSION.....	G-3	STEERING WHEEL.....	H-7
DRIVE MASTER CYLINDER.....	H-2	FRONT DOOR GLASS.....	I-8	FRONT SUSPENSION.....	G-2	PARKING BRAKE.....	H-6	DEAR WHEEL BRAKE.....	H-5	STRIP TIRE AND MUD FLAP.....	J-4
DRIVE PIPING.....	I-1-3	FRONT DOOR LOCK.....	J-9	FRONT WHEEL BRAKE.....	H-4	PEDAL.....	I-10	DEAR WHEEL AND TIRE.....	G-4	BUFTON.....	I-12
AIR HEATER.....	I-1-3	FRONT DOOR PANEL.....	J-7	FRONT WINDOW.....	J-4	REAR AXLE.....	I-8	SEAT BELT.....	I-13	VOLVFLYER.....	I-12
ACCELERATE PIPE.....	J-5	FRONT DOOR PENDOR.....	J-5	FRONT TANK.....	J-10	REAR BODY PANEL.....	I-6	SEAT BODY PANEL.....	I-7	WHEELS.....	I-15
GENERATOR.....	F-5	FRONT WING PANEL.....	J-2	GENERATOR.....	J-3	SEAT BUMPER.....	I-4	SEATBELT.....	I-7	WINDSHIELD.....	I-14
FLOOR MAT.....	G-2	FRONT WING PANEL.....	J-2	INSTRUMENT PANEL.....	I-11	SEAT BUMPER.....	I-4	SEATBELT.....	I-7	WINDSHIELD WIPERS.....	I-10
FRONT AXLE.....	G-3	FRONT WING PANEL.....	J-2	INSTRUMENT PANEL.....	I-11	SEAT BUMPER.....	I-4	SEATBELT.....	I-7	WINDSHIELD WIPERS.....	I-10
		ADJUST LAMP.....	J-8	INSTRUMENT TRIM.....	J-5	SEAT LAMP.....	I-9	SEATING BOLTS.....	I-6		

FIG. 83

92

FIG. 83 (3-6) FRONT DOOR GLASS

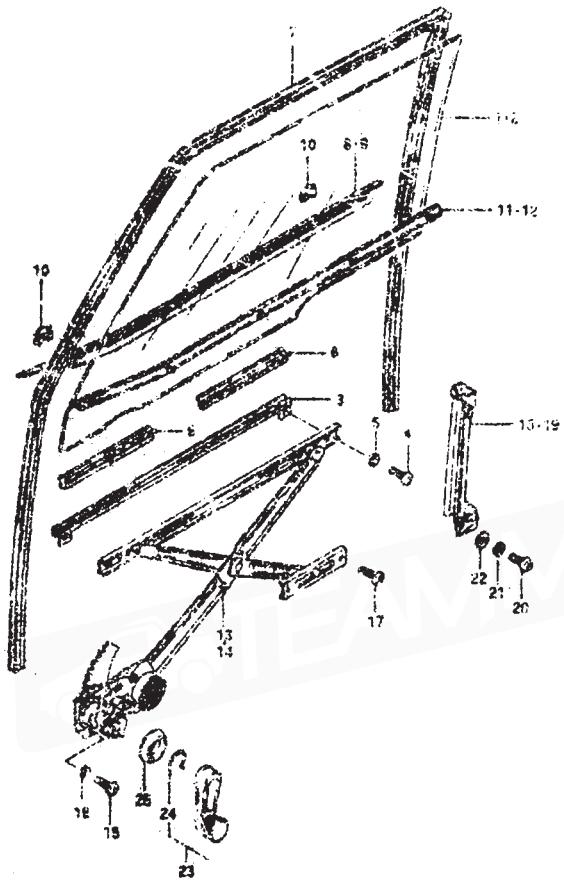

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	64333-81020	GLASS, window RH	1	
2	64333-81020	GLASS, window LH	1	
3	78321-81000	CHANNEL, door glass locator	2	
4	02127-21065	SCREW	4	
5	02321-21065	LOCK WASHER	4	
6	78411-78400	PLATE, glass outside channel	4	
7	81661-81010	RIM, door glass	2	
8	82611-81000	SQUARE, door outside RH	1	
9	83821-81020	SQUARE, door outside LH	1	
10	78981-78000	CLIP, square	14	
11	82610-81010	SQUARE, inside RH	1	
12	82610-81010	SQUARE, inside LH	1	
13	78321-78000	REGULATOR ASSY, door window RH	1	
14	78422-78000	REGULATOR ASSY, door window LH	1	
15	62117-00000	SCREW	8	
16	GB34-21052	LOCK WASHER	8	
17	02142-81100	SCRATCH	4	
18	A1750-81000	WASH, front door seal RH	1	
19	61740-81000	SEAL, front door seal LH	1	
20	02112-08120	SCREW	2	
21	02021-21065	LOCK WASHER	2	
22	02022-21065	WASHER	2	
23	78440-78002-281	HANDLE, window regulator	2	
24	78463-78000	SWIVEL	2	
25	78472-78000-281	EXCUTIOHN, regulator handle	2	

SHEET 22

BATTERY.....	F-6	FRONT BODY PANEL.....	I-2	FRONT SEAT.....	J-12	LOCK SET AND RADIO.....	F-13	FRONT SUSPENSION.....	G-3	STEERING WHEEL.....	G-7
SWINGMASTER CYLINDER.....	H-2	FRONT BUMPER.....	J-6	FRONT SUSPENSION.....	G-3	PARKING BRAKE.....	H-6	Rear wheel BRAKE.....	H-5	STRIP TAPE AND MU FLAP.....	J-4
SWINGMASTER PIPING.....	H-3	FRONT DOOR VALIS.....	J-3	FRONT WHEEL BRAKE.....	H-4	PEDESTRIAN.....	C-16	Rear wheel BRAKE.....	H-5	SWITCH.....	F-12
SWINGMASTER REAR.....	H-4	FRONT DOOR GLASS.....	J-4	REAR AXLE.....	G-6	SOFT WHEEL AND TIRE.....	H-5	SWITCH.....	F-12	SWINGMASTER.....	J-18
SWINGMASTER PIPS.....	J-5	FRONT DOOR LOCK.....	J-9	FRONT MUDFLON.....	J-6	SEAT BELT.....	G-6	SWINGMASTER.....	J-15	SWINGMASTER.....	J-15
SWINGMASTER SWING.....	J-6	FRONT DOOR PANEL.....	J-7	PEEL TAPE.....	J-10	SIDE BODY PANEL.....	J-7	SWINGMASTER.....	J-17	WASHER.....	F-15
SWINGMASTER SWING.....	J-7	FRONT DOOR SWING.....	J-8	REAR BODY PANEL.....	J-9	SWINGMASTER.....	J-7	SWINGMASTER.....	J-18	WHEEL HAMMERS.....	F-14
SWINGMASTER SWING.....	J-8	FRONT HYDRO PLATE.....	J-5	REAR JUMPER.....	J-10	SWINGMASTER.....	J-8	SWINGMASTER.....	J-19	WHEEL HAMMERS.....	F-10
SWINGMASTER SWING.....	J-9	FRONT HYDRO PLATE.....	J-5	REAR GATE LOCK.....	J-11	SWINGMASTER.....	J-9	SWINGMASTER.....	J-20	WHEEL HAMMERS.....	F-10
SWINGMASTER SWING.....	J-10	FRONT HYDRO PLATE.....	J-5	REAR LAMP.....	J-12	SWINGMASTER.....	J-10	SWINGMASTER.....	J-21	WHEEL HAMMERS.....	F-10

SHEET 224

FIG. 84




93

FIG. 84 (1-9) FRONT DOOR LOCK

CITY

REMARKS

REF. NO.	PART NO.	DESCRIPTION	CITY
1	82201-81030	LOCK ASSY, front door RH	1
2	82201-81040	LOCK ASSY, front door LH	1
3	0213-06106	SCREW	6
4	0832-31066	LOCK WASHER	6
5	78110-78030	SPACER, door lock	2
6	09137-07004	SCREW	4
7	78198-76200	SPACER	0-4
8	82010-82102	HANDLE, outside RH	1
9	82020-82102	HANDLE, outside LH	1
10	08314-26046	NUT	4
11	82091-80100	SHAF, joint	2
12	63110-62091-281	HANDLE, door inside RH	1
13	63130-62090-281	HANDLE, door inside LH	1
14	01241-06126	SCREW	4
15	52145-04007	NUT	4
16	73561-75000	HO	2
17	71462-70821	CYLINDER ASSY, lock RH	1
18	71460-70831	CYLINDER ASSY, lock LH	1
19	09219-03016	PIN	2
20	78471-79000-281	CASE, inside handle RH	1
21	78481-79000-281	CASE, inside handle LH	1
22	03141-04263	SCREW	2
23	76241-10062	KNOB	2
24	82091-84000	DRP, inside left knob	2

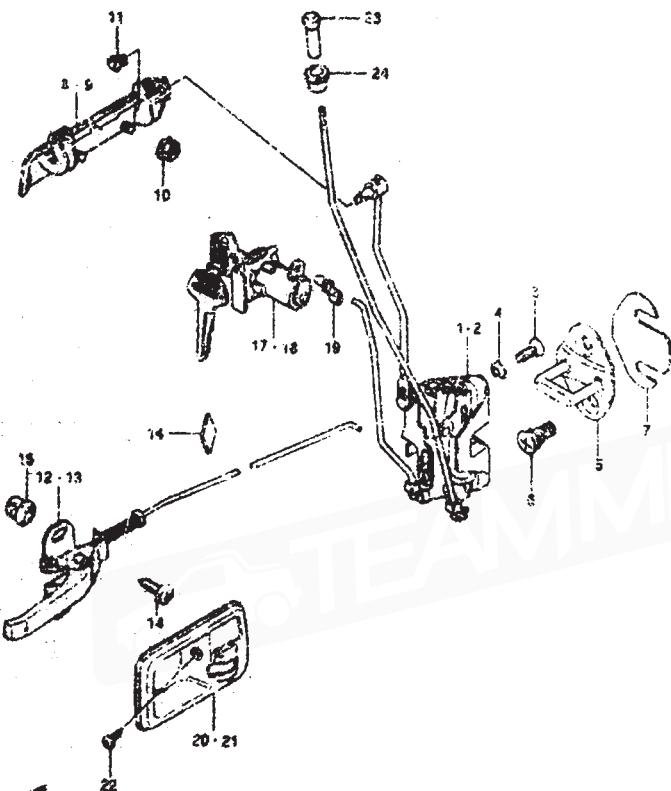

58407 E24

58407 E24

FRONT TIRE	J-6	FRONT BODY PANEL	J-1-2	FRONT SLAT	J-1-2	LOCK SET AND RADIO	J-13	REAR SUSPENSION	J-3	STEERING WHEEL	J-7
DRIVE MASTER CYLINDER	J-2	FRONT BUMPER	J-3	FRONT SUSPENSION	J-8	PARKING BRAKE	J-8	REAR WHEEL BRAKE	J-5	STRIPS TAPE AND TWO FLAP	J-4
SPACE PIPING	J-3	FRONT DOOR GLASS	J-8	FRONT WHEEL BRAKE	J-4	PEDAL	J-10	REAR WHEEL AND TIRE	J-4	SWITCH	J-12
CAB HEATER	J-13	FRONT DOOR LOCK	J-9	FRONT WINDSH	J-6	REAR AXLE	J-8	SEAT BELT	J-13	VENTILATOR	J-17
WINDSHIELD WIPER PIPE	J-3	FRONT DOOR PANEL	J-7	WATER TANK	J-10	FRONT BODY PANEL	J-1	SIDE BODY PANEL	J-7	WIPER	J-15
WINDSHIELD WIPER	J-2	FRONT FENDER	J-5	GENERATOR	J-3	REAR BUMPER	J-9	SPEEDOMETER	J-7	WIPER HARNESS	J-14
FRONT DOOR	J-2	FRONT FENDER	J-5	INSTRUMENT PANEL	J-11	REAR GATE LOCK	J-10	STARTING MOTOR	J-2	WIRING HARNESS	J-10
						FRONT LAMP	J-8	STEERING LINK	J-8		

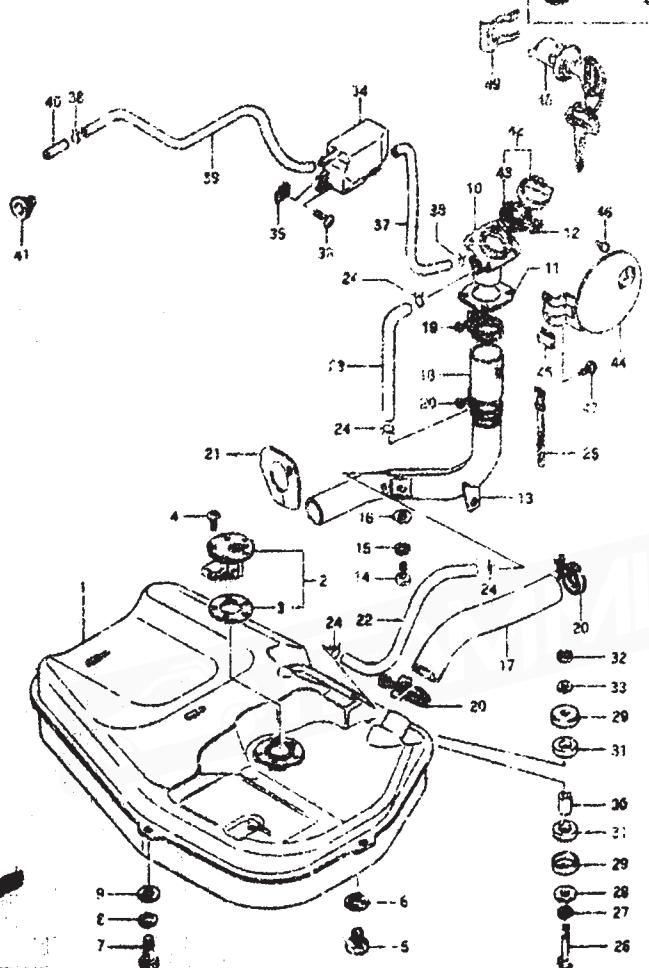


FIG. 83 - J-10. FUEL TANK

8/74

REF. NO.	PART NO.	DESCRIPTION	QUANTITY
1	09-121-48201	TANK ASSY., FUEL	1
2	14816-03021	SEAL ASSY., FUEL TANK	1
3	14825-57000	GASKET	1
4	01112-01000	SCREW	5
5	09257-12100	PLUG	1
6	09466-02000	GREASE (120g/200g.)	3
7	01107-08200	BOLT	3
8	08321-21000	LOCK WASHER	3
9	09163-08000	WASHER (8.2x20x1.6)	3
10	09210-01100	NECK, FUEL TANK FILLER	1
11	09203-31090	PACKIN, FUEL TANK INLET	1
12	09125-05000	SCREW	2
13	09230-31140	PIPE, FUEL TANK INLET	1
14	01107-04100	BOLT	2
15	09121-21040	LOCK WASHER	3
16	09160-04020	WASHER (6.5x20x1.5)	3
17	09240-01100	PIPE, JOINT ADAP	1
18	09242-01100	HOSE, FUEL FILLER UPSET	1
19	10403-58001	CLAMP, HOSE UPPER	1
20	10400-52301	CLAMP	3
21	09201-01100	GUST SEAL, INLET PIPE	1
22	09345-12101	HOSE	1
23	09345-21015	NOSE	1
24	09401-15301	CLIP	4
25	09407-22403	CLAMP	1
26	01107-08400	BOLT	1
27	01121-21000	LOCK WASHER	1
28	09140-09007	WASHER	3
29	09164-08024	WASHER	2
30	09180-08003	SPACER	1
31	09320-12023	CUSHION	2
32	08310-12006	NUT	1
33	04321-21000	LOCK WASHER	1


L:450-H25  
L:450-H20

SS407 E24

SS407 E24

BATTERY.....	F-6	FRONT BODY PANEL.....	I-2	FRONT SEAT.....	J-12	LOCK SET AND RADIO.....	J-15	REAR SUSPENSION.....	G-3	STEERING WHEEL.....	O-7
BRAKE MASTER CYLINDER.....	H-2	FRONT BUMPER.....	J-18	FRONT SUSPENSION.....	G-2	PARKING BRAKE.....	H-14	Rear wheel BRAKE.....	J-5	STRIPE TAPE AND TWO FLAP.....	J-4
BRAKE PUMP.....	H-3	FRONT DOOR GLASS.....	J-8	FRONT WHEEL BRAKE.....	H-4	PEDAL.....	G-16	REAR WHEEL AND TIRE.....	O-4	SWITCH.....	F-12
COWL HEATER.....	J-13	RIGHT DOOR LOCK.....	J-9	FRONT WINDON.....	J-6	REAR AXLE.....	G-6	SEAT BELT.....	J-13	VENTILATOR.....	J-12
DRAIN KNOT PIPE.....	J-14	RIGHT DOOR PANEL.....	J-7	FUEL TANK.....	J-10	REAR BODY PANEL.....	I-6	SEAT BODY PANEL.....	J-7	WIPER.....	J-15
DISTRIBUTOR.....	J-8	FRONT FENDER.....	J-5	GENERATOR.....	F-3	REAR BUMPER.....	G-7	METEROMETER.....	F-7	WIPER.....	J-14
DOOR WAS.....	J-2	FRONT HOOD PANEL.....	I-3	INSTRUMENT PANEL.....	I-11	REAR GATE LATCH.....	I-10	SWITCHING MOTOR.....	J-2	WIPER HARNESS.....	F-10
DRIVER SEAT.....	J-4	FRONT LAMP.....	F-8	INTERIOR TRIM.....	I-3	REAR LAMP.....	F-9	STEERING LINK.....	O-8		

FIG. 5A

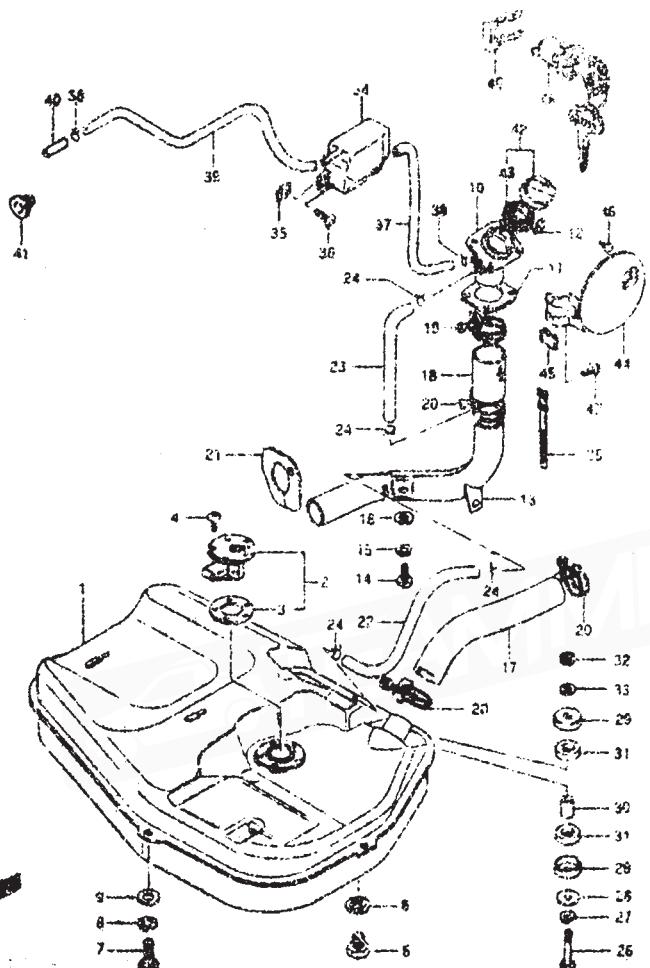

Volume 28 Number 2X 1997

三

REF ID	PART NO.	DESCRIPTION	REMARKS
51	991-0-625160	VALVE, REGULATOR	1
52	08146-024386	NUT	2
53	03124-05168	SCREW	3
57	30743-07046	HOSE	1
58	39400-13402	CLIP	2
59	10344-07016	HOSE, AIR DRYER (RHS)	2
60	03427-70040	PIPE, AIR CUMBER TRACT JOINT	1
61	03428-70021	CUSHION	2
62	09150-82100	CAP ASSY, FUEL TANK FILTER	1
63	09154-82700	CASSETTE	1
64	61160-81001	PANEL, FUEL INLET HLD	1
65	09129-02001	CUSHION	1
66	10321-03000	DUSHION	1
67	01142-03107	SCREW	2
68	08500-54030	CYLINDER ASSY, LID JACK	1
72	77661-74020	CLIP	1

SSM E24


FIG. 53

J. 12

植物细胞壁解剖学

8 34

ITEM NO.	REF ID.	DESCRIPTION	REMARKS
1	95101-81000-714	DISHION ASSY, Front RH	1
2	95102-81000-714	DISHION ASSY, Front LH	1
3	95102-81000-714	DISHION ASSY, Front LH	1
4	85240-51300	RECLINING ASSY, RH	1
5	85247-00164	BOLT	2
6	85321-21000	LOCK WASHER	2
7	85322-01000-714	BACK ASSY, Front LH	1
8	85712-01000	RECLINING ASSY, LH	1
9	85717-00164	BOLT	2
10	85721-21000	LOCK WASHER	2
11	85211-61000-264	KNOB, zero rating	2
12	85221-04000-264	COVER, reclining RH	1
13	85721-04000-264	COVER, reclining LH	1
14	85107-00164	BOLT	4
15	85321-21000	LOCK WASHER	4
16	W3241-00125	SCREW	2
17	W3241-00108	SCREW	2
18	95401-81110-42F	HEADRESTRAINT ASSY	2
19	02144-00129	SCREW	2
20	02140-00209	SPRING (3.5180.6)	2
21	45312-82100	USH, tank fixing	2
22	86610-81000	ADJUSTER, interior	1
23	86610-81000	ADJUSTER, outside	1
24	86610-21000	ADJUSTER, interior	1
25	86610-21000	ADJUSTER, outside	1
26	01107-00164	BOLT	8
27	85321-21000	LOCK WASHER	8
28	85107-00164	BOLT	8
29	85321-21000	LOCK WASHER	8
30	10321-11000	WASHER	8

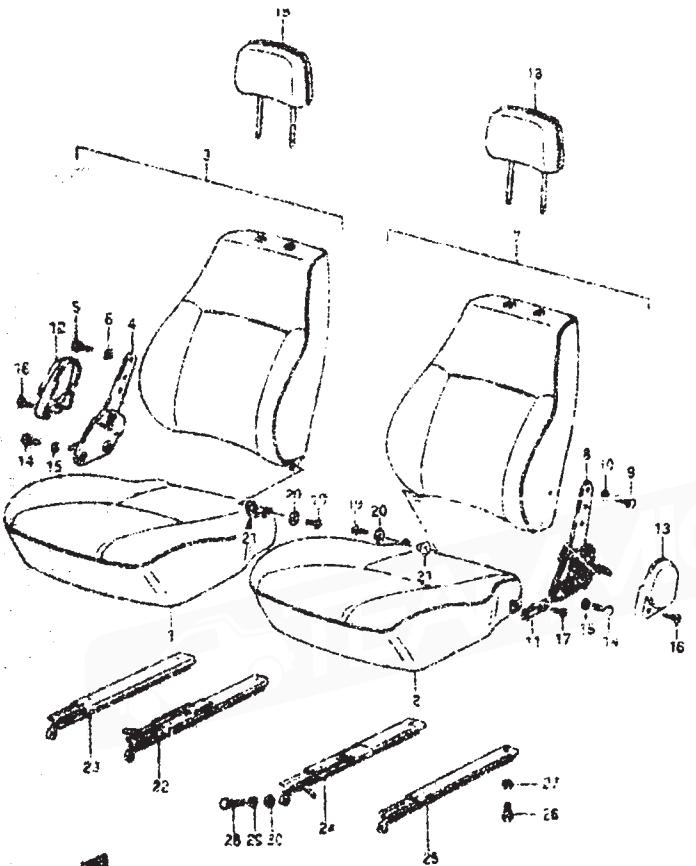

SC407 E24

BATTERY	F-6	FRONT BODY PANEL	I-2	FRONT SEAT	J-12
Brake Master Cylinder	H-2	FRONT DOOR GLASS	J-1	FRONT SUSPENSION	G-2
Brake Piping	H-3	FRONT DOOR LOCK	J-9	FRONT WHEEL BRAKE	G-5
CAR HEATER	I-13	FRONT DOOR PANEL	J-7	FRONT WINDOW	G-5
DECK BULL PIPE	J-5	FRONT FENDER	J-3	FUEL TANK	J-10
DISTRIBUTOR	F-5	FRONT HOOD	J-3	GENERATOR	F-3
FLOOR MAT	J-2	FRONT I/O PANEL	I-3	INSTRUMENT PANEL	J-11
FRONT AXLE	G-2	FRONT LAMP	F-1	INTERIOR TRIM	J-12

LOCK SET AND RADIO	F-13	REAR SLOPE	S-10	-	U-3	STEERING WHEEL	G-7
PARKING BRAKE	H-6	REAR AXLE BRAKE	H-5	-		STRIPED TAPE AND NUD	J-4
PEDAL	G-10	ROAD WHEEL AND TIRE	G-4	-		SWITCH	F-12
REAR AXLE	G-9	ROAD PELT	J-13	-		VENTILATOR	J-2
REAR BODY PANEL	I-6	RIDE JUDY PANEL	I-7	-		WASHER	F-15
REAR BUMPER	H-2	SQUEEZER	F-7	-		WEAR	F-14
REAR DATE CLOCK	I-10	SCRATCHING NOTCH	F-2	-		WIRING HARNESS	F-10
REAR LAMP	F-9	STEERING LINK	U-3	-			

ITEM NO.	PART NO.	DESCRIPTION	REMARKS
1	04XQ-01010-100	SEAT ASSY	2
2	03143-06180	SEAT	4

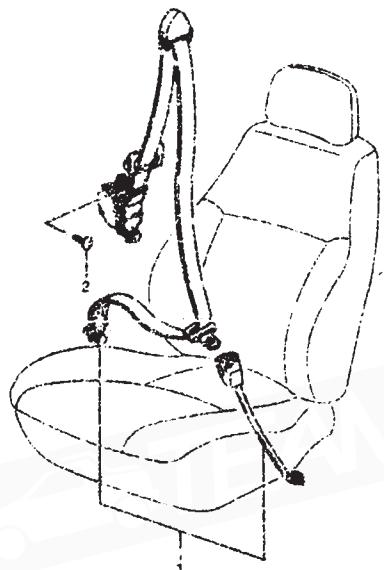


FIG.87 E24

BATTERY.....	F-6	FRONT BODY PANEL.....	J-2	FRONT SEAT.....	J-12	LOCK SET AND PADLOCK.....	F-13	REAR SUSPENSION.....	G-3	STEERING WHEEL.....	G-7
BRKE MASTER CYLINDER.....	H-2	FRONT BUMPER.....	J-8	FRONT SUSPENSION.....	G-2	PARKING BRAKE.....	H-6	REAR WHEEL BRAKE.....	H-5	STRIPED TAPE AND MUD FLAP.....	J-4
BRKE PIPING.....	J-3	FRONT DOOR GLASS.....	J-3	FRONT WHEEL BRAKE.....	H-4	PEDAL.....	G-10	ROAD WHEEL AND TIRE.....	G-4	SWITCH.....	F-12
CAB HEATER.....	J-13	FRONT DOOR LOCK.....	J-9	FRONT WINDOW.....	J-6	REAR AXLE.....	G-8	SEAT BELT.....	J-13	VENTILATOR.....	J-12
CLCK RAIL PIPE.....	J-5	FRONT DOOR PANEL.....	J-7	FUEL TANK.....	J-10	REAR BODY PANEL.....	J-5	SIDE BODY PANEL.....	J-7	WASHER.....	F-19
DISTRIBUTOR.....	J-9	FRONT FENDER.....	J-5	GENERATOR.....	F-3	REAR BUMPER.....	J-9	SPEEDOMETER.....	F-7	WIPER.....	F-14
FLOOR MAT.....	J-2	FRONT HOOD PANEL.....	J-3	INSTRUMENTS PANEL.....	J-11	REAR DATE LOCK.....	J-10	STARTING MOTOR.....	J-2	WIRING HARNESS.....	F-10
FRONT AXLES.....	G-5	FRONT LAMP.....	J-6	INTERIOR TRIM.....	J-3	REAR LAMP.....	F-9	STEERING LINK.....	G-8		